

Lumisky ROBY WHITE

Lumisky ROBY WHITE Wireless LED Table Lamp User Manual

Model: ROBY WHITE

[Instructions](#) [Maintenance](#) [Safety Instructions](#) [Troubleshooting](#) [Setup](#) [Operating](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

Thank you for choosing the Lumisky ROBY WHITE Wireless LED Table Lamp. This manual provides essential information for the safe and efficient use of your new lamp. Please read it thoroughly before use and retain it for future reference. The ROBY WHITE lamp is a versatile, portable LED lamp featuring a warm white, dimmable light. Its elegant design and long battery life make it suitable for both indoor and outdoor environments, such as terraces, living rooms, or as a bedside lamp.

SAFETY INSTRUCTIONS

- Read all instructions before using the lamp.
- Do not attempt to disassemble or modify the lamp. This will void the warranty and may cause damage or injury.
- Use only the provided USB Type-C cable for charging.
- Keep the lamp away from extreme temperatures, direct sunlight, and open flames.
- Although the lamp is splash-proof (IP54), do not immerse it in water.
- Ensure the charging port is dry before connecting the USB cable.
- This lamp contains a non-replaceable Lithium-ion battery. Do not dispose of the product in household waste; follow local regulations for battery recycling.
- Keep out of reach of children.

SETUP

Unpacking

Carefully remove the lamp and all accessories from the packaging. Ensure all components are present:

- Lumisky ROBY WHITE LED Table Lamp
- USB Type-C Charging Cable
- User Manual (this document)

Initial Charging

Before first use, fully charge the lamp. A full charge takes approximately 3 hours.

1. Locate the USB Type-C charging port on the lamp.
2. Connect the provided USB Type-C cable to the lamp's charging port.
3. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a powered USB port.
4. The charging indicator light (if present, usually red during charging, green when full) will illuminate.
5. Once fully charged, disconnect the cable.



Image: The ROBY WHITE lamp, highlighting its design and charging port location.

OPERATING INSTRUCTIONS

Power On/Off and Brightness Adjustment

The ROBY WHITE lamp features a touch-sensitive control for power and brightness adjustment.

- **To Turn On/Off:** Gently tap the touch sensor located on the top of the lamp.
- **To Adjust Brightness:** While the lamp is on, tap and hold the touch sensor. The brightness will cycle through its dimmable levels. Release your finger when the desired brightness is reached.



Image: Top view of the lamp, indicating the touch control area.

Battery Life

The lamp offers significant autonomy:

- Up to 50 hours at low intensity.
- Up to 4 hours at maximum intensity.

Recharge the lamp when the light dims significantly or turns off unexpectedly.

MAINTENANCE

Cleaning

- Ensure the lamp is turned off and disconnected from any charging source before cleaning.
- Wipe the lamp with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish.
- Dry thoroughly after cleaning.

Storage

When not in use for extended periods, store the lamp in a cool, dry place. It is recommended to charge the battery every 3-6 months to maintain its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Battery is depleted.	Charge the lamp fully using the provided USB Type-C cable.
Lamp does not charge.	Charging cable is not properly connected or is faulty. USB power adapter is not working.	Ensure the USB Type-C cable is securely connected to both the lamp and the power source. Try a different USB power adapter or port.

Problem	Possible Cause	Solution
Brightness adjustment is not working.	Incorrect operation.	Ensure you are tapping and holding the touch sensor to cycle through brightness levels.
Lamp flickers or turns off unexpectedly.	Low battery.	Recharge the lamp.

SPECIFICATIONS

Feature	Detail
Model	ROBY WHITE
Brand	Lumisky
Dimensions (L x W x H)	11.8 x 11.8 x 30 cm
Weight	600 grams
Material	Aluminum
Light Source	Integrated LED
Light Color	Warm White
Luminous Flux	200 Lumens
Wattage	4 Watts
Control Method	Touch (Dimmable)
Battery Type	1 Lithium-ion (included)
Charging Time	Approx. 3 hours (via USB Type-C)
Battery Life	Up to 50 hours (low intensity), 4 hours (max intensity)
Waterproof Rating	IP54 (Splash-proof)
Usage	Indoor and Outdoor
Included Components	Lamp, USB Type-C cable

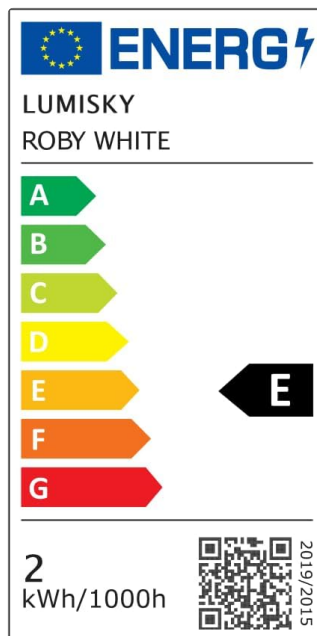


Image: Energy efficiency label for Lumisky ROBY WHITE. For more details, visit [EPREL Database](#).

WARRANTY & SUPPORT

Warranty Information

Lumisky products are manufactured with high-quality materials and craftsmanship. For specific warranty details, please refer to the warranty card included with your purchase or contact your retailer. The warranty typically covers manufacturing defects under normal use.

Please note: Damage caused by misuse, unauthorized modifications, or failure to follow instructions in this manual is not covered under warranty.

Customer Support

If you encounter any issues or have questions regarding your Lumisky ROBY WHITE lamp that are not addressed in this manual, please contact Lumisky customer support or your point of purchase for assistance.

For support, please visit the official Lumisky website or contact the retailer from whom you purchased the product.

© 2024 Lumisky. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question