

- › [Sharp](#) /
- › [Sharp 40-inch Full HD Smart LED Roku TV \(Model 2TC40EF4UR\) User Manual](#)

Sharp 2TC40EF4UR

Sharp 40-inch Full HD Smart LED Roku TV User Manual

Model: 2TC40EF4UR

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, maintenance, and troubleshooting of your Sharp 40-inch Full HD Smart LED Roku TV. Please read this manual thoroughly before using your television to ensure proper setup and functionality. Keep this manual for future reference.



Image: Front view of the Sharp 40-inch Full HD Smart LED Roku TV.

SETUP

1. Unboxing and Package Contents

Carefully remove all components from the packaging. Verify that all items listed below are present:

- Sharp 40-inch Full HD Smart LED Roku TV
- Remote Control (requires 2 AAA batteries, not included)
- Table Stand with Screws
- User Manual (this document)
- Warranty Information

2. Attaching the TV Stand

If you are placing the TV on a table or entertainment unit, you will need to attach the included stand. Place the TV screen-down on a soft, clean surface to prevent scratches. Align the stand legs with the mounting holes on the bottom of the TV and secure them using the provided screws.



Image: The Sharp Roku TV displayed on its table stand in a room.

3. Connecting External Devices

Your Sharp Roku TV offers various ports for connecting external devices such as cable boxes, gaming consoles, and USB drives.

- **HDMI Ports:** Connect high-definition devices using HDMI cables. This TV features 3 HDMI inputs.

- **USB Port:** Connect USB storage devices for media playback. This TV features 1 USB input.
- **Composite Video Input:** For older devices, use the composite video (AV) input.
- **Optical Audio Output:** For connecting to external sound systems.



Image: Rear panel of the TV illustrating the power connector and various input/output ports (HDMI, USB, Optical, AV).

4. Power Connection

Connect the power cord to the TV's power input and then plug it into a standard electrical outlet (120V AC, 60Hz).

5. Initial Setup and Network Connection

Upon first power-on, the TV will guide you through the initial setup process. This includes selecting your language, connecting to your Wi-Fi network, and activating your Roku account. A stable Wi-Fi connection is required to access smart TV features and streaming content.

OPERATING INSTRUCTIONS

1. Remote Control Functions

The included remote control uses infrared technology. Ensure there is a clear line of sight between the remote and the TV's IR receiver. Insert two AAA batteries into the remote control, observing polarity.

2. Roku OS Interface

Your TV operates on the Roku OS, providing a user-friendly interface for accessing streaming channels, live TV, and connected devices. The home screen displays your installed channels and input selections.



Image: The Roku TV home screen interface and a smartphone displaying the Roku mobile app remote control with voice search functionality.

3. Voice Control

The Sharp Roku TV supports voice control through compatible devices like Amazon Alexa or Google Assistant. You can use voice commands to search for movies, change channels, switch inputs, and more.

4. Streaming and Apps

Access a wide variety of streaming services and applications through the Roku Channel Store. Many popular apps are pre-installed, and you can download additional ones to customize your viewing experience.

5. Dolby Audio

This television features Dolby Audio technology, which enhances sound quality for a more immersive listening experience. Ensure your audio settings are configured to utilize this feature for optimal performance.



Image: A television screen displaying a dramatic scene with the Dolby Audio logo prominently featured.

MAINTENANCE

1. Cleaning the TV Screen

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a screen-specific cleaning solution. Avoid using harsh chemicals, abrasives, or direct spraying onto the screen.

2. Cleaning the TV Casing

Wipe the TV casing with a soft, dry cloth. Do not use liquid cleaners directly on the casing.

3. Ventilation

Ensure that the ventilation openings on the back of the TV are not blocked. Proper airflow is essential to prevent overheating.

TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No Power	Check if the power cord is securely connected to both the TV and the electrical outlet. Ensure the outlet is functional.
No Picture, but Sound is Present	Verify the correct input source is selected. Check external device connections.
No Sound, but Picture is Present	Check the volume level and mute status. Ensure external audio systems are properly connected and powered on.
Remote Control Not Working	Replace the batteries in the remote control. Ensure no obstructions are between the remote and the TV.
Cannot Connect to Wi-Fi	Verify your Wi-Fi password. Restart your router and the TV. Ensure the TV is within range of your Wi-Fi network.
Smart Features Not Responding	Check your internet connection. Restart the TV by unplugging it for 30 seconds and plugging it back in.

SPECIFICATIONS

Feature	Detail
Model Number	2TC40EF4UR
Screen Size	40 inches (102 cm visible diagonal)
Display Technology	LED
Resolution	Full HD (1920 x 1080)
Refresh Rate	60 Hz
Operating System	Roku OS
RAM	512 MB
Audio Output Power	16 Watts (2.0 Dolby)
HDMI Ports	3
USB Ports	1
Connectivity	HDMI, USB, Wi-Fi, Composite Video
Voice Control Compatibility	Amazon Alexa, Google Assistant

Feature	Detail
Power Consumption (On Mode)	65 Watts
Voltage	120 Volts (AC)
Dimensions (with stand)	99 cm (W) x 12 cm (D) x 57 cm (H)
Weight	5.7 kg
Remote Control Technology	Infrared
Bluetooth Support	No



Image: The Sharp Roku TV with its width, depth, and height dimensions indicated.

WARRANTY AND SUPPORT

Warranty Information

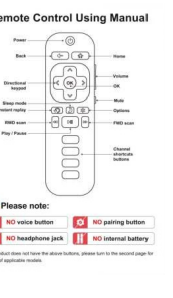 
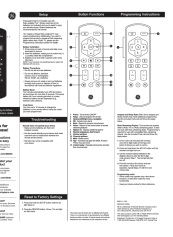 

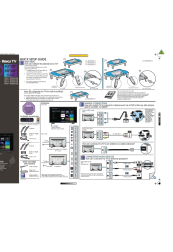 
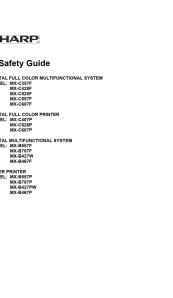 
Your Sharp 40-inch Full HD Smart LED Roku TV comes with a manufacturer's warranty. Please refer to the warranty document included in your product packaging for detailed terms, conditions, and registration information. Keep your proof of purchase for warranty claims.

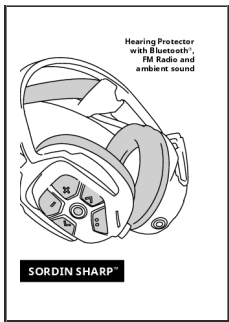 
Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Sharp customer support. Contact information can typically be found on the Sharp official website or in your warranty documentation.

© 2025 Sharp Corporation. All rights reserved.

Related Documents - 2TC40EF4UR

 <p>Remote Control Using Manual</p> <p>Please note:</p> <ul style="list-style-type: none"> NO voice button NO pairing button NO headphone jack NO internal battery 	<p>Roku TV Remote Control User Manual</p> <p>This manual provides instructions and compatibility information for a Roku TV remote control, detailing its functions, buttons, and supported TV models. It also lists incompatible Roku devices.</p>
 <p>GE Roku TV Replacement Remote User Manual - Model 66814</p>	<p>User manual for the GE Roku TV Replacement Remote (Model 66814). Includes setup, button functions, programming instructions for Roku TVs and streaming players, troubleshooting, and factory reset. Features compatibility with Insignia and Sharp Roku TVs.</p>
 <p>SHARP • Roku TV</p> <p>LC-43LB371U / LC-50LB371U</p> <p>USER GUIDE</p>	<p>Sharp Roku TV User Guide: LC-43LB371U/LC-50LB371U Setup and Operation</p> <p>Comprehensive user guide for the Sharp Roku TV models LC-43LB371U and LC-50LB371U. Learn setup, connectivity, smart features, and troubleshooting for your 1080p LED TV.</p>
 <p>SHARP • Roku TV</p> <p>LC-43LBU591U / LC-50LBU591U / LC-55LBU591U / LC-65LBU591U</p> <p>QUICK SETUP GUIDE</p>	<p>Sharp Roku TV Quick Setup Guide: LC-43LBU591U, LC-50LBU591U, LC-55LBU591U, LC-65LBU591U</p> <p>A concise and accessible guide to setting up your Sharp Roku TV. Learn how to attach stands, prepare for wall mounting, connect devices, establish network connections, use the remote control and troubleshoot common issues for models LC-43LBU591U, LC-50LBU591U, LC-55LBU591U, and LC-65LBU591U.</p>
 <p>SHARP</p> <p>Safety Guide</p> <p>DIGITAL FULL COLOR MULTIFUNCTIONAL SYSTEM</p> <p>MX-C357F, MX-C428F, MX-C557F, MX-C607F, MX-C407P, MX-C528P, MX-C607P, MX-B557F, MX-B707F, MX-B427W, MX-B467F, MX-B557P, MX-B707P, MX-B427PW, MX-B467P</p>	<p>Sharp Safety Guide for Multifunctional Systems and Printers</p> <p>Essential safety guidelines and precautions for Sharp digital multifunctional systems and printers, including models like MX-C357F, MX-C428F, MX-C557F, MX-C607F, MX-C407P, MX-C528P, MX-C607P, MX-B557F, MX-B707F, MX-B427W, MX-B467F, MX-B557P, MX-B707P, MX-B427PW, MX-B467P. Covers electrical, laser, ozone safety, and compliance information.</p>



Hearing Protector with Bluetooth[®], FM Radio and ambient sound

SORDIN SHARP[®]

[Sordin Sharp Hearing Protector with Bluetooth, FM Radio & Ambient Sound - User Manual](#)

Comprehensive user manual and product description for the Sordin Sharp hearing protector, featuring Bluetooth, FM radio, ambient sound listening, and safety guidelines. Learn about features, operation, maintenance, and compliance.

Documents - Sharp – 2TC40EF4UR



SHARP

SHARP • Roku TV

40"
Full HD TV

2T-C40EF4UR

HDMI

Dolby Audio

Roku TV

Full HD TV

Dolby Audio

[pdf]

4T C40EF4UR spec SP Hoja de especificaciones Sharp Pantalla 40 Pulgadas Roku TV LED

2TC40EF4UR Amazon mx Electrónicos 91AABgdDB3L m media amazon images I |||

40 2T-C40EF4UR CODIGO UPC: 074000377530 Pantalla de inicio sencilla Accede a tu decodi cador de cable, satlite, antena de TV y canales de streaming favoritos, todo desde la pantalla de incio. Entretenimiento sinfn Transmite TV gratuita, noticias en vivo, deportes, pelculas y ms. Bsqueda rpida y ...

lang:es score:14 filesize: 811.6 K page_count: 2 document date: 2023-06-21