

[Manuals.plus](#) /

› [Sharper Image](#) /

› Sharper Image Window Fan with 3 Speeds, Reversible Exhaust Mode, Weather Resistant - User Manual

Sharper Image FA1-0200-06

Sharper Image Window Fan with 3 Speeds, Reversible Exhaust Mode, Weather Resistant - User Manual

Model: FA1-0200-06

INTRODUCTION

This manual provides comprehensive instructions for the proper setup, operation, and maintenance of your Sharper Image Window Fan. Designed to enhance air circulation and ventilation, this fan features three speed settings and a reversible exhaust mode for optimal comfort. Please read this manual thoroughly before use to ensure safe and efficient operation.

SETUP

The Sharper Image Window Fan is designed for easy installation in most single- or double-hung windows. It fits windows ranging from 26 inches to 38 inches wide and requires a minimum opening height of 8 inches. The fan is intended for horizontal installation only.

Unpacking and Components

Carefully remove all components from the packaging. Ensure you have the main fan unit and the included modular breeze blocks.

Installation Steps



- 1. Prepare the Window:** Open your window to the desired height. Ensure the window sill is clean and clear of obstructions. Note that window screen removal may be necessary depending on the depth of your window frame.
- 2. Position the Fan:** Place the main fan unit horizontally on the window sill. The fan should sit securely within the window frame.
- 3. Install Breeze Blocks (if needed):** If your window is wider than the fan unit, use the provided modular breeze blocks to fill the gaps on either side. These blocks help secure the fan and prevent air leakage. The blocks are designed to extend the fan's width to fit windows up to 38 inches.
- 4. Secure the Window:** Carefully lower the window sash until it rests firmly against the top of the fan unit, securing it in place.
- 5. Connect Power:** Plug the fan's power cord into a standard 120V electrical outlet.



AN INNOVATIVE MODULAR
BREEZE BLOCK SYSTEM



FITS WINDOWS
26" TO 38"

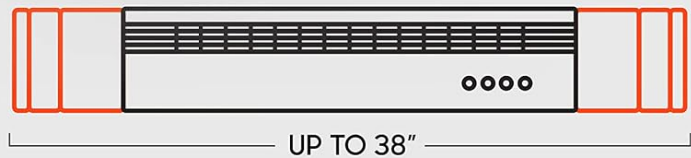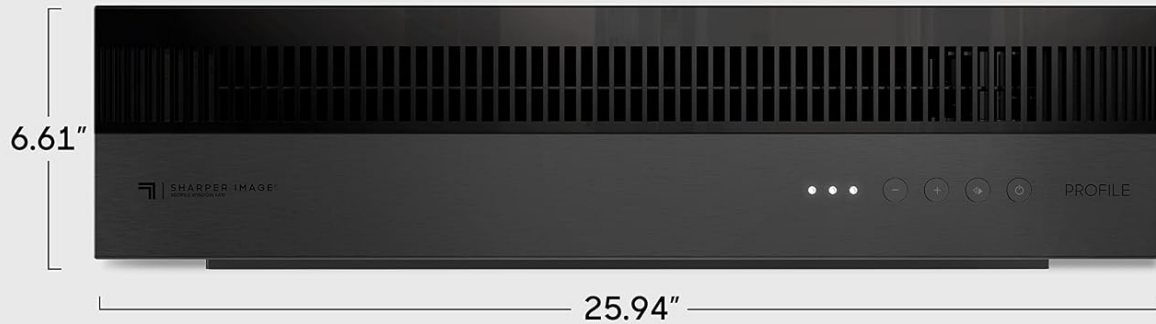

For horizontal installation only.

Figure 1: Product Dimensions and Breeze Block System. The fan measures 6.61" tall x 25.94" wide x 5.22" deep. The modular breeze blocks allow for fitting in windows up to 38" wide.



3 SPEED SETTINGS



ELECTRONICALLY
REVERSIBLE AIRFLOW



Figure 2: Fan Control Panel. This image highlights the intuitive controls for adjusting fan speed and airflow direction.

OPERATING INSTRUCTIONS

Your Sharper Image Window Fan features intuitive controls for easy operation.

Power On/Off

Press the **Power button** (*circle with vertical line*) located on the control panel to turn the fan on or off.

Adjusting Fan Speed

The fan has three adjustable speed settings. Press the **"+" button** to increase the fan speed and the **"-" button** to decrease it. Indicator lights on the control panel will illuminate to show the current speed setting.

Reversible Exhaust Mode

This fan offers a reversible airflow feature, allowing you to switch between intake (fresh air in) and exhaust (stale air out)

modes. Press the **Airflow Direction button** (*two arrows forming a circle*) to toggle between these modes. This is particularly useful for quickly ventilating a room or drawing in fresh outdoor air.

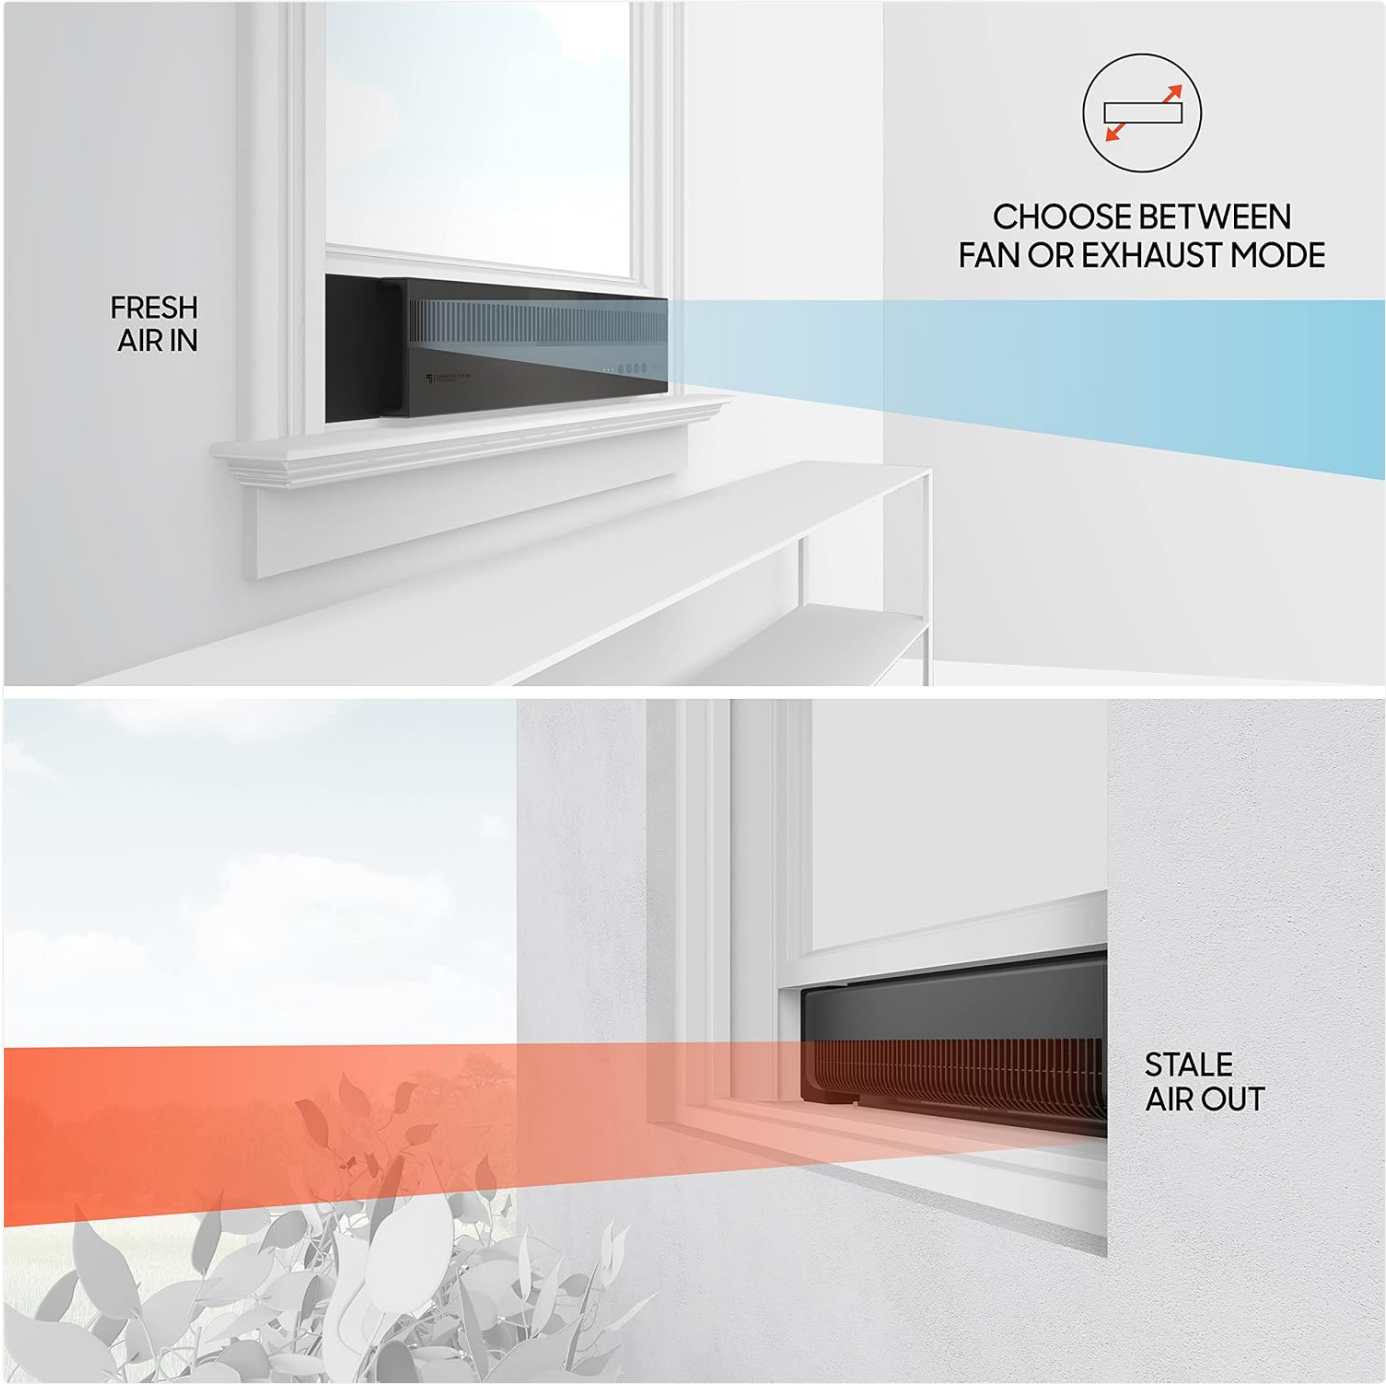


Figure 3: Reversible Airflow Function. The fan can be set to draw fresh air into the room or exhaust stale air out, providing versatile ventilation.



Figure 4: Detailed View of Control Panel. This image provides a clear view of the touch controls for fan operation.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your window fan.

Cleaning

- Always unplug the fan from the power outlet before cleaning.
- Use a soft, damp cloth to wipe down the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- Periodically clean the fan blades and grilles to remove dust and debris. A vacuum cleaner with a brush attachment can be used for this purpose.
- Ensure the fan is completely dry before plugging it back in.

Storage

When not in use, store the fan in a cool, dry place, preferably in its original packaging to protect it from dust and damage.

TROUBLESHOOTING

If you encounter any issues with your Sharper Image Window Fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Power button not pressed.	Ensure the fan is securely plugged into a working electrical outlet. Press the Power button firmly.
Weak airflow.	Fan speed set too low. Air intake/exhaust blocked. Dirty fan blades/grilles.	Increase the fan speed using the "+" button. Ensure nothing is obstructing the fan's intake or exhaust vents. Clean the fan blades and grilles as described in the Maintenance section.
Fan is noisy.	Fan not securely installed. Debris in fan blades.	Ensure the fan is securely seated in the window frame and the window sash is firmly closed against it. Unplug the fan and check for any foreign objects in the blades.

SPECIFICATIONS

Feature	Detail
Brand	Sharper Image
Model Name	PROFILE
Model Number	FA1-0200-06
Color	Black
Electric Fan Design	Window Fan
Power Source	Electric
Product Dimensions (DxWxH)	5.22"D x 25.94"W x 6.61"H
Window Compatibility	26" to 38" wide (horizontal installation only)
Special Feature	Reversible Exhaust Mode, Weather Resistant Case
Wattage	31 watts
Air Flow Capacity	127 Cubic Feet Per Minute
Number of Blades	7
Control Method	Touch (Push Button)
Item Weight	7 Pounds

Feature	Detail
Included Components	Fan, Owner's Guide

WARRANTY AND SUPPORT

This Sharper Image Window Fan comes with a**2-year manufacturer's warranty**.
For further assistance or to download a PDF version of the user manual, please refer to the official product support resources. A digital copy of the user guide is available [here](#) and the user manual [here](#).

© 2024 Sharper Image. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question