

JOYIN 15605

JOYIN Claw Machine Arcade Toy User Manual

MODEL: 15605

1. Introduction

This manual provides essential information for the safe and effective operation of your JOYIN Claw Machine Arcade Toy, Model 15605. Designed for children aged 3 and above, this mini vending machine offers an engaging play experience with its interactive claw mechanism, LED lights, and adjustable sound features. Please read these instructions thoroughly before first use and retain them for future reference.



Image: The JOYIN Claw Machine Arcade Toy in use, showing a child interacting with the controls.

2. Safety Information

- To ensure the claw machine operates correctly, do not exceed 30V USB cable voltage.
- Avoid using the USB power cable and batteries simultaneously.
- Do not insert items into the prize port while the machine is in operation.
- This product contains small parts and is not suitable for children under 3 years of age due to choking

hazards.

3. What's in the Box

Your JOYIN Claw Machine Arcade Toy package includes the following components:

- 1 x Claw Machine
- 1 x USB Charging Cable

Note: Balls, plush toys, and 3 'D' batteries are not included and must be purchased separately.



Image: A child opening the JOYIN Claw Machine box, showing the machine and included USB cable.

4. Setup

1. **Unpacking:** Carefully remove the claw machine and all accessories from its packaging. No assembly is required.
2. **Power Options:** Your claw machine can be powered in two ways:
 - **USB Power:** Connect the provided USB charging cable to the machine and a compatible USB power source (e.g., wall adapter, computer USB port) for continuous play.

- **Battery Power:** For portable use, insert 3 'D' batteries (not included) into the battery compartment located on the back of the machine. Ensure correct polarity.



Image: A close-up of the back of the claw machine, highlighting the battery compartment and the USB power input.

3. **Loading Prizes:** Open the access hole at the back of the machine to load your desired small prizes. This can include mini toys, candies, snacks, or Easter eggs. Ensure prizes are small enough for the claw to grasp and fit through the prize chute.



Image: The underside of the claw machine, revealing a compartment for storing coins and the USB cable.

5. Operating Instructions

- 1. Insert Coin:** Insert one of the provided tokens (or a similar-sized coin) into the coin slot on the front panel. This activates the game.
- 2. Control the Claw:** Use the three joysticks to maneuver the claw:
 - The blue joystick controls forward and backward movement.
 - The yellow joystick controls left and right movement.
 - The red joystick controls the claw's descent and ascent. Push down to lower the claw and attempt to grab a prize. The claw will automatically close when it reaches the bottom.
- 3. Retrieve Prize:** If the claw successfully grabs a prize, it will automatically return to the prize chute and release the item. Collect your prize from the designated opening.
- 4. Adjust Volume:** The machine features a built-in volume control. Locate the volume switch on the back of the unit to adjust the sound level or turn it off completely.
- 5. LED Lights:** The machine is equipped with vibrant LED lights that illuminate during play, enhancing the arcade experience.

COINS & CABLE STORED BELOW



Image: A detailed view of the control panel, showing the coin slot and the three colored joysticks for claw manipulation.



Image: The rear panel of the claw machine, illustrating the volume control switch and the USB/battery power options.

Video: A demonstration of the JOYIN Claw Machine's operation, showing how to use the joysticks to control the claw and retrieve prizes.

6. Maintenance

- **Cleaning:** Wipe the exterior of the machine with a soft, dry cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** Store the claw machine in a cool, dry place away from direct sunlight when not in use. If storing for an extended period, remove batteries to prevent leakage.

7. Troubleshooting

Problem	Possible Cause	Solution
Claw does not move or respond to controls.	No power, low batteries, or internal malfunction.	Ensure the machine is properly connected via USB or has fresh 'D' batteries. If the issue persists, contact customer support.

Problem	Possible Cause	Solution
Claw is too weak to pick up prizes.	Prizes are too heavy or oddly shaped.	Use lighter or smaller prizes. For candies, consider placing them inside small, lightweight plastic eggs to make them easier to grab.
Music/sound is too loud or annoying.	Volume setting is too high.	Adjust the volume control switch on the back of the machine to a lower setting or turn it off completely.

8. Specifications

Feature	Detail
Brand	JOYIN
Model Number	15605
Material	Plastic
Item Dimensions (L x W x H)	13.78 x 10.04 x 7.48 inches
Item Weight	1.75 Kilograms
Power Source	Battery Powered (3 'D' batteries, not included) or USB Powered
Supported Battery Types	Lithium-Ion or Lithium batteries (for 'D' size)
Operation Mode	Automatic
Assembly Required	No
Age Range Description	Baby (Manufacturer Minimum Age: 36 months)
Educational Objective	Develop hand-eye coordination through active play and pretend play
Number of Players	1

THE ULTIMATE CLAW MACHINE ARCADE



**Better Design &
Gift Choice**

Built-in Volume Control

**USB or Battery
Powered Play**

**Easy Load &
Unload Access Design**

**Larger Size :
15.5 X 10.2 X 8 Inch**



Image: The claw machine displaying its key features including built-in volume control, USB or battery power, easy load access, and product dimensions.

9. Warranty and Support

For warranty information, technical support, or any inquiries regarding your JOYIN Claw Machine Arcade Toy, please refer to the contact information provided on the product packaging or visit the official JOYIN website. Keep your purchase receipt as proof of purchase.