Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- UrbanX /
- > UrbanX UX030 Lightweight Wireless Keyboard and Mouse User Manual

UrbanX UX030

UrbanX UX030 Lightweight Wireless Keyboard and Mouse User Manual

Model: UX030

1. Introduction

This manual provides detailed instructions for the UrbanX UX030 Lightweight Wireless Keyboard and Mouse. This combo offers multi-device connectivity via Bluetooth 5.1 and 2.4GHz, featuring a slim design, rechargeable batteries, and customizable RGB backlighting. Please read this manual thoroughly before use to ensure proper operation and to maximize your product experience.



Image 1: UrbanX UX030 Wireless Keyboard and Mouse Combo. The image displays the black wireless keyboard with green RGB backlighting and the black wireless mouse with a rainbow RGB light strip.

2. PACKAGE CONTENTS

- UrbanX UX030 Wireless Keyboard
- UrbanX Wireless Mouse
- USB Receiver (for 2.4GHz connection)
- USB Charging Cable
- User Manual (this document)

3. SETUP

3.1 Charging the Devices

Before initial use, fully charge both the keyboard and mouse. Connect the provided USB charging cable to the Micro USB port on each device and to a power source (e.g., computer USB port, USB wall adapter). The charging indicator light will illuminate during charging and turn off when fully charged.



Image 2: UrbanX UX030 Keyboard charging via Micro USB cable. The image shows the Micro USB port on the keyboard with a charging cable connected, and an icon indicating a built-in rechargeable battery.



Image 3: UrbanX Wireless Mouse charging port. The image shows the front of the mouse with a Micro USB charging port.

3.2 Connecting the Keyboard

The keyboard supports both Bluetooth 5.1 and 2.4GHz wireless connections.

2.4GHz Wireless Connection:

- 1. Locate the USB receiver, usually stored in the mouse or keyboard compartment.
- 2. Plug the USB receiver into an available USB port on your computer or device.
- 3. Turn on the keyboard using the ON/OFF switch. The keyboard should automatically connect.

Bluetooth 5.1 Connection:

- 1. Turn on the keyboard using the ON/OFF switch.
- 2. Press the **Fn** key simultaneously with one of the Bluetooth keys **(Bluetooth 1, Bluetooth 2**, or **Bluetooth 3**) to select a Bluetooth channel. The indicator light for the selected channel will blink.
- 3. On your device (computer, tablet, smartphone), enable Bluetooth and search for new devices.
- 4. Select "UrbanX Keyboard" from the list of available devices to pair.
- 5. Repeat for up to three different devices using the other Bluetooth channels.

3.3 Connecting the Mouse

The mouse supports both Bluetooth 5.0 and 2.4GHz wireless connections.

2.4GHz Wireless Connection:

- 1. Ensure the USB receiver is plugged into your device.
- 2. Turn on the mouse using the ON/OFF switch. The mouse should automatically connect.

Bluetooth 5.0 Connection:

- 1. Turn on the mouse using the ON/OFF switch.
- 2. Press the Bluetooth pairing button on the mouse (usually on the bottom or side) until the indicator light blinks.
- 3. On your device, enable Bluetooth and search for new devices.
- 4. Select "UrbanX Mouse" from the list of available devices to pair.

3.4 Operating System Compatibility

The keyboard and mouse are compatible with a wide range of operating systems, including Windows 7/8/10/XP/Vista, iPad, Mac OS, Android, and iOS. The keyboard automatically recognizes your device's system and maps keys accordingly.



Image 4: UrbanX UX030 Keyboard showing compatibility with Android, Windows, and iOS operating systems. The image highlights specific keys for OS switching.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **Keyboard:** Use the ON/OFF switch located on the top right side of the keyboard.
- Mouse: Use the ON/OFF switch located on the bottom of the mouse.

4.2 Switching Between Connected Devices (Keyboard)

To switch between devices connected via Bluetooth, pressFn + Bluetooth 1, Fn + Bluetooth 2, or Fn + Bluetooth 3. The keyboard will connect to the previously paired device on that channel.

4.3 Shortcut Keys (Keyboard)

The keyboard features 12 shortcut keys for media control and other functions. These are typically accessed by pressing the **Fn** key in combination with the corresponding function key (F1-F12).

- Fn + F1-F12: Access various functions such as media playback control, volume adjustment, and more. Refer to the key legends for specific functions.
- Fn Lock: Use the Fn Lock feature to toggle between standard F-key functions and multimedia functions

without holding the Fn key.

4.4 Adjusting RGB Backlight (Keyboard)

The keyboard features customizable RGB backlighting. Use the dedicated backlight key (often marked with a light bulb icon) to cycle through different colors and brightness levels. Some models may require pressing **Fn** + backlight key.

4.5 Mouse DPI Adjustment

The mouse offers adjustable DPI settings (800-1200-1600) for precise cursor control. Press the DPI button (usually located near the scroll wheel) to cycle through the sensitivity levels.



Image 5: UrbanX Wireless Mouse highlighting its features: LED lighting, Bluetooth 5.0, 2.4G wireless, and rechargeable battery.

5. MAINTENANCE

5.1 Cleaning

To clean your keyboard and mouse, power them off first. Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution. Avoid using harsh chemicals or abrasive materials. Do not immerse the devices in liquid.

5.2 Battery Care

- Recharge the devices when the battery indicator is low.
- Avoid fully discharging the battery frequently to prolong its lifespan.
- If not in use for an extended period, charge the devices every 3-6 months to prevent deep discharge.
- The devices feature an energy-saving mode that puts them to sleep after 30 minutes of inactivity to conserve battery. Press any key or move the mouse to wake them up.

6. TROUBLESHOOTING

6.1 Device Not Connecting

- Ensure both the keyboard and mouse are powered on and fully charged.
- For 2.4GHz connection, verify the USB receiver is securely plugged into your device.
- For Bluetooth connection, ensure Bluetooth is enabled on your host device and the devices are in pairing mode. Try re-pairing the devices.
- Move the devices closer to your computer to rule out range issues.
- Try connecting to a different USB port or a different device to isolate the problem.

6.2 Keyboard/Mouse Not Responding

- · Check battery levels and recharge if necessary.
- Turn the devices off and on again.
- If using Bluetooth, try switching to a different Bluetooth channel or re-pairing.
- If using 2.4GHz, try unplugging and replugging the USB receiver.

6.3 Backlight Not Working (Keyboard)

- Ensure the keyboard is sufficiently charged. Low battery may disable backlighting.
- Press the backlight key (or Fn + backlight key) to turn it on or adjust brightness.

7. SPECIFICATIONS

Feature	Detail
Model Number	UX030-RGB
Brand	UrbanX
Connectivity Technology	Bluetooth 5.1 (Keyboard), Bluetooth 5.0 (Mouse), 2.4GHz Wireless
Compatible Devices	Wiko Power U30, Mobile Phone, Tablet, Laptop, Smartphone, Windows, iOS, Mac OS, Android
Keyboard Layout	US English
Keyboard Dimensions	1.3 x 5.47 x 15.16 inches (approx. 3.3 x 13.9 x 38.5 cm)
Keyboard Weight	10 ounces (approx. 283 grams)
Battery Type	Built-in Rechargeable

Mouse DPI Settings	800-1200-1600 DPI
Keyboard Key Lifespan	3,000,000 key pushes

Light. Slim . Portable

24.7cm/9.72in



Image 6: UrbanX UX030 Keyboard dimensions. The image shows the keyboard with measurements indicating its length (24.7cm / 9.72in), width (15cm / 6in), and thickness (0.5cm / 0.2in).

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or contact UrbanX customer service directly. Keep your purchase receipt for warranty claims.

© 2023 UrbanX. All rights reserved.

Related Documents - UX030



Digital Indoor TV Antenna User Guide

This guide provides instructions for setting up and optimizing a digital indoor TV antenna for the best reception. It covers antenna placement, connection, and channel scanning, along with tips for improving signal quality.