

KENSEN FK-609

KENSEN Electric Shaver FK-609 User Manual

Model: FK-609

INTRODUCTION

Thank you for choosing the KENSEN Electric Shaver FK-609. This manual provides essential information for the safe and effective use, maintenance, and care of your new electric shaver. Please read these instructions thoroughly before first use and keep them for future reference.

IMPORTANT SAFETY INFORMATION

- Do not immerse the charging adapter in water or other liquids.
- Keep the appliance away from children.
- Ensure the charging port is dry before connecting the USB cable.
- Do not use if the shaver head or blades are damaged, as this may cause injury.
- This appliance is designed for shaving facial hair only. Do not use it for other purposes.
- Always unplug the shaver before cleaning under running water.

PRODUCT OVERVIEW

The KENSEN FK-609 is a cordless, wet and dry electric shaver designed for men. It features a 3D floating blade head, two adjustable speeds, a pop-up trimmer, and is IPX6 waterproof for easy cleaning.



3D Floating Blade Head

Follows Facial Movements,
Shaving Clean Without
Dead Angles.



Image: The KENSEN FK-609 Electric Shaver in use, highlighting its 3D floating blade head that adapts to facial contours for a close shave.

Double-roller Three Blade Head and Bionic Knife Network Design

Shaving without Hurting the Skin



**Bionic
Mesh Blade**

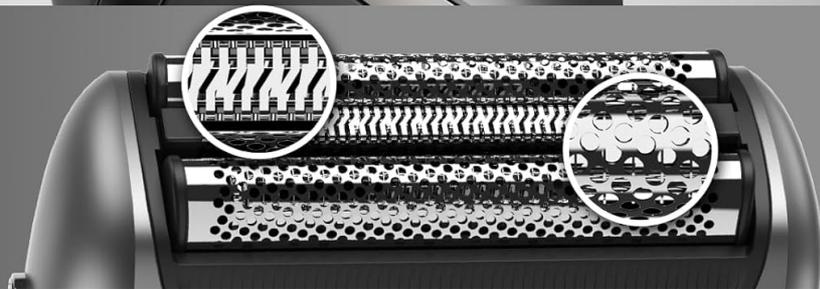


Image: A detailed view of the shaver's double-roller three blade head and bionic knife network design, engineered for a smooth shave without skin irritation.

SETUP AND INITIAL USE

Charging the Shaver

1. Before first use, fully charge the shaver.
2. Ensure the shaver is turned off and the charging port is dry.
3. Connect the provided USB charging cable to the shaver's charging port.
4. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port.
5. The display will indicate the charging status. A full charge provides approximately 90 minutes of cordless shaving time.



Image: The KENSEN FK-609 Electric Shaver being charged via its USB-C port, illustrating the long-lasting battery life of 90 minutes per charge.

OPERATING INSTRUCTIONS

Turning On/Off

Press the power button located on the front of the shaver to turn it on or off.

Adjusting Shaving Speed

The shaver offers two adjustable speeds to suit your beard thickness and preference:

- **First Gear:** 7500 RPM for a gentle yet effective shave.
- **Second Gear:** 8600 RPM for a faster and more powerful shave, ideal for thicker beards.

Press the speed adjustment button (often integrated with the power button or a separate button) to switch between the two speeds. The current speed setting may be indicated on the shaver's display.



Image: The KENSEN FK-609 Electric Shaver demonstrating its two adjustable speed settings (7500 RPM and 8600 RPM) to cater to different shaving needs and beard types.

Wet and Dry Shaving

The KENSEN FK-609 is designed for both wet and dry shaving:

- **Dry Shave:** For a quick and convenient shave, use the shaver on dry skin.
- **Wet Shave:** For a more comfortable and smoother shave, use with shaving gel or foam, even in the shower.

The shaver's IPX6 waterproof rating ensures safe operation in wet conditions.

Using the Pop-up Trimmer

The integrated pop-up trimmer is ideal for precise trimming of sideburns, mustaches, or for pre-trimming longer beards before a close shave.

1. Locate the trimmer release button (usually on the back or side of the shaver).
2. Slide or press the button to extend the pop-up trimmer.
3. Turn on the shaver and carefully trim the desired areas.
4. After use, push the trimmer back into its housing until it clicks into place.

Tip: If you have a long beard, use the pop-up trimmer to reduce the length to 1-2 mm before using the main shaver head for a closer result.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your shaver.

Cleaning the Shaver Head

1. Turn off the shaver and unplug it from any charging source.
2. Open the shaver head assembly (refer to diagrams in the full manual if available, usually by pressing a release button).
3. Rinse the shaver head and the internal hair chamber under warm running water. The IPX6 waterproof rating allows for easy cleaning.
4. Gently shake off excess water and allow the components to air dry completely before reassembling or storing.
5. For a more thorough cleaning, use the small cleaning brush (if included) to remove stubborn hair particles from the blades and foils.



Image: The KENSEN FK-609 Electric Shaver submerged in water, illustrating its IPX6 waterproof capability for easy

cleaning under running water.

General Care

- Store the shaver in a dry place, away from direct sunlight and extreme temperatures.
- Do not use abrasive cleaning agents or solvents on the shaver body.
- Replace the shaver head and blades approximately every 12 months, or sooner if you notice reduced performance or discomfort.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver fully.
Shaver does not charge.	USB cable or adapter faulty; charging port wet.	Ensure charging port is dry. Try a different USB cable or power adapter.
Poor shaving performance / pulling hair.	Shaver head is dirty; blades are dull; beard is too long.	Clean the shaver head thoroughly. Use the pop-up trimmer for long beards. Consider replacing the shaver head/blades.
Skin irritation after shaving.	Sensitive skin; improper shaving technique; dull blades.	Try a wet shave with gel/foam. Shave in the direction of hair growth. Ensure blades are clean and sharp.

SPECIFICATIONS

- **Model Number:** FK-609
- **Brand:** KENSEN
- **Power Source:** Battery Powered (Rechargeable)
- **Battery Life:** Approximately 90 minutes (after full charge)
- **Charging:** USB (Type-C)
- **Waterproof Rating:** IPX6 (Whole body waterproof)
- **Shaving Speeds:** 2 (7500 RPM, 8600 RPM)
- **Blade Type:** Double-roller Three Blade Head, Foil Type
- **Special Features:** 3D Floating Blade Head, Pop-up Trimmer, Long-lasting Battery, Skin Protection
- **Dimensions:** 15 x 6 x 3 cm
- **Weight:** 300 grams
- **Color:** Grey



Image: An illustration of the KENSEN FK-609 Electric Shaver's high-frequency motor, capable of 7500-8600 RPM for efficient and fast shaving.

WARRANTY INFORMATION

The KENSEN Electric Shaver FK-609 comes with a **one-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear of consumable parts like blades and foils. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your KENSEN Electric Shaver FK-609, please contact our customer support team. Refer to the product packaging or the retailer's website for specific contact details.

For more information, visit the official KENSEN website.

