

[Manuals.plus](#) /

› [EagleStone](#) /

› EagleStone Moveable Triceratops Dinosaur Shooting Toy Manual (Model 8808-10B)

EagleStone 8808-10B

EagleStone Moveable Triceratops Dinosaur Shooting Toy

Model: 8808-10B

Brand: EagleStone

INTRODUCTION

This manual provides essential information for the safe and effective use of your EagleStone Moveable Triceratops Dinosaur Shooting Toy. This interactive game is designed to enhance hand-eye coordination and provide engaging play for children. Please read all instructions carefully before assembly and operation.

SAFETY INFORMATION

- **Adult Supervision:** Always ensure adult supervision during play to prevent misuse and ensure safety.
- **Foam Balls Only:** Use only the provided EVA foam balls with the air pump guns. Do not use other projectiles.
- **Eye Protection:** Although foam balls are soft, it is recommended to wear eye protection (goggles) during play to prevent accidental eye injury.
- **Targeting:** Do not aim the guns at people or animals. Always aim at the dinosaur target.
- **Small Parts:** This toy contains small parts and is not suitable for children under 3 years old due to choking hazards.
- **Battery Safety:** Ensure batteries are installed correctly and dispose of used batteries responsibly. Do not mix old and new batteries or different types of batteries.

WHAT'S IN THE BOX

Verify that all components are present before beginning assembly or play:

- 1 x Moveable Triceratops Dinosaur Target with LCD Score Record
- 2 x Air Pump Guns
- 48 x EVA Foam Balls (24 blue, 24 green)
- 1 x Goggles (for eye protection)



**Visual
Development**



**Parent-Child
Interaction**



**Hand-Eye
Coordination**



**Parent-Child
Interaction**

Image: All components included in the EagleStone Dinosaur Shooting Toy package, featuring the blue triceratops target, two pump guns, foam balls in blue and green, and safety goggles.

SETUP

1. Battery Installation (Dinosaur Target)

1. Locate the battery compartment on the underside of the dinosaur target.
2. Open the battery compartment cover using a screwdriver (not included).
3. Insert 3 x AA batteries (not included) according to the polarity indicators (+/-).
4. Replace the battery compartment cover and secure it with the screw.

2. Loading Foam Balls into Air Pump Guns

1. Insert the EVA foam balls into the muzzle of the air pump gun. The transparent barrel allows you to see the loaded balls.
2. Ensure balls are loaded smoothly without forcing them.

COOL AIR PUMP GUN

360° Rotating Butt and 33ft Shooting Range



Load Balls into Muzzle



Pull the Butt to Push The Air



Push The Butt Then Shoot

Image: A visual guide demonstrating how to load foam balls into the gun's muzzle, pull back the butt to push air, and then push forward to shoot.

3. Preparing the Dinosaur Target

1. Place the dinosaur target on a flat, clear surface.
2. If you wish for the dinosaur to remain stationary, ensure the wheel cover on the bottom is in place. To enable movement, remove the wheel cover.

OPERATING INSTRUCTIONS

1. Powering On and Mode Selection

1. Locate the power switch on the underside of the dinosaur target and slide it to the 'ON' position.
2. Press the 'M' (Mode) button on the base of the dinosaur to switch between modes:
 - **Static Mode:** The dinosaur remains stationary, providing a fixed target.
 - **Action Mode:** The dinosaur moves using its omnidirectional wheels, automatically avoiding obstacles, making the game more challenging.

TWO MODES



Mobile Mode



Static Mode



Tu On/Off



universal wheel



Realistic dinosaur voice

Image: The dinosaur target illustrating its two operational modes: Static Mode (stationary) and Mobile Mode (moving with obstacle avoidance).

2. Shooting the Air Pump Guns

1. Hold the air pump gun firmly.
2. Pull the butt of the gun backward to draw air into the chamber.
3. Push the butt forward quickly to launch the foam ball towards the dinosaur target.

3. Scoring and Sound Effects

- The dinosaur target features a digital LCD display that records your score.
- Each time a foam ball successfully hits the dinosaur's tongue, it will emit a sound and add 1 point to the display.
- The dinosaur may also emit realistic dinosaur sounds during play.

DIGITAL LCD RECORDS SCORE

Score will be Recorded When You Hit The Tongue of The Dinosaur



Image: Close-up of the dinosaur target's base, showing the digital LCD display recording a score of '05' after a successful hit.

4. Automatic Obstacle Avoidance (Action Mode)

- In Action Mode, the dinosaur target utilizes smart omnidirectional wheels to move around the play area.
- It is designed to detect and avoid obstacles, providing a dynamic and unpredictable target.

SMART MOVING MODE

Automatic Obstacle Avoidance with Universal Wheel Moving



Image: A child and adult playing with the dinosaur target in a living room, showcasing its smart moving mode as it navigates the floor.

5. Collecting Foam Balls

- Foam balls that hit the dinosaur's mouth are collected inside its belly.
- To retrieve the collected balls, open the small cap located on the dinosaur's tail.

Your browser does not support the video tag.

Video: This video demonstrates the moving capabilities of the dinosaur target, showcasing its dynamic movement and obstacle avoidance during gameplay.

MAINTENANCE

- **Cleaning:** Wipe the dinosaur target and guns with a soft, dry cloth. Do not immerse in water.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use.
- **Battery Replacement:** Replace batteries in the dinosaur target when the lights dim or sounds become distorted, or if movement becomes sluggish.

TROUBLESHOOTING

- **Dinosaur Not Moving:**

- Ensure the power switch is ON.
- Check if the wheel cover on the bottom is removed for Action Mode.
- Verify batteries are correctly installed and not depleted.

- **Guns Not Firing Foam Balls:**

- Ensure foam balls are properly loaded into the muzzle.
- Confirm the butt of the gun is pulled back fully and pushed forward with sufficient force.

- **LCD Score Not Updating:**

- Ensure foam balls are hitting the dinosaur's tongue directly.
- Check dinosaur batteries.

SPECIFICATIONS

Feature	Detail
Model Number	8808-10B
Brand	EagleStone
Material Type	EVA Foam (balls), ABS (guns)
Item Dimensions	10 x 7 x 6 inches
Item Weight	1.7 Pounds
Power Source	3 x AA Batteries (Dinosaur Target)
Operation Modes	Static Mode, Action Mode (with obstacle avoidance)
Included Components	Dinosaur Target, 2 Air Pump Guns, 48 EVA Foam Balls, Goggles
Educational Objective	Hand-Eye Coordination

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official EagleStone website. Keep your purchase receipt for any warranty claims.