

[Manuals.plus](#) /

› [Paladone](#) /

› Harry Potter Digital Alarm Clock - Official Instruction Manual

Paladone 11773

Harry Potter Digital Alarm Clock

Model: 11773

Brand: Paladone

INTRODUCTION

This instruction manual provides essential information for the setup, operation, and maintenance of your new Harry Potter Digital Alarm Clock. Designed for fans of the Wizarding World, this alarm clock features a clear digital display, a mood light, and a night light function, making it a magical and practical addition to any room.





Figure 1: The Harry Potter Digital Alarm Clock, featuring a detailed Harry Potter character figure atop a black digital clock base.

SETUP

1. Battery Installation

The alarm clock requires 3x AA batteries for operation (not included). To install the batteries:

1. Locate the battery compartment on the underside of the alarm clock.
2. Open the battery compartment cover.
3. Insert 3x AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

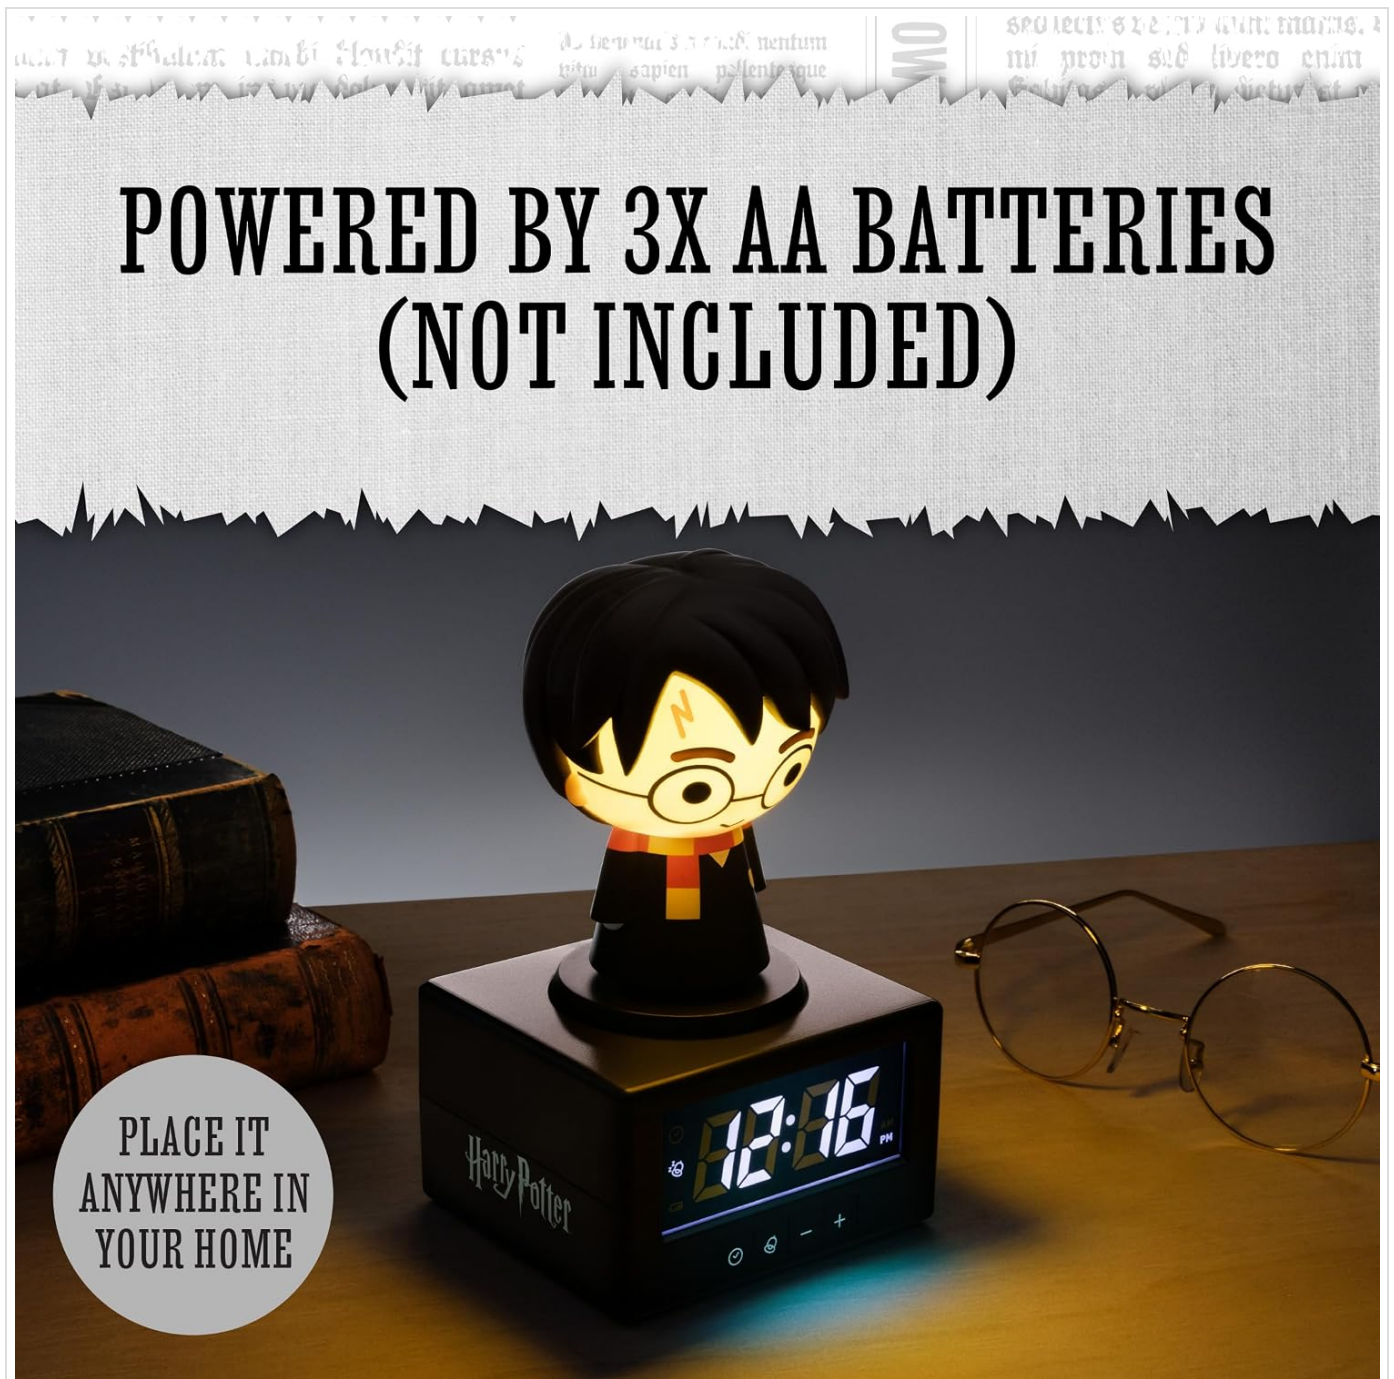


Figure 2: The alarm clock is powered by 3x AA batteries, allowing flexible placement anywhere in your home.

2. Setting the Time

Upon battery installation, the digital display will activate. Refer to the buttons on the front panel for time adjustment:

- Press the **MODE** button (often indicated by a clock icon) to enter time setting mode.
- Use the **+** and **-** buttons to adjust the hours and minutes.
- Press **MODE** again to confirm and exit time setting.

OPERATING INSTRUCTIONS

Time Display

The current time is continuously displayed on the digital screen. The display is designed for easy readability.



Figure 3: The alarm clock serves as a functional and decorative item, ready to help you wake up for your day.

Alarm Function

To set the alarm:

1. Press the **ALARM** button (often indicated by an alarm icon) to enter alarm setting mode.
2. Use the **+** and **-** buttons to set your desired alarm time.
3. Press **ALARM** again to confirm and activate the alarm. An alarm icon will appear on the display.

Night Light and Snooze Function

The Harry Potter figure on top of the clock serves as both the night light activator and the snooze button:

- To activate the night light, gently press down on the Harry Potter figure. The figure will illuminate, providing a soft glow.
- When the alarm sounds, tap the head of the Harry Potter figure to activate the snooze function. The alarm will temporarily stop and sound again after a short interval (typically 5-10 minutes).
- To turn off the alarm completely, press any other button on the clock base or allow the snooze cycles to complete.

PRESS HARRY DOWN TO ACTIVATE THE NIGHT LIGHT AND TAP HIS HEAD TO SNOOZE THE ALARM



Figure 4: Interact with the Harry Potter figure to control the night light and snooze the alarm.

MAINTENANCE

Cleaning

To clean your alarm clock, gently wipe the surfaces with a soft, dry cloth. Do not use abrasive cleaners or immerse the unit in water.

Battery Replacement

When the display dims or the alarm function becomes unreliable, it is time to replace the batteries. Follow the battery installation steps outlined in the 'Setup' section.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is dim or blank.	Low or depleted batteries.	Replace with new 3x AA batteries.
Alarm does not sound.	Alarm not set or volume too low.	Ensure alarm is set and activated. Check for a volume control if available (not specified for this model).
Night light does not illuminate.	Batteries are low or figure not pressed correctly.	Replace batteries. Ensure a firm, direct press on the Harry Potter figure.

SPECIFICATIONS

- **Model Number:** 11773
- **Dimensions:** Approximately 10 cm (W) x 3.81 cm (D) x 9 cm (H) / 3.9 in (W) x 1.5 in (D) x 3.5 in (H)
- **Weight:** Approximately 322 grams (11.4 ounces)
- **Power Source:** 3x AA Batteries (not included)
- **Display Type:** Digital
- **Components Included:** 1x Digital Alarm Clock

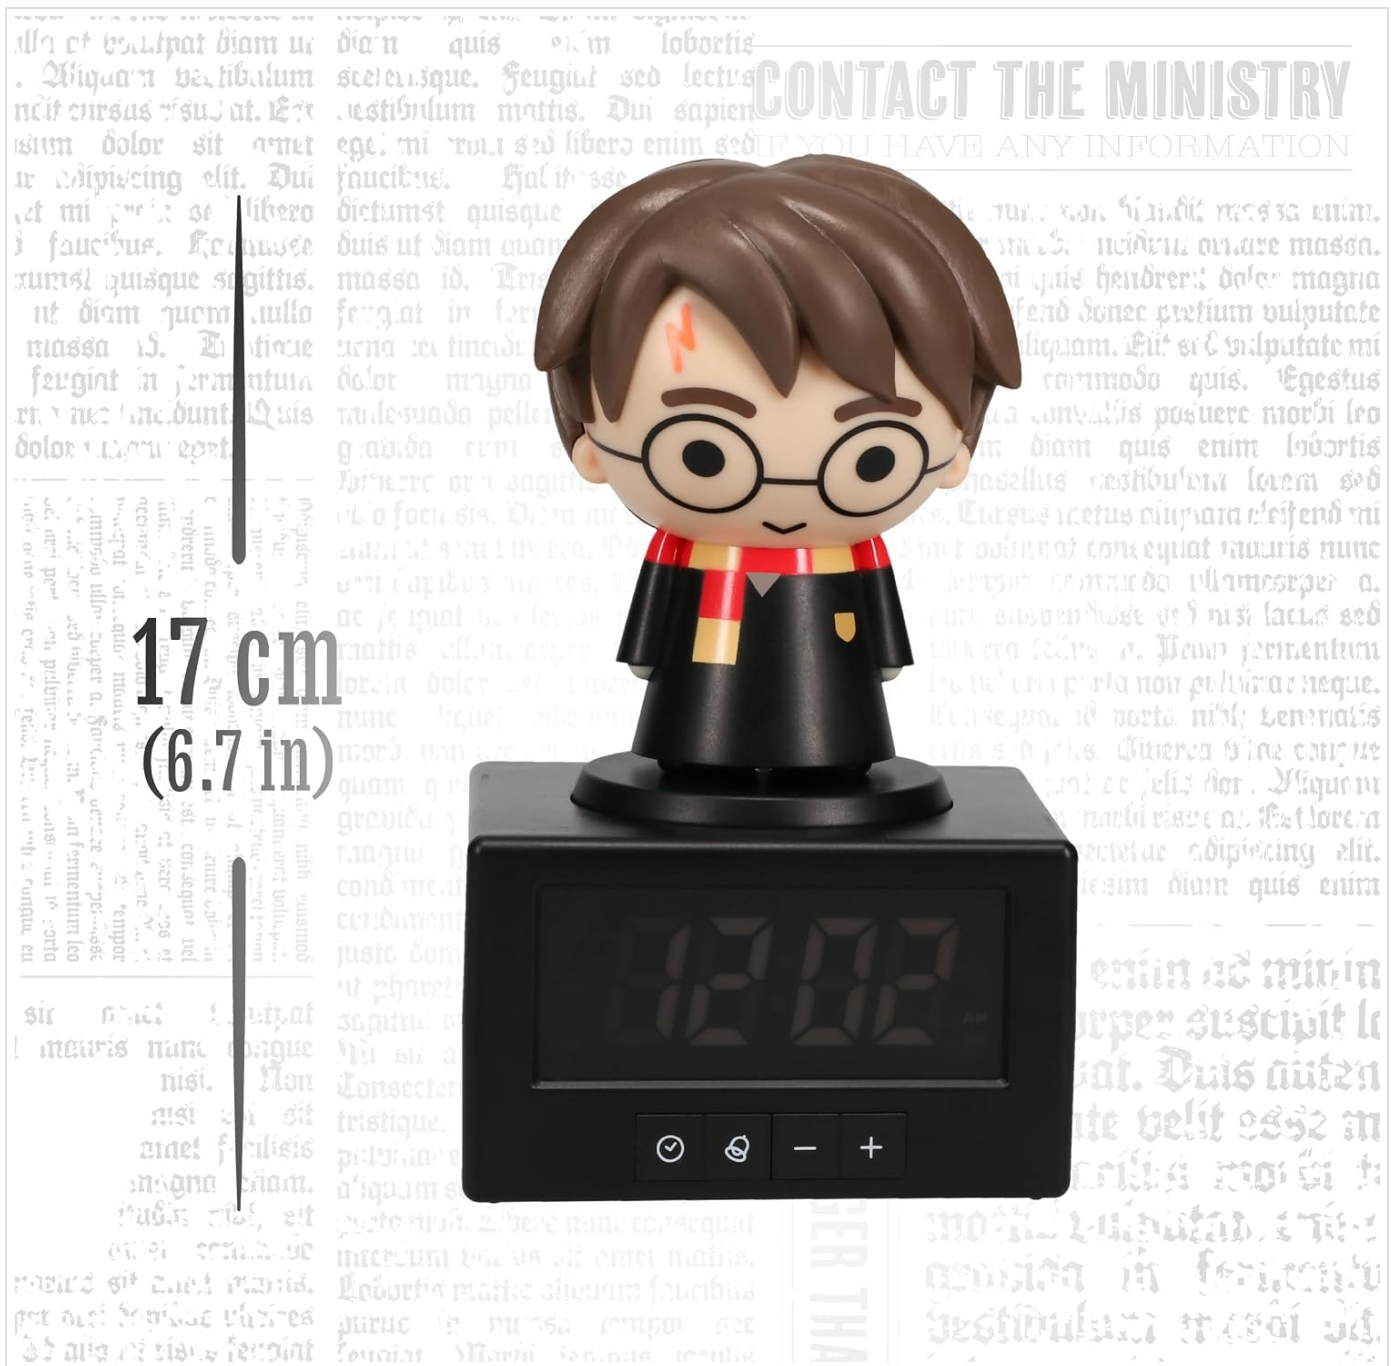


Figure 5: The alarm clock stands approximately 17 cm (6.7 inches) tall, including the Harry Potter figure.

WARRANTY AND SUPPORT

This product is manufactured by Paladone. Please note that according to the product specifications, there is no explicit warranty provided for this item. For any product inquiries or support, please contact Paladone directly through their official website or customer service channels.

For more information about Paladone and their range of licensed products, you may visit their official store page:

[Paladone Store](#).

© 2024 Paladone. All rights reserved. Harry Potter characters, names and related indicia are © & ™ Warner Bros. Entertainment Inc. WB SHIELD: © & ™ WBEI. Publishing Rights © JKR. (s24)

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Can you turn off the alarm for the weekends on the Paladone Harry Potter Digital Alarm Clock (Model 11773)?

Based on the provided instruction manual for the Paladone Harry Potter Digital Alarm Clock (Model 11773), there is no mention of a feature to set different alarms for weekdays and weekends, or to specifically...

[Read full answer](#)