

TECURS B0C5QJ6F34

TECURS Wireless Gaming Keyboard

USER MANUAL

Product Overview

The TECURS Wireless Gaming Keyboard is designed for an optimal typing and gaming experience. It features advanced 2.4 GHz wireless technology for stable and fast data transmission, ensuring no delays or drops within a 33-foot range. The keyboard utilizes silent membrane technology, providing a responsive typing experience with minimal noise, ideal for quiet environments. Its full-size, ergonomic design includes an inclination angle for comfortable typing during extended use. Dedicated multimedia keys offer convenient control over media functions, and the monochromatic backlight with adjustable brightness enhances visibility in various lighting conditions. This keyboard is widely compatible with Windows XP, Windows 8, and Windows 10 operating systems, making it suitable for desktops, laptops, and other devices.



Image: The TECURS Wireless Gaming Keyboard, showcasing its full-size layout with vibrant, multi-color backlighting. A compact USB receiver is visible to the right of the keyboard, indicating its wireless connectivity.

Setup and Installation

Setting up your TECURS Wireless Gaming Keyboard is a straightforward process, designed for quick plug-and-play

functionality.

1. **Unpack the Keyboard:** Carefully remove the keyboard and the USB receiver from its packaging.
2. **Locate the USB Receiver:** The compact USB receiver is typically stored in a compartment on the keyboard or included separately in the box.
3. **Connect the Receiver:** Insert the USB receiver into an available USB port on your computer (desktop or laptop).
4. **Power On the Keyboard:** Ensure the keyboard is charged or has sufficient battery. There might be a power switch on the keyboard; turn it to the 'ON' position if present.
5. **Automatic Connection:** The keyboard should automatically connect to your computer within a few seconds. No additional drivers are typically required for basic functionality.
6. **Initial Charge:** For optimal performance, it is recommended to fully charge the keyboard before its first use. Use the provided USB charging cable to connect the keyboard to a USB power source.



Image: The TECURS Wireless Keyboard positioned on a desk, with its USB receiver prominently displayed. An icon above the receiver indicates a wireless signal, illustrating the 8-10 meter receiving distance.

Operating Instructions

Basic Usage

Once connected, the keyboard functions like a standard full-size keyboard. Its silent membrane keys provide a comfortable and quiet typing experience, suitable for various environments.

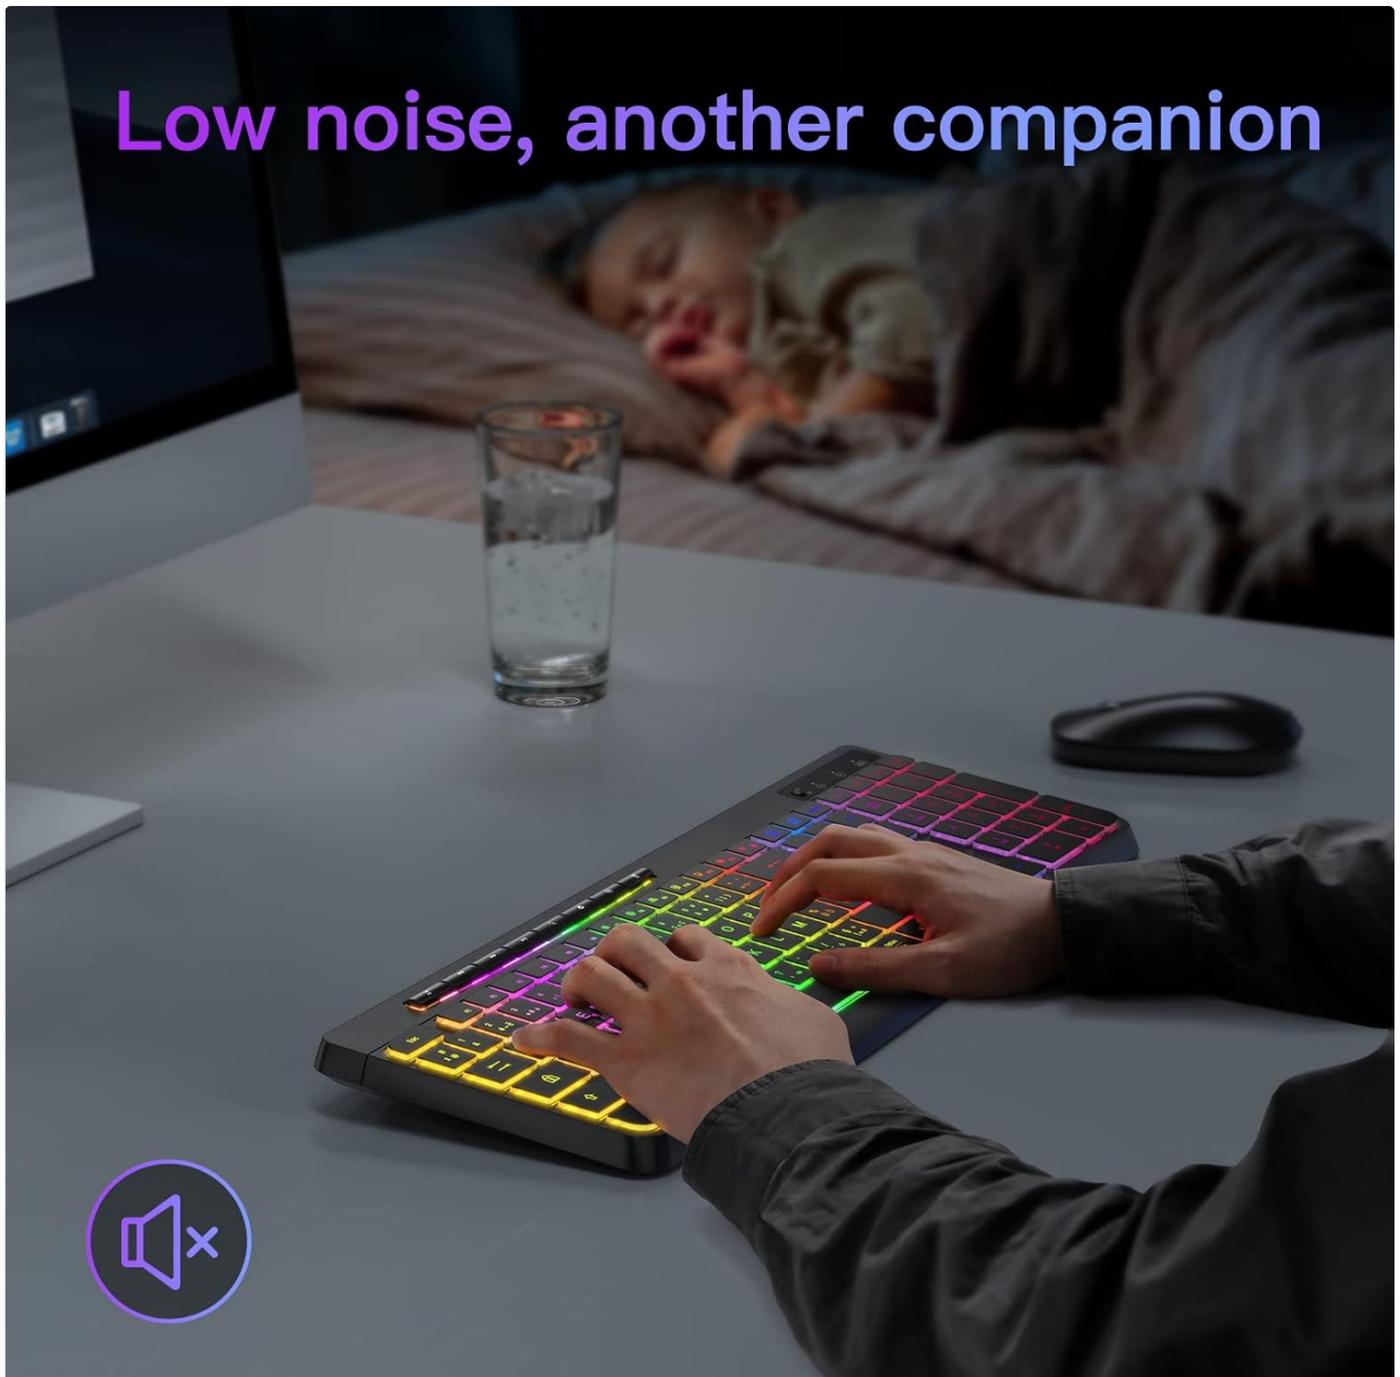


Image: A person's hands are shown typing on the TECURS keyboard, which features colorful backlighting. The image emphasizes the low noise operation, with a muted speaker icon, suggesting its suitability for quiet environments like a bedroom where a child is sleeping in the background.

Multimedia Keys

The keyboard includes dedicated multimedia keys for quick access to media controls. These keys are typically located along the top row (F-keys) and can be activated directly or by pressing the **Fn** key in combination with the respective F-key.

- **Volume Control:** Adjust volume up, down, or mute.

- **Media Playback:** Play/pause, stop, previous track, next track.
- **Other Functions:** Access calculator, web browser, email, etc. (refer to keyboard legends for specific functions).

Key life: 5000000clicks

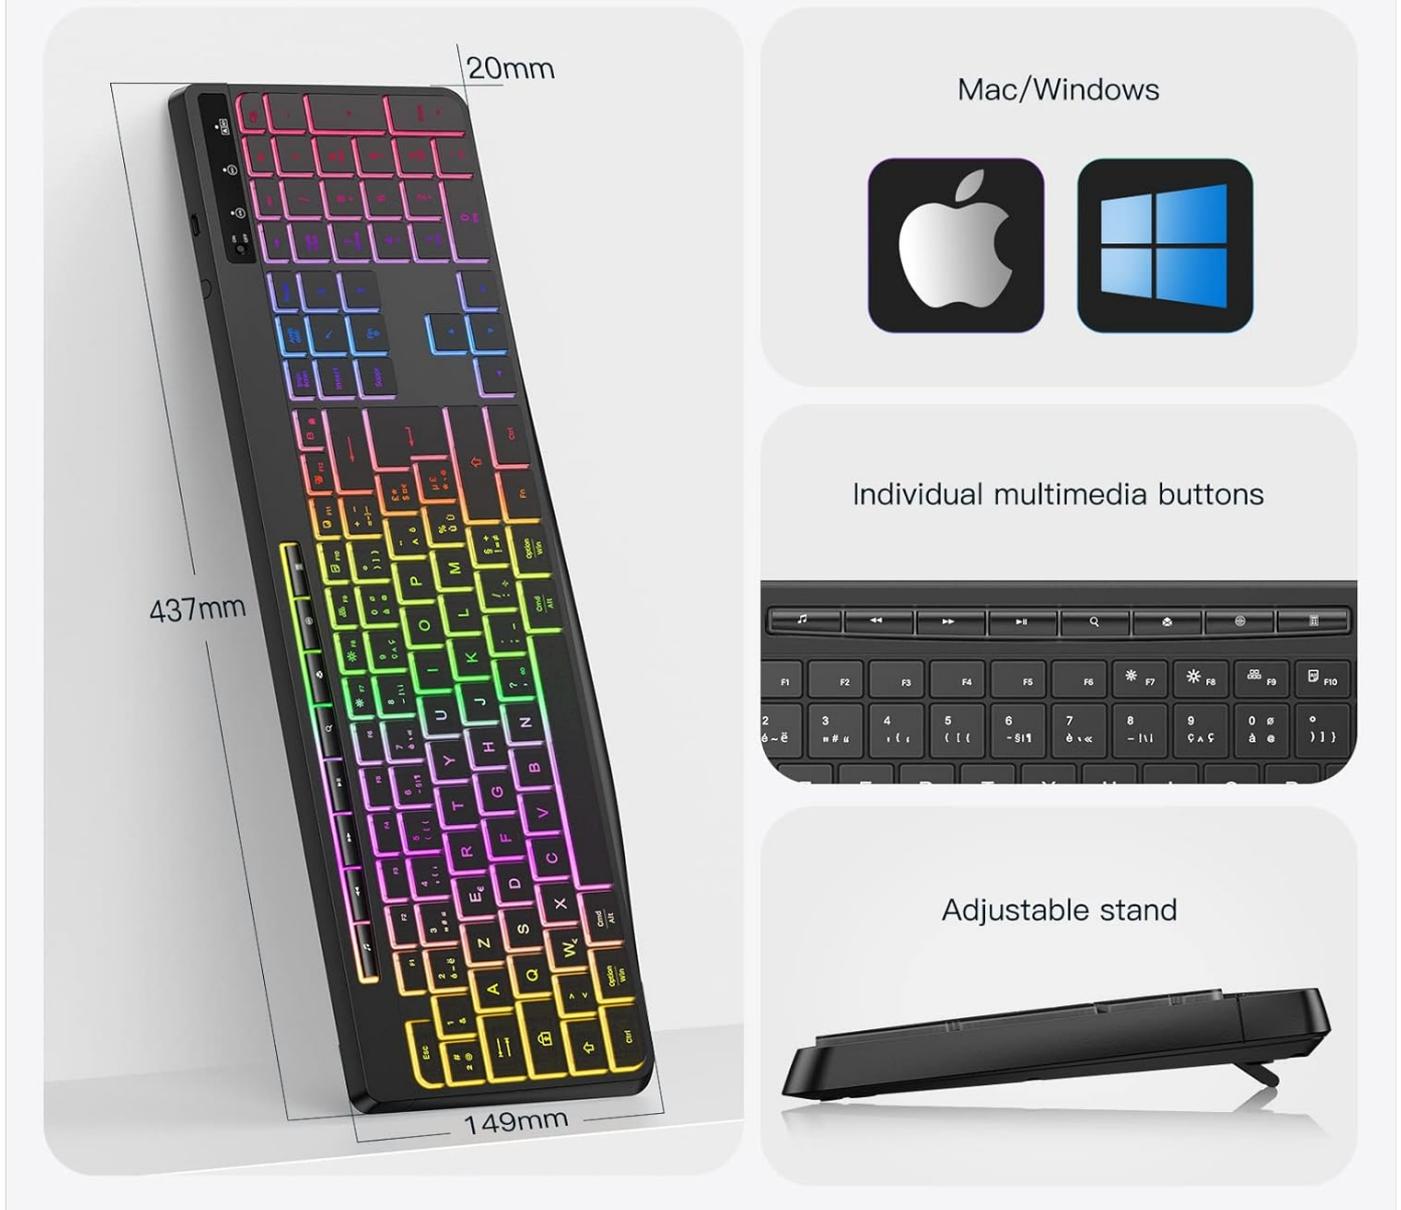


Image: A detailed view of the keyboard highlighting its dimensions (437mm length, 149mm width, 20mm thickness) and key features. Insets show compatibility with Mac/Windows, the row of individual multimedia buttons, and the adjustable stand at the back of the keyboard.

Backlight Control

The keyboard features a monochromatic backlight with adjustable brightness. This allows you to customize the illumination to suit your environment and preference.

- **Toggle Backlight:** Use the dedicated backlight key (often indicated by a light bulb icon or combined with **Fn + Scroll Lock** or similar) to turn the backlight on/off.
- **Adjust Brightness:** Use the brightness control keys (often **Fn + Page Up / Page Down** or similar) to increase or decrease the backlight intensity.

Note: The backlight may automatically turn off after a period of inactivity to conserve battery. Press any key to reactivate it.

Rechargeable Keyboard – Eco-Friendly and Savings

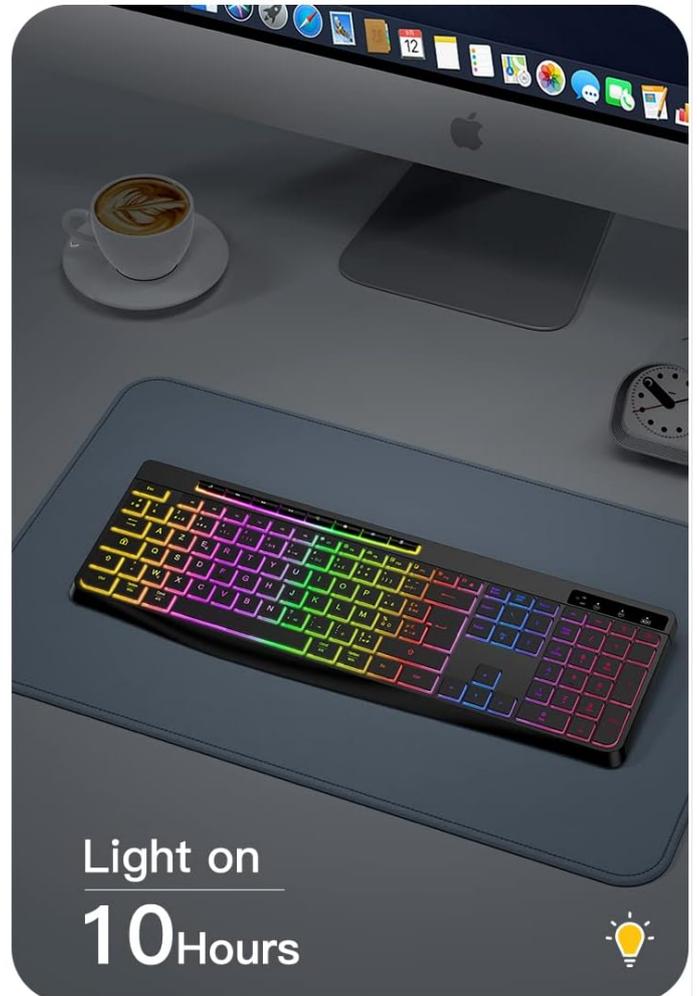


Image: A split image demonstrating the keyboard's backlight feature. The left side shows the keyboard with the backlight off, indicating a "Backlight 15 Days" battery life. The right side shows the keyboard with the backlight on, indicating "Light on 10 Hours" battery life, with a 1000mAh battery icon at the top.

Maintenance and Care

Proper maintenance ensures the longevity and optimal performance of your TECURS Wireless Gaming Keyboard.

• Cleaning:

- Disconnect the keyboard from your computer before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the surface.
- Avoid harsh chemicals, abrasive cleaners, or excessive moisture.
- Use compressed air to remove dust and debris from between the keys.

• Battery Care:

- The keyboard uses a rechargeable Lithium-ion battery.

- Avoid fully discharging the battery frequently to prolong its lifespan.
- Charge the keyboard using the provided USB cable and a standard USB power source.
- If storing the keyboard for an extended period, charge it to about 50% and store in a cool, dry place.
- **Storage:** Store the keyboard in a clean, dry environment away from extreme temperatures and direct sunlight.

Troubleshooting

If you encounter issues with your TECURS Wireless Gaming Keyboard, refer to the following common troubleshooting steps:

Problem	Possible Solution
Keyboard not responding / No connection.	<ul style="list-style-type: none"> • Ensure the USB receiver is securely plugged into a working USB port. Try a different USB port. • Check if the keyboard is powered on. • Recharge the keyboard battery. A low battery can cause connection issues. • Move the keyboard closer to the USB receiver to ensure it's within the 33-foot operating range. • Restart your computer.
Backlight not working or dim.	<ul style="list-style-type: none"> • Ensure the backlight is turned on using the dedicated key or Fn + Scroll Lock. • Adjust the brightness using Fn + Page Up / Page Down. • The backlight may turn off automatically to save power. Press any key to reactivate. • Charge the keyboard. Low battery can affect backlight performance.
Keys are sticky or unresponsive.	<ul style="list-style-type: none"> • Clean the keyboard, especially around the affected keys, to remove any debris or spills. • Ensure the keyboard is on a flat, stable surface.

Product Specifications

Feature	Detail
Brand	TECURS
Model Number	B0C5QJ6F34
Color	Black
Connectivity Technology	2.4 GHz Wireless (USB Receiver)
Operating System Compatibility	Windows XP, Windows 8, Windows 10
Compatible Devices	Gaming Console, Laptop, PC
Keyboard Description	Membrane
Special Features	Multimedia Shortcuts, Backlit
Number of Keys	104
Backlight Color Management	Single Color (Monochromatic)

Feature	Detail
Battery Type	Lithium-ion (Rechargeable)
Key Life	50,000,000 clicks

Warranty and Support

For warranty information, technical support, or any inquiries regarding your TECURS Wireless Gaming Keyboard, please contact TECURS customer service directly. Details can typically be found on the product packaging, the official TECURS website, or through the retailer where the product was purchased.

The manufacturer, TECURS, is committed to providing quality products and support to its customers.

© 2025 TECURS. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.