

KEMEI KEMEI 2299

KEMEI 2299 Professional Cordless Hair Clipper User Manual

Model: KEMEI 2299 | Brand: KEMEI

1. INTRODUCTION

The KEMEI 2299 Professional Cordless Hair Clipper is designed for precise and efficient hair trimming, offering a professional grooming experience. Its advanced features ensure a smooth and comfortable cut for various hair types and styles.

Key features include a durable DLC (Diamond-Like Carbon) trimmer blade, a powerful 7500 RPM high-speed motor for consistent performance, and a quiet design operating at no more than 65 dB. The zero-gap blade allows for extremely close trimming, ideal for detailed work around necklines, sideburns, and beards.

DLC Blades



Figure 1.1: The KEMEI 2299 features professional DLC blades designed for precision and durability.

New Upgraded Powerful Motor Surging Power



Figure 1.2: Equipped with a new upgraded 7500 RPM high-speed powerful motor for efficient cutting.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the KEMEI 2299 Trimmer to prevent injury or damage to the device.

General Safety Precautions:

- Keep the appliance dry. Do not use it near water or in wet environments (e.g., bathtub, shower).
- Do not immerse the trimmer in water or any other liquid.
- Always unplug the trimmer before cleaning or performing any maintenance.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.
- Use only the charging cable provided with the trimmer.
- Do not operate the trimmer if it has a damaged cord or plug, or if it is not working properly.
- Avoid applying excessive pressure to the blade to prevent skin irritation or damage to the blade.

Battery Safety:

- The trimmer contains a Lithium Metal battery. Do not disassemble, crush, heat above 60°C (140°F), or incinerate the battery.
- Dispose of the battery according to local regulations.

3. PACKAGE CONTENTS

Upon opening the package, please ensure all the following items are present:

- KEMEI 2299 Professional Cordless Hair Clipper
- 3 Guide Combs (1mm, 2mm, 3mm)
- Cleaning Brush
- Lubricating Oil
- USB Charging Cable
- Hair Comb
- Protective Cover/Bag



Figure 3.1: The KEMEI 2299 Trimmer and its complete set of accessories.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your KEMEI 2299 Trimmer:

- **DLC Trimmer Blade:** The precision cutting head for close and accurate trimming.
- **Power Button:** Located on the front, used to turn the trimmer ON/OFF.

- **Indicator Light:** Illuminates to show power status and charging.
- **Charging Port:** Located at the bottom for connecting the USB charging cable.
- **Guide Comb Slots:** Areas where the various guide combs attach.



Figure 4.1: Key features and components of the KEMEI 2299 Trimmer.

5. SETUP

Initial Charging:

Before first use, or when the battery is low, charge the trimmer fully. A full charge takes approximately 3 hours and provides up to 180 minutes of continuous usage time.

1. Connect the USB charging cable to the charging port at the bottom of the trimmer.
2. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, wall adapter, power bank, car charger).
3. The indicator light will illuminate during charging. Once fully charged, the light may change color or turn off depending on the model.



Figure 5.1: Charging the KEMEI 2299 Trimmer.



Figure 5.2: Multiple convenient USB charging options are available for your trimmer.

6. OPERATING INSTRUCTIONS

Turning On/Off:

Press the power button located on the front of the trimmer to turn it on. Press it again to turn it off.

Attaching/Removing Guide Combs:

The trimmer comes with 3 guide combs (1mm, 2mm, 3mm) to adjust hair length. To attach, align the comb with the trimmer blade and push until it clicks into place. To remove, gently pull the comb away from the blade.



3 Hair Trimmer Guide Combs



Figure 6.1: The KEMEI 2299 includes three hair trimmer guide combs for varying lengths.

Trimming Techniques:

The KEMEI 2299 is versatile for various grooming needs, including haircuts, beard trimming, and body hair grooming. Its zero-gap blade is particularly effective for precise lines and detailing.

- **For Haircuts:** Use the desired guide comb. Move the trimmer against the direction of hair growth for an even cut.
- **For Beard Trimming:** Use a guide comb for overall length, then remove the comb for precise shaping of necklines, cheek lines, and sideburns using the zero-gap blade.

- **For Detailing:** The precision T-shaped blade allows for intricate designs and sharp lines. Use light pressure and slow movements.



Figure 6.2: The KEMEI 2299 Trimmer is suitable for various applications including body hair, haircuts, and beard trimming.



Figure 6.3: The trimmer is designed for both professional barber use and personal home grooming, including general hair cutting and beard trimming.

Video Demonstration:

Your browser does not support the video tag.

Video 6.1: A demonstration of the KEMEI 2299 Hair Clipper being used for beard trimming and detailing.

7. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your KEMEI 2299 Trimmer.

Cleaning the Trimmer:

1. After each use, turn off and unplug the trimmer.
2. Remove any attached guide combs.
3. Use the provided cleaning brush to brush away loose hairs from the blade and the trimmer body.
4. The blade can be rinsed under running water. Ensure the trimmer body remains dry.
5. Allow the blade to air dry completely before reattaching or storing.

Lubricating the Blade:

Regularly apply a few drops of the included lubricating oil to the blades to maintain smooth operation and prevent rust. Do this after every few uses or after rinsing the blade.

Storage:

Store the trimmer in a cool, dry place when not in use. Use the protective cover/bag to keep the trimmer and its accessories organized and protected from dust.

8. TROUBLESHOOTING

If you encounter any issues with your KEMEI 2299 Trimmer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer for 3 hours.
Poor cutting performance.	Blades are dirty or clogged with hair.	Clean the blades thoroughly with the brush and oil them.
Poor cutting performance.	Battery is low.	Recharge the trimmer.
Trimmer makes unusual noise or vibrates excessively.	Blades need lubrication or there's a foreign object.	Apply oil to the blades. Check for and remove any debris.

9. SPECIFICATIONS

Detailed technical specifications for the KEMEI 2299 Professional Cordless Hair Clipper:

- **Model Number:** KEMEI 2299
- **Product Dimensions:** 1.77 x 1.18 x 5.91 inches (4.5 x 3 x 15 cm)
- **Weight:** 5.64 ounces (160 grams)
- **Power Source:** Battery Powered
- **Battery Type:** 1 Lithium Metal battery (included)
- **Charging Time:** Approximately 3 hours
- **Usage Time:** Up to 180 minutes on a full charge
- **Motor Speed:** 7500 RPM
- **Noise Level:** Less than 65 dB
- **Manufacturer:** KEMEI



Figure 9.1: Product dimensions of the KEMEI 2299 Trimmer.

10. WARRANTY AND SUPPORT

KEMEI products are manufactured with quality and reliability in mind. For information regarding warranty coverage, returns, or technical support, please refer to the warranty card included in your product packaging or contact the seller directly through your purchase platform.

For further assistance, you may also visit the official KEMEI store on Amazon:[KEMEI Store](#).