

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [INOKIM](#) /

› **INOKIM QUICK4 Super Electric Scooter Adults 600W (1100W Max) Motor, 44 Mile Range, 25 MPH, 10" Pneumatic Tires, Front & Rear LED Light, Fast Folding Escooter**

## INOKIM Quick4

# INOKIM QUICK4 Super Electric Scooter User Manual

Model: QUICK4 Super

## 1. INTRODUCTION

Welcome to the INOKIM QUICK4 Super Electric Scooter user manual. This guide provides essential information for the safe operation, maintenance, and optimal performance of your new electric scooter. Please read this manual thoroughly before your first ride to ensure proper usage and to maximize your riding experience.

The INOKIM QUICK4 Super is designed for adults, featuring a powerful 600W (1100W Max) motor, a range of up to 44 miles, and a top speed of 25 MPH. It is equipped with 10-inch pneumatic tires, front and rear LED lights, and a fast-folding mechanism for portability.

# INOKIM QUICK<sup>4</sup> ELECTRIC SCOOTER



TOP SPEED  
**24.8 mph**



TOP RANGE  
**44 Miles**



MAX LOAD  
**265 lb**



POWER  
**Peak 1100 Watt**

Figure 1.1: INOKIM QUICK4 Super Electric Scooter with performance highlights.

## 2. SAFETY GUIDELINES

Your safety is paramount. Always adhere to the following guidelines:

- Always wear a helmet and appropriate safety gear (knee pads, elbow pads, gloves) when riding.
- Familiarize yourself with local laws and regulations regarding electric scooter usage.
- Perform a pre-ride check: ensure brakes are functional, tires are properly inflated, and all quick-release mechanisms are secured.
- Do not ride under the influence of alcohol or drugs.
- Avoid riding in heavy rain, snow, or icy conditions.
- Maintain a safe distance from other vehicles and pedestrians.
- Do not exceed the maximum weight limit of 265 pounds (120 kg).
- Use caution when riding on uneven terrain due to the dual suspension system, as it may provide a different feel than rigid scooters.

### 3. PRODUCT OVERVIEW

The INOKIM QUICK4 Super is engineered for performance and comfort. Key components include:

- **Handlebar Assembly:** Features the digital display (CCU), throttle, brake levers, and folding mechanism.
- **Front Wheel:** 10-inch pneumatic tire with front suspension and drum brake.
- **Rear Wheel:** 10-inch pneumatic tire with rear suspension, 600W brushless hub motor, and drum brake.
- **Deck:** Wide platform for comfortable foot placement, housing the 51V 16Ah battery.
- **Folding Mechanism:** Quick-release lever for easy folding and unfolding.
- **Lights:** Integrated front and rear LED lights for visibility.



Figure 3.1: Unfolded and folded views of the INOKIM QUICK4 Super.

**PEAK  
1100 W**  
POWERFUL MOTOR

**10"**  
PNEUMATIC  
TIRES

**FRONT AND REAR  
SUSPENSION SYSTEM**



Figure 3.2: Detail of the rear wheel, motor, and suspension.

# DIGITAL DISPLAY

Sleek Center Display



Adjustable Board Height



# DUAL BRAKING

System



Rear Drum Brake



Front Drum Brake

Figure 3.3: Central Control Unit (CCU) display and braking system details.

## 4. SETUP

### 4.1 Unfolding the Scooter

1. Place the scooter on a flat, stable surface.
2. Locate the quick-release lever near the base of the steering column.
3. Press the lever with your foot to release the folding mechanism.
4. Gently lift the handlebar assembly until it locks securely into the upright position. Ensure you hear a click, indicating it is fully locked.
5. Unfold the handlebars if they were folded for transport.

# ONE PATENT

## Folding System



Figure 4.1: The scooter in its folded configuration, ready for transport or storage.

### 4.2 Initial Charge

Before your first ride, fully charge the battery. A full charge takes approximately 7 hours. The charging port is typically located on the side of the deck. Use only the provided charger.

## 5. OPERATING INSTRUCTIONS

### 5.1 Powering On/Off

- To power on: Press and hold the power button on the CCU display.
- To power off: Press and hold the power button again until the display turns off.

### 5.2 Riding the Scooter

1. Place one foot firmly on the deck.

2. Push off with your other foot to gain initial momentum.
3. Once moving, gently press the throttle lever to engage the motor.
4. Adjust speed using the throttle. The scooter offers 3 speed modes, selectable via the CCU display.
5. To brake, gently squeeze the brake levers on the handlebars. The INOKIM QUICK4 Super features front and rear drum brakes for effective stopping power.



Figure 5.1: Riding the INOKIM QUICK4 Super, highlighting key operational features.

### 5.3 Digital Display (CCU)

The Central Control Unit (CCU) LCD display provides real-time information:

- **Speed:** Current riding speed.
- **Odometer:** Total distance traveled.
- **Battery Level:** Remaining battery charge.
- **Trip Timer:** Duration of the current ride.
- **Speed Mode Indicator:** Shows the selected speed mode.

## 6. MAINTENANCE

Regular maintenance ensures the longevity and safety of your scooter.

- **Cleaning:** Wipe the scooter with a damp cloth. Do not use high-pressure water or immerse the scooter in water.
- **Tire Pressure:** Check pneumatic tire pressure regularly. Refer to the tire sidewall for recommended PSI.
- **Brakes:** Inspect brake levers and cables for proper tension and wear. Adjust or replace as needed.
- **Battery Care:**
  - Charge the battery fully after each use.
  - If storing for an extended period, charge the battery to 50-70% every 2-3 months.
  - Avoid fully discharging the battery.
- **Folding Mechanism:** Keep the folding mechanism clean and lubricated to ensure smooth operation.
- **Storage:** Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Scooter does not power on.	Low battery; loose battery connection; power button malfunction.	Charge the battery; check battery connections; contact support if issue persists.
Motor not engaging.	Throttle issue; brake engaged; motor fault.	Ensure throttle is pressed correctly; check brake levers are fully released; contact support.
Reduced range or speed.	Under-inflated tires; heavy load; riding uphill; battery degradation.	Inflate tires to recommended PSI; reduce load; consider terrain; battery replacement may be needed over time.
Brakes feel weak.	Brake cable loose; brake pads worn.	Adjust brake cable tension; replace brake pads.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	INOKIM QUICK4 Super
Motor Power	600W (1100W Peak) Brushless Hub Motor

Feature	Detail
Battery	51V 16Ah Lithium-ion
Max Range	Up to 44 miles (70 km)
Top Speed	Up to 25 mph (40 km/h)
Tires	10x2.5 inch Pneumatic Tires
Brakes	Front and Rear Drum Brakes
Suspension	Front and Rear Dual Suspension System
Max Load	265 lbs (120 kg)
Product Dimensions (Unfolded)	44" L x 22.5" W x 48" H (111.76cm L x 57.15cm W x 121.92cm H)
Item Weight	50 lbs (22.68 kg)
Frame Material	Aluminum 6061 T6

## 9. WARRANTY AND SUPPORT

INOKIM products are built with quality and durability in mind. For specific warranty details, please refer to the warranty card included with your purchase or visit the official INOKIM website. Keep your proof of purchase for warranty claims.

For technical support, spare parts, or service inquiries, please contact INOKIM customer service through their official channels. You can often find contact information on the INOKIM brand store page on Amazon or their official website.

Visit the [INOKIM Store on Amazon](#) for more information.