

PERFASCIN RM-C2503

PERFASCIN RM-C2503 Replacement Remote Control User Manual

Model: RM-C2503

Brand: PERFASCIN

INTRODUCTION

This manual provides instructions for the PERFASCIN RM-C2503 Replacement Remote Control. This remote is designed to function as a direct replacement for various JVC LCD TV models, requiring no programming or setup. Please read this manual thoroughly to ensure proper use and longevity of your remote control.

SETUP

1. Battery Installation

The RM-C2503 remote control requires two AAA batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: Back of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.

The remote is ready for use immediately after battery installation. No programming or pairing is required.

OPERATING INSTRUCTIONS

The RM-C2503 remote control is designed to replicate the functions of your original JVC LCD TV remote. Point the remote directly at your television's infrared receiver for optimal performance.





Image: Front view of the RM-C2503 remote control, displaying the layout of all functional buttons.

Key Functions:

- **Power (●):** Turns the television on or off.
- **Number Buttons (0-9):** Directly select channels.
- **VOL (+/-):** Adjusts the volume level.
- **PROG (▲/▼):** Changes channels up or down.
- **AV:** Switches between video input sources (e.g., HDMI, AV).
- **Mute ():** Mutes or unmutes the television audio.
- **MENU:** Accesses the television's main menu.
- **OK:** Confirms selections within menus.
- **Directional Arrows (▲ ▼ ◆):** Navigates through menu options.
- **BACK:** Returns to the previous menu or screen.
- **TV/DTV:** Switches between analog and digital television modes.
- **GUIDE:** Displays the electronic program guide (if supported by TV).
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within menus or interactive services, as indicated on the TV screen.

COMPATIBLE JVC LCD TV MODELS

This replacement remote control is compatible with the following JVC LCD TV models:

- LT19DB9BD
- LT26HA20U
- HD-52G566
- LT-32DZ1
- LT-42DG1
- LT-42E478
- LT-42E488
- LT-47DG1

- RM-C1930 (original remote model it replaces)

This list may not be exhaustive. If your JVC LCD TV model is not listed but uses the RM-C2503 or RM-C1930 remote, this replacement should be compatible.

MAINTENANCE

Cleaning:

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

Battery Care:

- Replace batteries when the remote's response becomes sluggish or inconsistent.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage and potential damage.
- Do not mix old and new batteries, or different types of batteries (e.g., alkaline and rechargeable).
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is unresponsive.	• Dead or low batteries. • Incorrect battery orientation. • Obstruction between remote and TV. • Remote's infrared emitter is blocked.	• Replace batteries with new ones. • Check battery polarity (+/-). • Ensure a clear line of sight to the TV's IR sensor. • Ensure nothing is covering the front of the remote.
Some buttons do not work.	• Button stuck or dirty. • Specific function not supported by TV model.	• Gently press the button multiple times or clean around it. • Refer to your TV's manual for supported functions.
Remote works intermittently.	• Weak batteries. • Interference from other devices.	• Replace batteries. • Move away from strong light sources or other electronic devices.

SPECIFICATIONS

- **Model:** RM-C2503
- **Brand:** PERFASCIN
- **Power Source:** 2 x AAA Batteries (not included)
- **Dimensions:** 6 x 3 x 0.5 inches (approximately)
- **Weight:** 2 ounces (without batteries)
- **Color:** Black

- **Compatibility:** JVC LCD TVs (specific models listed in Compatibility section)

WARRANTY AND SUPPORT

For any questions or issues regarding your PERFASCIN RM-C2503 Replacement Remote Control, please contact the seller or manufacturer for assistance. Please refer to your purchase documentation for specific warranty details.