

AIRROBO PG100-Hose

AIRROBO & FIXR PG100 Pet Grooming Vacuum Replacement Hose Instruction Manual

1. PRODUCT OVERVIEW

This document provides essential instructions for the AIRROBO & FIXR PG100 Pet Grooming Vacuum Replacement Hose. It covers compatibility, specifications, installation, and proper usage to ensure optimal performance and longevity of your grooming vacuum system.



2. COMPATIBILITY

This replacement hose is specifically designed for use with the **AIRROBO PG100 Pet Grooming Vacuum** and the **FIXR PG100 Pet Grooming Vacuum**. It is not compatible with other models or brands. Please verify your grooming vacuum model before attempting installation.

This hose is only used for the PG100 pet grooming vacuum of AIRROBO and FIXR brands



Package includes:
only one hose

Image: The replacement hose shown next to the AIRROBO PG100 Pet Grooming Vacuum unit, indicating its exclusive compatibility.

3. PACKAGE CONTENTS

The package includes:

- One (1) Replacement Hose

4. SPECIFICATIONS

Part Number	PG100-Hose
-------------	------------

Hose Length	150 cm (59 inches)
Interface Diameter 1	30 cm (11.81 inches)
Interface Diameter 2	45 cm (17.72 inches)
Material	Plastic
Item Weight	12.3 ounces
Package Dimensions	13.23 x 8.66 x 3.31 inches



Image: Visual representation of the hose with labeled measurements for interface diameters (30cm/11.81in and 45cm/17.72in) and hose length (150cm/59in).

5. SETUP AND INSTALLATION

1. Ensure your AIRROBO or FIXR PG100 Pet Grooming Vacuum is turned off and unplugged before installation.
2. Locate the hose connection port on your grooming vacuum unit.
3. Align one end of the replacement hose with the connection port.

4. Gently push the hose connector into the port and twist clockwise until it is securely locked in place.
5. Connect your desired grooming attachment (e.g., brush, clipper) to the other end of the hose, ensuring a snug fit.



Image: A hand demonstrating the process of connecting the hose to the main body of the pet grooming vacuum.

6. OPERATING INSTRUCTIONS

Once the replacement hose is securely installed and any grooming attachments are connected, you can operate your pet grooming vacuum as usual. Ensure all connections are firm to maintain optimal suction. The hose is designed to be flexible, allowing for comfortable movement during grooming sessions.

7. MAINTENANCE

- **Regular Inspection:** Periodically inspect the hose for any signs of wear, tears, kinks, or blockages.
- **Cleaning:** If the hose becomes dirty or clogged, disconnect it from the vacuum unit and attachments. Rinse the interior and exterior of the hose with lukewarm water. Avoid using harsh chemicals or abrasive cleaners.
- **Drying:** After cleaning, ensure the hose is completely dry before reattaching it to the vacuum. This

prevents moisture from entering the vacuum unit, which could cause damage.

- **Storage:** Store the hose in a clean, dry place, away from direct sunlight or extreme temperatures, to prolong its lifespan.

8. TROUBLESHOOTING

- **Reduced Suction:** If you experience reduced suction, first check that both ends of the hose are securely connected to the vacuum unit and the grooming attachment. Inspect the entire length of the hose for any kinks, tears, or blockages. Clear any obstructions found.
- **Hose Damage:** If the hose is visibly torn or damaged, it must be replaced to maintain proper vacuum function and prevent debris from escaping.

9. WARRANTY AND SUPPORT

For specific warranty information regarding your AIRROBO or FIXR PG100 Pet Grooming Vacuum and its replacement parts, please refer to the original product manual provided with your grooming vacuum. For further assistance or technical support, please contact the manufacturer directly through their official website or customer service channels.