

[Manuals.plus](#) /

› [Joiedomi](#) /

› Joiedomi 12 ft Tall Halloween Inflatable Grim Reaper Outdoor Decoration Instruction Manual

Joiedomi 31777

Joiedomi 12 ft Tall Halloween Inflatable Grim Reaper Instruction Manual

Model: 31777

1. INTRODUCTION

Thank you for choosing the Joiedomi 12 ft Tall Halloween Inflatable Grim Reaper. This product is designed to provide an engaging outdoor decoration for Halloween. This manual provides essential information for safe setup, operation, and maintenance of your inflatable decoration.



Image 1: The Joiedomi 12 ft Tall Halloween Inflatable Grim Reaper illuminated at night.

2. SAFETY INFORMATION

- **Secure Anchoring:** Always ensure the product is securely anchored to the ground using all provided stakes and ropes. Failure to do so may result in the inflatable becoming dislodged in high winds, potentially causing damage or injury.
- **Heat Sources:** Keep the inflatable away from open flames, heaters, and other heat sources to prevent fire hazards.
- **Electrical Safety:** The included plug is UL certified, ensuring it meets safety standards. Do not use damaged cords or plugs. Do not operate in standing water.
- **Weather Conditions:** While weather-resistant, avoid operating the inflatable during extreme weather conditions such as heavy rain, strong winds, or snow. Disconnect power and store the unit if severe weather is anticipated.
- **Supervision:** Keep children and pets away from the inflatable during inflation and deflation to prevent entanglement or injury.

3. PACKAGE CONTENTS

Verify that all components are present before beginning setup:

- 1 x Inflatable Grim Reaper Unit with built-in blower and LED lights
- 1 x Extended Power Cord with UL certified plug
- Ground Stakes
- Fastened Ropes
- Built-in Sandbags (for stability)



Image 2: Included components and features of the inflatable.

4. SETUP INSTRUCTIONS

Follow these steps for quick and easy setup:

1. **Unpack and Position:** Carefully remove the inflatable from its packaging and spread it out in your desired outdoor location. Ensure the area is clear of sharp objects and debris.

2. **Zip Up Bottom Zipper:** Locate the zipper at the bottom of the inflatable and ensure it is fully closed. This prevents air leakage during inflation.
3. **Plug In and Inflate:** Connect the power cord to a suitable outdoor electrical outlet. The built-in blower will begin to inflate the Grim Reaper. Inflation typically takes seconds.
4. **Hook with Strings:** Once the inflatable is fully upright, attach the provided ropes to the designated loops on the inflatable.
5. **Secure the Stakes:** Drive the ground stakes into the ground at an angle, securing the ropes to the stakes. Adjust the ropes to ensure the inflatable is stable and upright.



Image 3: Step-by-step guide for setting up the inflatable.

5. OPERATING INSTRUCTIONS

Operating your Joiedomi inflatable is straightforward:

- **Power On:** Plug the UL certified power cord into a standard outdoor electrical outlet. The blower will activate, and the inflatable will begin to inflate. The built-in LED lights will illuminate automatically.

- **Power Off:** To turn off the inflatable, simply unplug the power cord from the electrical outlet. The inflatable will deflate.
- **LED Lights:** The Grim Reaper features built-in LED lights, including a red LED face, which activate automatically when the unit is powered on, enhancing visibility and creating a spooky ambiance.

6. MAINTENANCE

Proper maintenance ensures the longevity of your inflatable decoration:

- **Cleaning:** To clean the inflatable, wipe it gently with a damp cloth. Do not use harsh chemicals or abrasive cleaners, as these can damage the fabric or printing. Ensure the unit is unplugged before cleaning.
- **Storage:** Before storing, ensure the inflatable is completely deflated and dry. Fold it neatly and store it in its original packaging or a suitable storage bag in a cool, dry place, away from direct sunlight and pests.
- **Weather Resistance:** The inflatable is made from waterproof fabric and has an IP44 splash-proof rating, making it suitable for outdoor use in various weather conditions. However, for extreme weather, refer to the safety information.



LET US BRING JOY TO YOUR HOME

Safe for indoor and outdoor use.



INFLATES IN SECONDS



WEATHER RESISTANT



**IP44
SPLASH PROOF**



Image 4: Features indicating weather resistance and quick inflation.

7. TROUBLESHOOTING

If you encounter issues with your inflatable, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Inflatable does not inflate	Power cord not plugged in, zipper open, blower obstructed.	Ensure power cord is securely plugged in. Check that the bottom zipper is fully closed. Inspect the blower intake for any obstructions and clear them.

Problem	Possible Cause	Solution
Inflatable falls over or is unstable	Insufficient anchoring, strong winds.	Ensure all ground stakes and ropes are properly installed and tightened. If winds are too strong, deflate and store the inflatable.
LED lights are not working	Power issue, damaged wiring.	Check power connection. If the issue persists, contact customer support. Do not attempt to repair electrical components yourself.

8. SPECIFICATIONS

Key specifications for the Joiedomi 12 ft Tall Halloween Inflatable Grim Reaper:

Feature	Detail
Product Dimensions (packaged)	10.28 x 10.24 x 6.42 inches
Item Weight	5.83 pounds
Manufacturer	Joyin Inc
Model Number	31777
Height (inflated)	12 ft (approximately)
Ingress Protection (IP) Rating	IP44 (Splash Proof)

PRODUCT SIZE



Image 5: Visual representation of the inflatable's size.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Joiedomi website. Keep your purchase receipt as proof of purchase.

© 2023 Joiedomi. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question