

[Manuals.plus](#) /

› [Mellerware](#) /

› MELLERWARE Azure 1.8L Glass Cordless Kettle Instruction Manual

Mellerware Azure B0C5RJ8BCL

MELLERWARE Azure 1.8L Glass Cordless Kettle Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and efficient use of your MELLERWARE Azure 1.8L Glass Cordless Kettle. Please read these instructions carefully before first use and retain them for future reference. The Azure kettle features a 1.8L capacity, 360-degree cordless design, concealed heating element, and boil-dry protection for convenience and safety.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- Read all instructions thoroughly before operating the kettle.
- Do not immerse the kettle, power base, cord, or plug in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance out of reach of children. Close supervision is necessary when any appliance is used by or near children.
- Place the kettle on a flat, stable, heat-resistant surface, away from the edge of the countertop to prevent tipping.
- Do not operate the kettle if it is empty. The boil-dry protection feature will automatically switch off the kettle if it is accidentally switched on without water.
- Avoid contact with steam escaping from the spout or lid during and after boiling. Always use the handle to lift the kettle.
- Unplug the kettle from the outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts, and before cleaning the appliance.
- Only use the power base provided with this kettle. Using other bases may cause fire, electric shock, or personal injury.
- Do not overfill the kettle beyond the maximum fill line (1.8L) to prevent boiling water from spilling out.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

PRODUCT OVERVIEW

Familiarize yourself with the components of your MELLERWARE Azure Glass Cordless Kettle.

- **Glass Body:** Transparent body allowing visibility of water level and boiling process.

- **Lid with Release Button:** For easy filling and secure closure.
- **Handle:** Ergonomically designed for safe pouring.
- **Power Switch:** Activates the heating element.
- **Water Level Indicator:** Markings for minimum (0.6L) and maximum (1.8L) fill levels.
- **Concealed Heating Element:** For quick boiling and easy cleaning.
- **360-Degree Cordless Power Base:** Allows the kettle to be placed on the base from any angle.
- **Removable Filter:** Located behind the spout to prevent limescale particles from being poured into your cup.



Image: The MELLERWARE Azure 1.8L Glass Cordless Kettle, showcasing its transparent body, red accents, handle, and the detachable 360-degree rotational power base.



Image: A close-up view of the kettle's 360-degree rotational power base, indicating its flexibility for placement.

SETUP AND FIRST USE

Before using your new kettle, follow these steps:

1. Unpack the kettle and all its components. Remove any packaging materials and labels.
2. Place the power base on a dry, flat, and stable surface. Ensure the power cord is not dangling or in a position where it can be tripped over.
3. Before first use, fill the kettle with clean water up to the 'MAX' (1.8L) mark.
4. Boil the water as described in the 'Operating Instructions' section.
5. Discard the boiled water. Repeat this boiling and discarding process 2-3 times to remove any manufacturing residues or odors.
6. Your kettle is now ready for regular use.

OPERATING INSTRUCTIONS

Follow these steps to safely boil water with your kettle:

1. **Fill the Kettle:** Press the lid release button to open the lid. Fill the kettle with the desired amount of fresh, cold water. Ensure the water level is between the 'MIN' (0.6L) and 'MAX' (1.8L) markings on the water level indicator. Do not overfill.
2. **Close the Lid:** Close the lid securely until it clicks into place. Ensure it is fully closed to prevent steam from escaping and to ensure the automatic shut-off functions correctly.
3. **Place on Base:** Place the kettle onto the 360-degree cordless power base. Ensure it is seated correctly.
4. **Connect Power:** Plug the power base into a suitable wall outlet.
5. **Start Boiling:** Press the power switch down. The indicator light will illuminate, signaling that the kettle has begun heating the water.
6. **Automatic Shut-off:** Once the water reaches a rolling boil, the kettle will automatically switch off, and the indicator light will extinguish.
7. **Pouring:** Carefully lift the kettle from the base using the handle and pour the hot water. Be cautious of hot steam.
8. **Re-boiling:** If you need to re-boil water immediately, wait a few seconds for the internal thermostat to reset before pressing the power switch again.



Image: A close-up of the kettle's glass body displaying the water level markings, including 0.6L MIN and 1.8L MAX.



Image: The kettle in operation, showing water boiling inside and the integrated filter behind the spout.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kettle.

Exterior Cleaning

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle and the power base with a soft, damp cloth.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surface.

Descaling (Interior Cleaning)

Limescale buildup can affect the kettle's performance and lifespan. Descale regularly, especially in hard water areas.

- Fill the kettle with a mixture of white vinegar and water (1:2 ratio) or a commercial descaling solution according to its instructions.
- Boil the solution.
- Allow the solution to stand in the kettle for 30 minutes to an hour, or as recommended by the descaling product.
- Empty the kettle and rinse it thoroughly with fresh water several times to remove any residue and odor.
- Boil fresh water and discard it before using the kettle for beverages.

Filter Cleaning

- The removable filter can be rinsed under running water to remove any accumulated limescale or particles.

- Ensure the filter is securely re-inserted before using the kettle.

TROUBLESHOOTING

If you encounter issues with your kettle, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not switch on.	No power supply. Kettle not properly seated on base. Power switch not engaged.	Check if the power base is plugged into a working outlet. Ensure the kettle is correctly placed on the power base. Press the power switch down firmly.
Kettle switches off before boiling.	Limescale buildup.	Descale the kettle as per the 'Maintenance and Cleaning' section.
Water tastes unusual.	New appliance residue. Limescale buildup.	Ensure initial cleaning steps (boiling and discarding water 2-3 times) were followed. Descale the kettle if necessary.
Steam escaping from lid or other areas.	Lid not securely closed. Filter incorrectly positioned.	Ensure the lid is fully closed and latched. Check that the filter is correctly inserted behind the spout.
Kettle leaks.	Overfilling. Damage to kettle.	Do not fill past the MAX line. If the kettle is damaged, discontinue use and contact customer support.

SPECIFICATIONS

Technical details for the MELLERWARE Azure 1.8L Glass Cordless Kettle:

- **Brand:** Mellerware
- **Model:** Azure
- **Capacity:** 1.8 Liters
- **Power / Wattage:** 2200 watts
- **Material:** Glass
- **Colour:** Red
- **Special Features:** Cordless, Single Hand Operation, Water Level Indicator, Boil-dry protection, 360-degree rotational base
- **Item Weight:** 1.3 kg
- **Product Dimensions:** 21.8L x 18.5W x 24.8H centimetres
- **Package Dimensions:** 25 x 22.5 x 18.2 cm

WARRANTY AND SUPPORT

Your MELLERWARE Azure 1.8L Glass Cordless Kettle comes with a warranty to ensure your peace of mind.

- **Warranty:** The product includes a 1-Year Retail Warranty, with an option for a +1 Year Extended Warranty. Please refer to the warranty card included with your purchase for full terms and conditions.
- **Spare Parts:** Information regarding spare part availability is not provided.
- **Customer Support:** For any questions, technical assistance, or warranty claims, please contact Mellerware customer service through their official channels. Refer to your product packaging or the Mellerware website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question