

[manuals.plus](#) /

› [TAURUS](#) /

› [TAURUS Fredigora Aire Digital Air Fryer 4007 User Manual](#)

**TAURUS 4007**

# **TAURUS Fredigora Aire Digital Air Fryer 4007 User Manual**

Model: 4007 | Brand: TAURUS

## **1. INTRODUCTION**

This manual provides essential information for the safe and efficient operation of your TAURUS Fredigora Aire Digital Air Fryer, Model 4007. Please read these instructions carefully before first use and retain them for future reference. This appliance is designed for domestic use only.



Figure 1: Front view of the TAURUS Fredigora Aire Digital Air Fryer.

## 2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.

- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.

### 3. PRODUCT OVERVIEW

---

Familiarize yourself with the components of your TAURUS Fredigora Aire Digital Air Fryer.

1. Main Unit
2. Digital Control Panel
3. Fry Basket Handle
4. Removable Fry Basket (3.6L capacity)
5. Non-stick Coated Fry Basket
6. Air Outlet Vent
7. Power Cord



Figure 2: Air fryer with the fry basket partially removed.



Figure 3: Detailed view of the digital control panel.

## 4. SETUP

Before using your air fryer for the first time, follow these steps:

1. **Unpack:** Remove all packaging materials and promotional labels from the appliance.
2. **Clean:** Wash the fry basket and the non-stick coated fry basket thoroughly with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely. Wipe the interior and exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm of free space at the back and sides, and 10 cm above the appliance to allow for proper air circulation.
4. **Initial Run (Optional but Recommended):** To eliminate any manufacturing odors, plug in the air fryer and run it empty for about 10-15 minutes at 180°C (350°F). A slight odor may be present, which is normal. Allow the appliance to cool down completely afterward.

## 5. OPERATING INSTRUCTIONS

## 5.1. Pre-heating

1. Plug the power cord into a grounded wall outlet.
2. Pull out the fry basket from the appliance.
3. Press the power button on the digital control panel to turn on the air fryer.
4. Set the desired temperature using the temperature control buttons (usually '+' and '-').
5. Set the desired pre-heating time (typically 3-5 minutes) using the timer control buttons.
6. Press the start button to begin pre-heating. The display will show the set temperature and remaining time.

## 5.2. Cooking

1. Once pre-heating is complete (or if not pre-heating), carefully place your ingredients into the fry basket. Do not overfill the basket; ensure air can circulate.
2. Slide the fry basket back into the air fryer until it clicks into place.
3. Set the desired cooking temperature and time using the digital control panel. The air fryer features a 60-minute timer.
4. Press the start button to begin cooking.
5. For even cooking, some foods may require shaking the basket halfway through the cooking process. To do this, carefully pull out the basket, shake it gently, and then reinsert it. The air fryer will automatically pause and resume cooking once the basket is reinserted.
6. When the cooking time is complete, the air fryer will beep, and the heating element will turn off.
7. Carefully pull out the fry basket and transfer the cooked food to a plate using tongs. Be cautious of hot steam.
8. Unplug the appliance after use.



Figure 4: Interacting with the digital control panel.



Figure 5: Cooked food inside the air fryer basket.

## 6. COOKING GUIDE

The following table provides general guidelines for cooking various foods. Cooking times and temperatures may vary based on food quantity, size, and desired crispness. Always ensure food is cooked thoroughly to safe internal temperatures.

Food Item	Temperature	Time	Notes
Frozen Fries (thin)	200°C (390°F)	18-22 min	Shake basket 2-3 times
Frozen Fries (thick)	180°C (350°F)	30-35 min	Shake basket 2-3 times
Chicken Drumsticks	180°C (350°F)	22-28 min	Flip halfway
Steak	180°C (350°F)	25-30 min	Flip halfway
Fish Fillet	180°C (350°F)	12-16 min	
Muffins	200°C (390°F)	15-18 min	Use appropriate bakeware

## 7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

- 1. Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
- 2. Clean Basket and Pan:** Remove the fry basket and the non-stick coated fry basket. Wash them in hot water with dish soap and a non-abrasive sponge. For stubborn residue, soak them in hot water for about 10 minutes. They are generally dishwasher safe, but hand washing is recommended to preserve the non-stick coating.
- 3. Clean Interior:** Wipe the interior of the appliance with a damp cloth. If necessary, use a mild detergent. Avoid abrasive cleaners or metal scouring pads.
- 4. Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth.
- 5. Heating Element:** Use a cleaning brush to remove any food residue from the heating element.
- 6. Dry Thoroughly:** Ensure all parts are completely dry before reassembling and storing the appliance.

## 8. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
	Power outlet malfunction.	Test the outlet with another appliance or check the circuit breaker.
Food is not cooked evenly.	Basket is overfilled.	Reduce the amount of food in the basket. Cook in smaller batches.
	Food not shaken/flipped.	Shake or flip ingredients halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use.	Clean the basket and pan thoroughly after each use.
	Excess oil/fat from food.	For fatty foods, drain excess oil from the pan during cooking.
E1 Error Code	Temperature sensor malfunction or overheating.	Unplug the air fryer and let it cool down completely for at least 30 minutes. Ensure proper ventilation around the unit. If the error persists, contact customer support.

## 9. SPECIFICATIONS

- **Model Number:** 4007
- **Brand:** TAURUS
- **Capacity:** 3.6 Liters
- **Power / Wattage:** 1400 Watts
- **Material:** Plastic
- **Color:** Black
- **Item Weight:** 4.67 kg
- **Product Dimensions:** 30.7D x 30.7W x 35.5H centimetres
- **Special Features:** Automatic Shut-Off, Programmable, Temperature Control, Timer

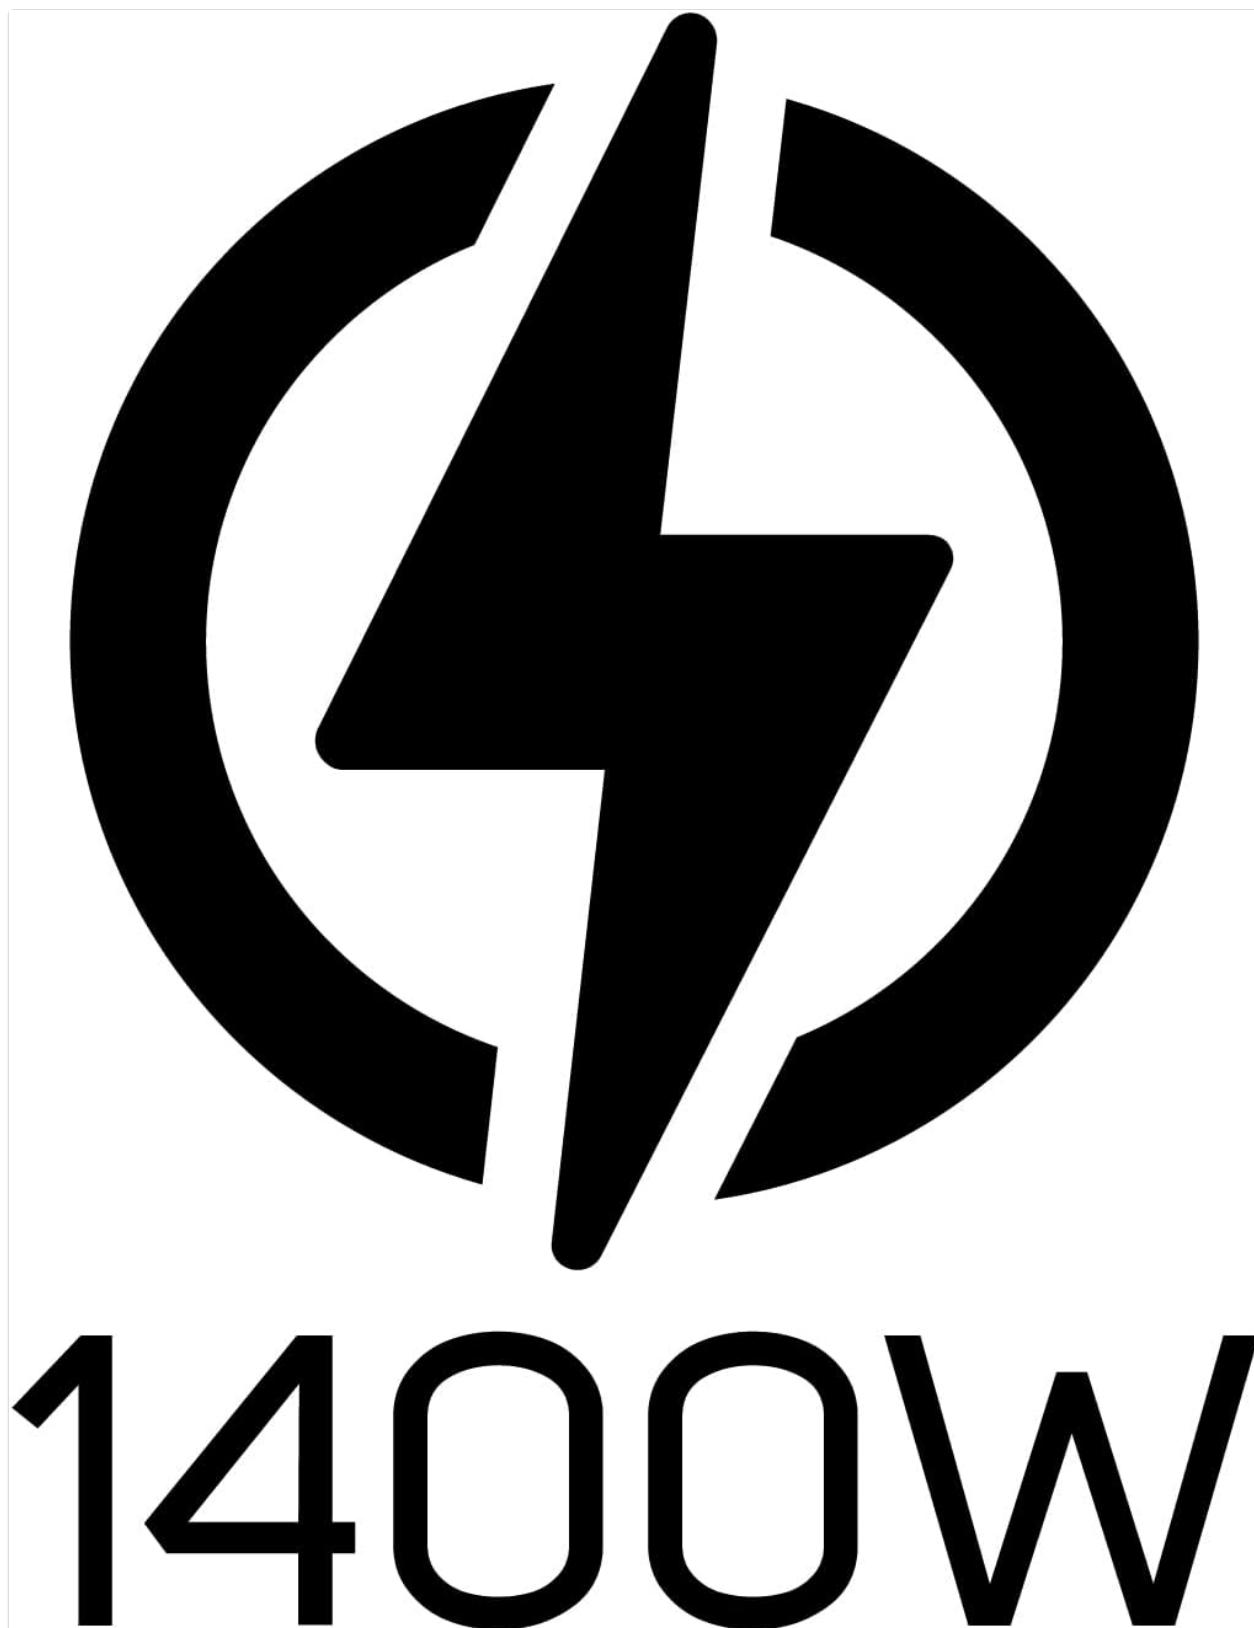


Figure 6: Power rating of 1400 Watts.

## 10. WARRANTY AND SUPPORT

Your TAURUS Fredigora Aire Digital Air Fryer (Model 4007) comes with a comprehensive warranty:

- **Standard Warranty:** 1 Year Retail Warranty.
- **Extended Warranty:** +1 Year Extended Warranty upon online registration. This provides a total of 2 years warranty coverage.

For warranty registration and further support, please visit the official TAURUS appliances website or contact

their customer service.



Figure 7: Warranty information badge.

For technical assistance or spare parts inquiries, please contact TAURUS customer support. Spare part availability information may not be provided directly with the product.