

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MEKO](#) /

› [MEKO 3-in-1 Stylus Pens User Manual](#)

## MEKO B0C5SJ23HT

# MEKO 3-in-1 Stylus Pens User Manual

Model: B0C5SJ23HT | Brand: MEKO

## 1. INTRODUCTION

Thank you for choosing the MEKO 3-in-1 Stylus Pens. This manual provides essential information for the proper setup, operation, and maintenance of your new stylus pens. Designed for high sensitivity and precision, these stylus pens are compatible with a wide range of touchscreen devices, enhancing your digital interaction for various tasks.



Figure 1: MEKO 3-in-1 Stylus Pens with included accessories.

## 2. PRODUCT FEATURES

- **3-in-1 Design:** This upgraded stylus features a precise and sensitive transparent disc tip, along with two different-sized rubber tips (0.18" and 0.27"). This versatile design accommodates various needs, including clicking, writing, drawing, and gaming.

- **High Sensitivity and Accuracy:** The transparent disc tip allows for clear visibility of the contact point, ensuring accurate and responsive interaction. A 180° flexible writing angle provides comfortable use without lag, interruption, or screen scratching.
- **Dual-sized Rubber Tips:** Made from high-quality silicone, the smooth and responsive rubber tips offer excellent wear and aging resistance. They prevent screen scratches and reduce fingerprints, making them ideal for users with long nails or larger fingers for browsing, writing, note-taking, and gaming.
- **Wide Compatibility:** MEKO styluses are universally compatible with all capacitive cell phones, tablets, touchscreen laptops & PCs, and e-readers, including Apple iPad/iPhone/iPod, Samsung Galaxy, Kindle, and more.

# Versatile 3-in-1 Stylus

Effortlessly adapting to any scenario



Figure 2: Detailed view of the versatile 3-in-1 stylus tips.



## Widely Compatible for All Touchscreen Devices

iPhone, iPad, Apple watch, Samsung Galaxy, HUAWEI, Lenovo, Motorola, Tablet, Laptop, Microsoft Surface and etc.

Figure 3: The MEKO stylus is compatible with a broad range of touchscreen devices.

### 3. SETUP

The MEKO 3-in-1 Stylus Pens require no battery or Bluetooth connection, making setup straightforward and immediate.

1. **Unpack:** Remove the stylus pens and any included accessories from the packaging.
2. **Prepare for Use:**
  - To use the transparent disc tip, simply unscrew the protective cap from that end of the pen.
  - The dual rubber tips can be used directly without any preparation.
3. **Begin Use:** The stylus is ready for immediate use on your capacitive touchscreen device.

### 4. OPERATING INSTRUCTIONS


The MEKO stylus pens are designed for intuitive use across various applications.

- **General Navigation:** Use any of the three tips to tap, swipe, and navigate your device's interface just as you would with your finger.
- **Writing and Note-taking:** For precise writing and detailed note-taking, the transparent disc tip is recommended. Its clear design allows you to see exactly where your input is registered on the screen.
- **Drawing and Painting:** The disc tip also provides excellent control for drawing and painting applications, allowing for fine lines and detailed artwork.
- **Gaming and Browsing:** The rubber tips are ideal for general browsing, scrolling, and gaming, offering a smooth and comfortable experience while protecting your screen from fingerprints.
- **Optimal Angle:** The disc tip offers a 180° flexible writing angle, allowing you to hold the stylus comfortably for extended periods without compromising accuracy.

## Record with Ease



Drawing/Painting

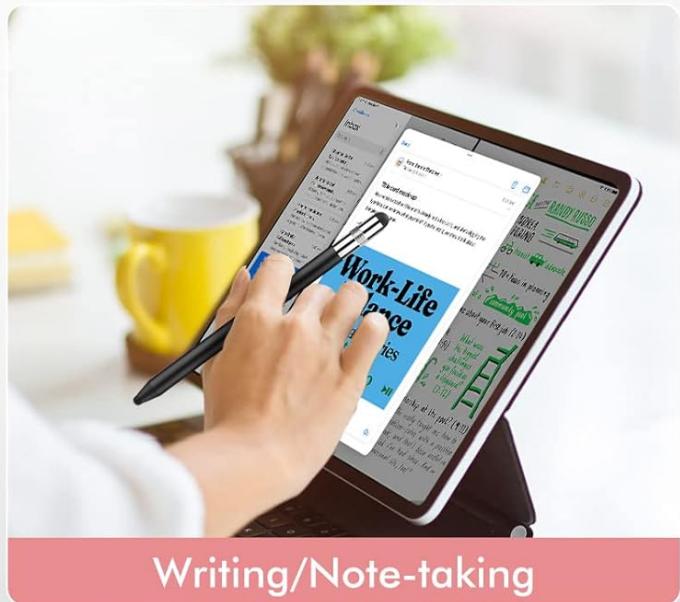

Writing/Note-taking



Clicking small icon

Figure 4: Examples of stylus usage for writing, drawing, and precise clicking.

## 5. MAINTENANCE

To ensure the longevity and optimal performance of your MEKO stylus pens, follow these maintenance guidelines:

- **Cleaning:** Wipe the stylus body and tips with a soft, dry, lint-free cloth. Avoid using abrasive cleaners or solvents.
- **Tip Replacement:** All three tips (disc tip and both rubber tips) are replaceable. Replacement is quick and easy, extending the lifetime of your stylus.
  - a. For rubber tips: Unscrew the old rubber tip, take it off, and replace it with a new one.
  - b. For disc tip: Unscrew the cap, then gently pull out the old disc tip to change it.

Replacement tips are included in the package. For additional replacement disc tips, search ASIN: B016X4QJWE on Amazon.

- **Storage:** Always replace the protective cap on the disc tip when not in use to prevent damage. Store the stylus in a safe place to avoid bending or breaking the tips.



Figure 5: Instructions for replacing stylus tips.

## 6. TROUBLESHOOTING

If you encounter issues with your MEKO stylus, please refer to the following common solutions:

Problem	Possible Cause	Solution
Stylus not responding or inconsistent response.	Screen protector interference, dirty tip, damaged tip, or device compatibility issue.	<ul style="list-style-type: none"><li>Ensure your screen protector is thin and properly applied.</li><li>Clean the stylus tip and device screen thoroughly.</li><li>Inspect the tip for damage; replace if necessary.</li><li>Verify your device is a capacitive touchscreen and compatible with universal styluses.</li></ul>
Screen scratches or marks.	Damaged disc tip, debris on tip, or excessive pressure.	<ul style="list-style-type: none"><li>Ensure the disc tip is clean and free of debris.</li><li>Replace the disc tip if it appears scratched or damaged.</li><li>Apply gentle pressure when using the stylus.</li></ul>
Lag or delay in input.	Device performance, application issue, or dirty screen/tip.	<ul style="list-style-type: none"><li>Close other applications on your device.</li><li>Restart your device.</li><li>Clean the stylus tip and device screen.</li></ul>

## 7. SPECIFICATIONS

Attribute	Detail
Product Dimensions	5.9 x 0.35 x 0.35 inches
Item Weight	0.66 ounces
Material	Aluminum
Color	A-Black/Rose Gold (as reviewed)
Tip Types	Transparent Disc Tip, 0.18" Rubber Tip, 0.27" Rubber Tip
Compatibility	All capacitive cell phones, tablets, touchscreen laptops & PCs, e-readers (e.g., Apple iPad/iPhone/iPod, Samsung Galaxy, Kindle)
Battery Required	No
Bluetooth Required	No

# Compact Design, Maximum Functionality

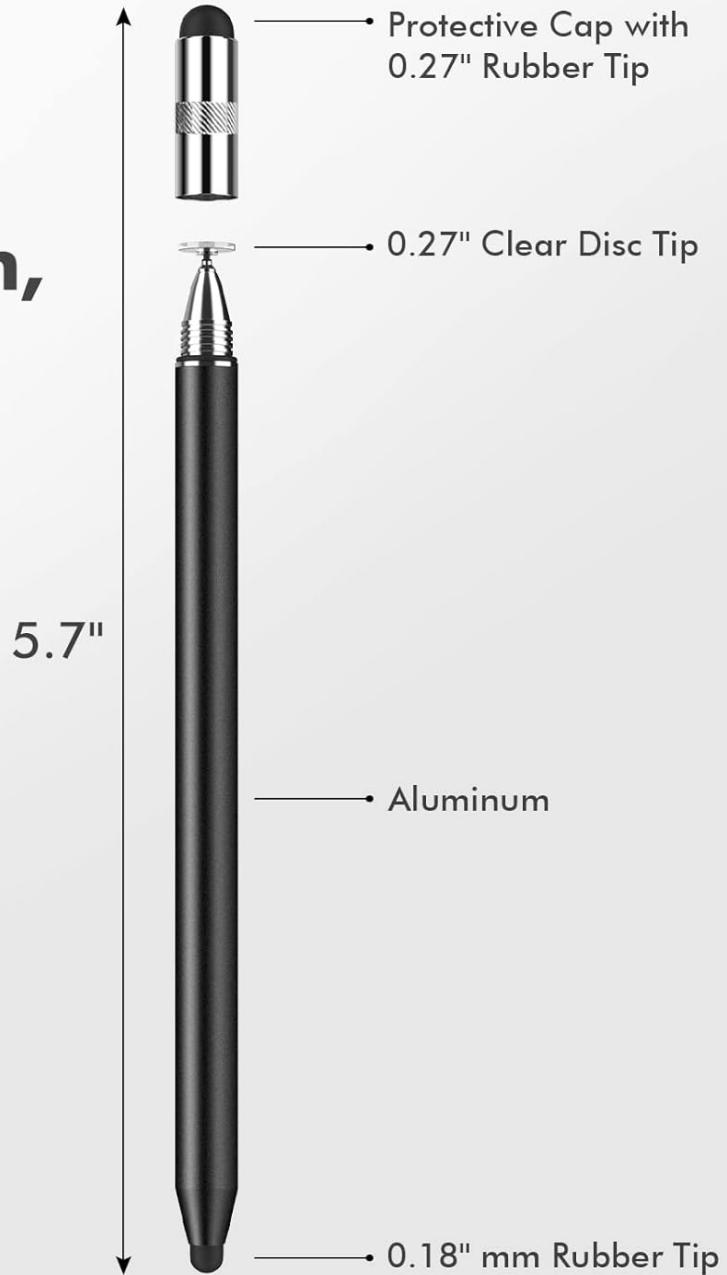


Figure 6: Physical dimensions and components of the MEKO stylus.

## 8. WARRANTY AND SUPPORT

MEKO is committed to providing high-quality products. While specific warranty details are not provided in this manual, please refer to the product packaging or the official MEKO website for the most up-to-date warranty information and customer support contacts.

For further assistance, you may visit the [MEKO Store on Amazon](#).