

Audiocrazy Audiocrazy-001

Audiocrazy Portable AM/FM Radio with Bluetooth

Model: Audiocrazy-001

1. INTRODUCTION

This manual provides instructions for the proper use and care of your Audiocrazy Portable AM/FM Radio with Bluetooth. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.

2. WHAT'S IN THE BOX

- Audiocrazy Portable AM/FM Radio
- Power Adapter
- Owner's Manual (this document)

3. PRODUCT FEATURES

- **AM/FM Radio Tuner:** Wide frequency range (FM 87-108MHz, AM 520-1710KHz) for clear reception.
- **Bluetooth 5.0 Connectivity:** For wireless audio streaming from compatible devices.
- **3-Watt Speaker:** Delivers clear audio output.
- **Headphone Jack:** Standard 3.5mm jack for private listening.
- **AUX Input:** For connecting external audio sources via a 3.5mm cable.
- **Dual Power Options:** Operates via AC power adapter or 4 AA batteries (not included).
- **Portable Design:** Compact and lightweight for easy transport.
- **User-Friendly Controls:** Large tuning dial and volume knob for simple operation.

4. SETUP

4.1 Powering the Radio

The radio can be powered in two ways:

1. **AC Power:** Connect the provided power adapter to the AC input port on the back of the radio and then plug it into a standard wall outlet.
2. **Battery Power:** Open the battery compartment on the back of the radio. Insert 4 AA batteries (not included), ensuring correct polarity (+/-). Close the battery compartment securely.



4 AA Batteries (Not included)

2 Power supply modes



AC Powered (Included)

Image: Rear view of the radio, illustrating the battery compartment for 4 AA batteries and the AC power input port.

4.2 Antenna Adjustment

For optimal AM/FM reception, extend the telescopic antenna fully. Adjust its direction for the clearest signal. For AM reception, the radio has a built-in antenna, but rotating the unit itself may improve reception.

AM FM Portable Radio

24 inch long antenna bring the better radio reception



Image: The radio with its telescopic antenna extended, demonstrating its capability to receive various AM and FM frequencies.

5. OPERATING INSTRUCTIONS

5.1 Basic Controls

Portable & Easy to Use Design



Image: Front view of the radio with labels pointing to the portable handle, the large tuning dial, and the volume knob.

- **Power On/Off & Volume:** Rotate the large knob on the front right to turn the radio on or off and adjust the volume level.
- **Band Selector:** Use the switch on the side or front panel to select between AM, FM, or Bluetooth modes.
- **Tuning:** Rotate the large tuning dial on the front to select your desired AM or FM station.

5.2 Radio Operation (AM/FM)

1. Turn the radio on using the volume knob.
2. Select either AM or FM using the band selector switch.
3. Slowly rotate the tuning dial until you hear your desired station clearly. Adjust the antenna for better reception if needed.

5.3 Bluetooth Operation

1. Switch the band selector to 'BT' or 'Bluetooth' mode. The radio will enter pairing mode, indicated by a flashing light or audio prompt.
2. On your smartphone or other Bluetooth-enabled device, go to Bluetooth settings and search for available

devices.

3. Select 'Audiocrazy Radio' (or similar name) from the list to pair. Once paired, the indicator light will become solid, and you will hear a confirmation sound.
4. Start playing audio on your connected device. The sound will now play through the radio's speaker.



Image: The radio displaying a Bluetooth connection icon, with a smartphone nearby showing a music player interface.

5.4 Using the Headphone Jack

To listen privately, plug any standard 3.5mm headphones into the 'PHONE' jack located on the side of the radio. The radio's speaker will automatically mute when headphones are connected.

Stereo Earphone Jack



Headphone jack provides a private listening experience.



Image: A person wearing headphones, with an inset showing a headphone plug being inserted into the radio's headphone jack.

5.5 Using the AUX Input

Connect an external audio device (e.g., MP3 player) to the 'AUX IN' port on the side of the radio using a 3.5mm audio cable (not included). Switch the band selector to 'AUX' mode. Audio from the external device will play through the radio's speaker.

Video: An overview of the Audiocrazy radio's features, including AM/FM reception, AUX input, headphone jack, Bluetooth connectivity, speaker performance, and dual power supply options.

6. MAINTENANCE

- **Cleaning:** Wipe the radio with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** If the radio will not be used for an extended period, remove the batteries to prevent leakage.
- **Storage:** Store the radio in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Batteries are dead or incorrectly inserted; AC adapter not connected or faulty.	Replace batteries, check battery polarity, ensure AC adapter is securely connected and functional.
Poor radio reception	Antenna not extended or positioned correctly; weak signal in the area.	Fully extend and adjust the telescopic antenna. For AM, rotate the radio. Try moving the radio to a different location.
Bluetooth not connecting	Radio not in Bluetooth mode; device not in pairing mode; radio already connected to another device.	Ensure radio is in Bluetooth mode. Put your device in pairing mode. Disconnect from other Bluetooth devices. Restart both radio and device.
No sound from speaker (headphones unplugged)	Volume too low; radio muted; incorrect mode selected.	Increase volume. Ensure headphones are unplugged. Verify correct mode (AM/FM/BT/AUX) is selected.

8. SPECIFICATIONS

Feature	Detail
Model Number	Audiocrazy-001
Product Dimensions	8.66"L x 3"W x 5"H (220x75x128 mm)
Item Weight	1.37 lbs (0.62 kg)
Radio Bands Supported	AM (520-1710KHz), FM (87-108MHz)
Connectivity Technology	Bluetooth 5.0
Speaker Output	3 Watts
Power Source	AC Powered (Adapter Included), 4 AA Batteries (Not Included)
Special Features	Built-In AM Antenna, Lightweight, Portable, Headphone Jack, AUX Input

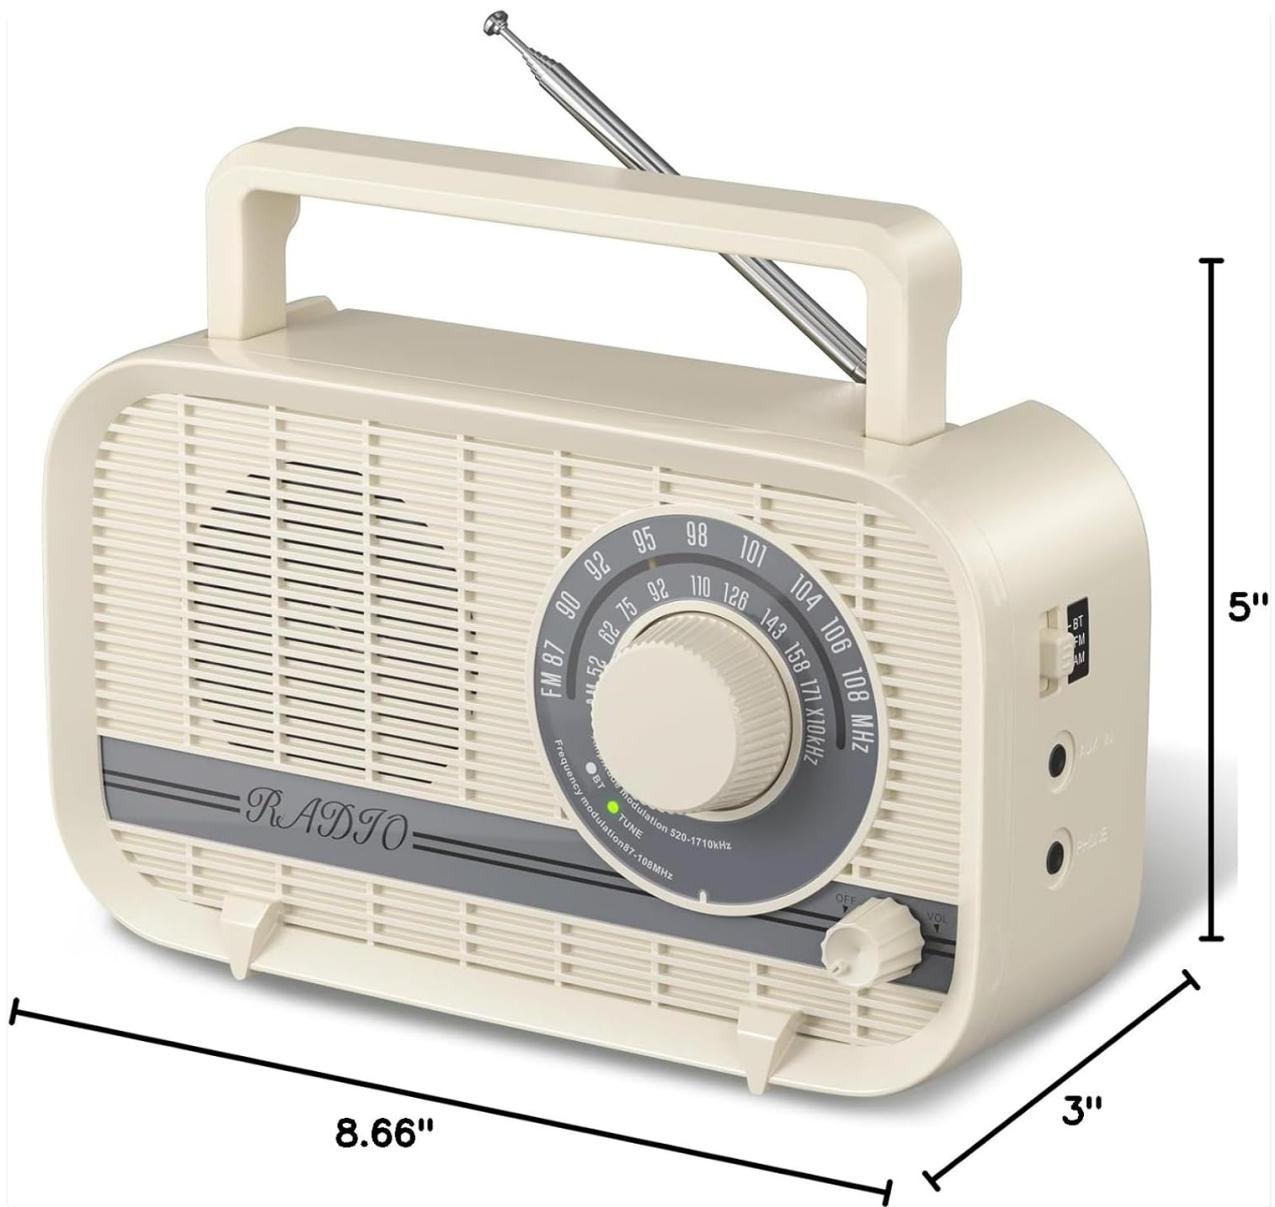


Image: The radio shown with its physical dimensions indicated for length, width, and height.

9. WARRANTY AND SUPPORT

Audiocrazy products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Audiocrazy website. Keep your purchase receipt as proof of purchase for warranty claims.