

Step2 B0C5VNWTLK

Step2 Elegant Edge Kitchen Set & Big Builders Pro Workbench Instruction Manual

Model: B0C5VNWTLK

INTRODUCTION

Welcome to the world of imaginative play with your new Step2 Elegant Edge Kitchen Set and Big Builders Pro Kids Workbench. This manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure a safe and enjoyable experience for your child. Both playsets are designed for durability and interactive fun, encouraging fine motor skills, role-playing, and social development.

PRODUCT OVERVIEW

Elegant Edge Kitchen Set



The Elegant Edge Kitchen Set features a modern design with faux subway tile backsplash, premium appliance finishing, a large faux granite countertop, stonework detail, frost effect on cabinet windows, and a molded-in farmhouse-style apron sink with a gooseneck faucet. It includes over 70 toy kitchen accessories for realistic pretend play.

- **Interactive Features:** Stovetop lights and

sounds, working oven and refrigerator lights, blender and popcorn stovetop attachments.

- **Storage:** Upper storage bins, windowed cabinets, spice rack, under-sink storage area, hanging hooks, and shelving.
- **Dimensions:** Approximately 50" H x 65.75" W x 14" D.

Big Builders Pro Kids Workbench



The Big Builders Pro Kids Workbench provides a comprehensive setup for pretend woodworking and carpentry. It comes with 45 toy workbench accessories, including realistic wood pieces made of flexible foam.

- **Interactive Features:** Electronic drill, working spring action vise, overhead work light, and built-in pretend table saw.
- **Accessories:** Includes a birdhouse set that changes color when painted with water using the included brush, roller, or spray bottle.
- **Dimensions:** Approximately 34" H x 38.5" W x 27.5" D.



Combined view of the Step2 Elegant Edge Kitchen Set and Big Builders Pro Kids Workbench.

Assembly is required for both playsets. Please follow the included manufacturer's instructions carefully. An electric drill is recommended for faster and easier assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify all pieces are present against the parts list provided in the manufacturer's manual.
2. **Assemble Base Structures:** Begin by assembling the main base units for both the kitchen and workbench. Ensure all connections are secure.
3. **Attach Panels and Features:** Install side panels, backsplashes, and countertops. Secure interactive components such as the sink, stovetop, oven, and refrigerator/freezer doors for the kitchen, and the vise, saw, and pegboard for the workbench.
4. **Install Electronic Components:** Insert required batteries (not included) into the designated compartments for the stovetop, oven, refrigerator, electronic drill, and overhead light. Ensure proper polarity.
5. **Organize Accessories:** Place the various play food items, utensils, pots, pans, and tools into their designated storage areas.



Refer to the dimensions for proper placement and space allocation.

OPERATING INSTRUCTIONS

Kitchen Set Operation

- **Stovetop:** Turn the red knobs to activate stovetop lights and sounds.
- **Oven:** Open the oven door to place play food inside. The interior light will glow, simulating baking.
- **Refrigerator:** Open the refrigerator door to access storage shelves. The interior light will illuminate upon closing the door.
- **Blender:** Place the blender on the designated stovetop burner. Press the button to activate blending action and sounds.
- **Popcorn Maker:** Place the popcorn maker on the designated stovetop burner. Press the button to activate popping action and sounds.
- **Coffee Maker:** Insert a K-cup pod into the coffee maker and press the lever to simulate brewing.
- **Sink:** The gooseneck faucet can be moved, and the sink basin is suitable for pretend washing.

- **Cutting Board:** Use the included knife to "cut" the Velcro-attached fruits and vegetables.



A variety of accessories enhance the play experience.

Workbench Operation

- **Electronic Drill:** Activate the electronic drill for realistic building sounds.
- **Working Vise:** Use the vise to hold play wood pieces securely in place.
- **Overhead Light:** Turn on the overhead light for improved visibility during play.
- **Table Saw:** Utilize the built-in pretend table saw for cutting play wood.
- **Birdhouse Set:** Assemble the birdhouse pieces and use water with the provided brush, roller, or spray bottle to observe color changes.



Children engaging with the Step2 Big Builders Pro Kids Workbench.

MAINTENANCE

- **Cleaning:** Wipe down all surfaces with a damp cloth and mild soap as needed. Avoid abrasive cleaners.
- **Battery Replacement:** Replace batteries in electronic components (stovetop, oven, refrigerator, drill, light) when sounds or lights dim. Refer to the original manufacturer's instructions for battery type and placement.
- **Storage:** Store the playsets indoors when not in use to protect them from extreme weather conditions and prolong their lifespan. Utilize the integrated storage bins and shelves for accessories.
- **Inspection:** Periodically inspect all parts for wear and tear, loose connections, or damage. Replace any broken or worn parts immediately to ensure safety.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Electronic features (lights/sounds) not working.	Dead or incorrectly installed batteries.	Check battery compartment for correct polarity. Replace with fresh batteries.
Parts feel loose or wobbly.	Screws or connections have loosened over time.	Tighten all screws and ensure all interlocking parts are fully engaged.
Accessories are missing.	Accessories may have been misplaced during play or storage.	Check all storage areas and around the play area. Contact Step2 customer support for replacement parts if necessary.
Birdhouse color change not working.	Insufficient water or incorrect application.	Ensure the brush/roller/spray bottle is adequately wet. Apply water evenly to the birdhouse surface.

SPECIFICATIONS

- **Brand:** Step2
- **Model:** B0C5VNWTLK
- **Material:** Durable Plastic
- **Country of Origin:** Made in the USA of US and imported parts.
- **Kitchen Set Dimensions (Assembled):** 50" H x 65.75" W x 14" D
- **Workbench Dimensions (Assembled):** 34" H x 38.5" W x 27.5" D
- **Included Accessories:**
 - Kitchen Set: 70+ pieces (dishes, utensils, play food, coffee pot with single-serve pods, pretend cutting board, copper cookware, etc.)
 - Workbench: 45 pieces (tools, birdhouse set, flexible foam wood pieces, etc.)
- **Power Source (Electronic Features):** Batteries (not included)

WARRANTY AND SUPPORT

Step2 products are known for their unmatched strength and durability. For specific warranty information, product registration, or to order replacement parts, please visit the official Step2 website or contact their customer support directly. Keep your purchase receipt for warranty claims.

Contact Information: Refer to the packaging or the official Step2 website for the most current customer support details.

