

ECONTROLLY RC-707M

ECONTROLLY RC-707M Remote Control User Manual

Model: RC-707M | Brand: ECONTROLLY

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ECONTROLLY RC-707M replacement remote control. This remote is designed to function as a direct replacement for the original remote controls of various Onkyo AV Receiver models.

Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your user experience.

PRODUCT OVERVIEW

The ECONTROLLY RC-707M is an infrared replacement remote control. It requires no programming and is ready to use once batteries are installed.

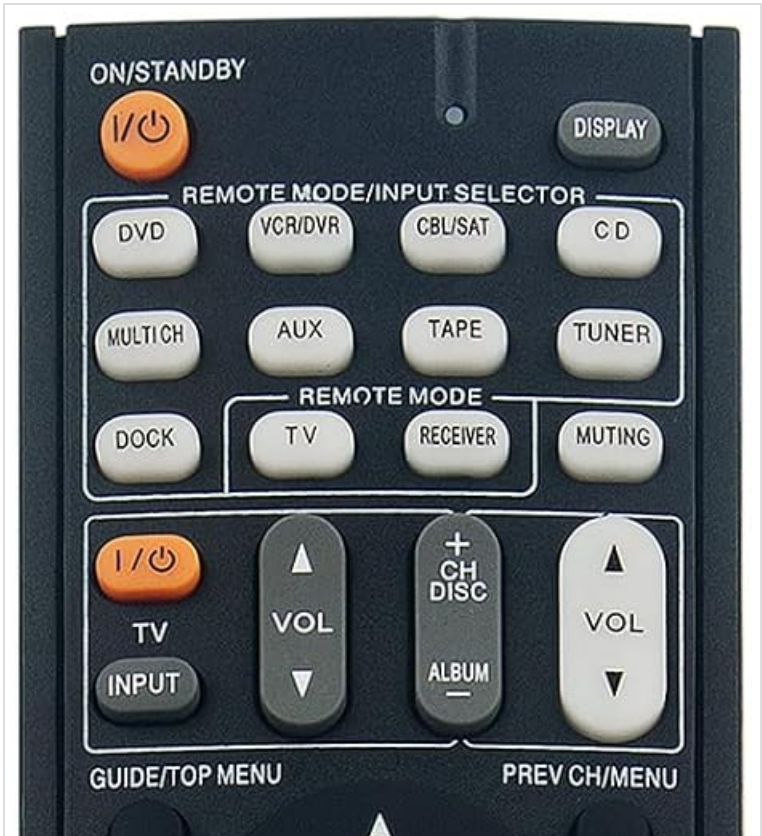




Figure 1: Front view of the ECONTROLLY RC-707M remote control, showing all buttons and layout.



Figure 2: Angled view of the ECONTROLLY RC-707M remote control, highlighting its ergonomic design.

SETUP

1. Battery Installation

The RC-707M remote control requires two (2) AA ALKALINE batteries for operation. Rechargeable batteries are not recommended.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

Important: Batteries are not included with the remote control.

OPERATING INSTRUCTIONS

The ECONTROLLY RC-707M remote control is pre-programmed and requires no additional setup for compatible Onkyo AV Receivers. Simply point the remote control towards your AV Receiver and press the desired function button.

Compatible Onkyo AV Receiver Models:

- HT-S6100
- HT-R560
- HT-R667
- HTP-750X
- HT-S5100

The remote functions identically to the original remote for these models, providing control over power, volume, input selection, menu navigation, and playback controls.

MAINTENANCE

Battery Care and Replacement

- Replace batteries when the remote control's response becomes sluggish or inconsistent.
- Always replace both batteries at the same time with new AA ALKALINE batteries.
- Do not mix old and new batteries, or different types of batteries (e.g., alkaline and rechargeable).
- Remove batteries if the remote control will not be used for an extended period to prevent leakage and damage.
- Dispose of used batteries according to local regulations.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with proper polarity (+/-).
 - Replace old batteries with new AA ALKALINE batteries.
 - Ensure there are no obstructions between the remote control and the AV Receiver's infrared sensor.
 - Confirm the remote is pointed directly at the AV Receiver.
- **Specific functions not working:**
 - Verify that your AV Receiver model is listed in the "Compatible Onkyo AV Receiver Models" section.
 - Some advanced functions might be specific to the original remote's unique features or require specific receiver settings.

SPECIFICATIONS

Feature	Detail
Model	RC-707M
Brand	ECONTROLLY

Compatibility	Onkyo AV Receiver models: HT-S6100, HT-R560, HT-R667, HTP-750X, HT-S5100
Transmission Type	Infrared (IR)
Power Source	2 x AA ALKALINE batteries (not included)
Product Dimensions	10 x 4 x 1.5 inches (approximate)
Item Weight	2.12 ounces (without batteries)
Special Feature	Pre-programmed, no setup required

SUPPORT

For any questions or assistance regarding your ECONTROLLY RC-707M remote control, please refer to the seller's contact information on the platform where the product was purchased.

© 2023 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C5WYYZ74>

More documents and user manuals: <https://manuals.plus/>