

ECONTROLLY RC-1158

ECONTROLLY RC-1158 Replacement Remote Control User Manual

For Denon AVR-1312, DHT-1312BA, and DHT-1312XP AV Receivers

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY RC-1158 replacement remote control. This remote is designed to function as a direct replacement for the original remote controls of various Denon AV Receiver models, including AVR-1312, DHT-1312BA, and DHT-1312XP. It is an infrared remote control and does not require any programming for operation.

2. PRODUCT OVERVIEW

The ECONTROLLY RC-1158 remote control is a pre-programmed infrared device. It features a layout similar to the original Denon remote, ensuring familiar and intuitive operation. The remote is black in color and designed for comfortable handling.





Image 1: Front view of the ECONTROLLY RC-1158 remote control, displaying its full button layout and design.



Image 2: Angled view of the ECONTROLLY RC-1158 remote control, showing its side profile and button arrangement.

3. SETUP: BATTERY INSTALLATION

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. **Important:** Do not use rechargeable batteries. Only AAA ALKALINE batteries are recommended for optimal performance and to prevent damage.
5. Replace the battery compartment cover by sliding it back into place until it clicks securely.

The remote control is now ready for use with your compatible Denon AV Receiver.

4. OPERATING INSTRUCTIONS

The ECONTROLLY RC-1158 remote control is pre-programmed and requires no additional setup or code entry. Simply point the

remote control towards your Denon AV Receiver and press the desired function button.

Basic Functions:

- **POWER (ON/STANDBY):** Press the **ON** button to power on the receiver. Press the **STANDBY** button to put the receiver into standby mode.
- **INPUT SELECTORS (BD, DVD, TUNER, etc.):** Press the corresponding button to select the desired input source.
- **VOLUME (+/-):** Adjust the master volume level of the receiver.
- **MUTE:** Temporarily silence the audio output. Press again to restore sound.
- **MENU / ENTER / NAVIGATION:** Use these buttons to navigate through the receiver's on-screen menu system and confirm selections.
- **QUICK SELECT (1-4):** Access pre-configured settings or favorite inputs directly.
- **AUDIO ADJUST:** Access audio settings.
- **SURROUND:** Cycle through various surround sound modes.
- **NIGHT:** Activate or deactivate night mode for reduced dynamic range.
- **RESTORE:** Restore certain settings.
- **TONE:** Adjust tone controls (bass/treble).

For detailed functions of specific buttons, please refer to your Denon AV Receiver's original instruction manual.

5. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA ALKALINE batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.
- **Avoid Exposure:** Keep the remote control away from direct sunlight, heat sources, moisture, and extreme temperatures.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	• Dead or incorrectly inserted batteries. • Obstruction between remote and receiver. • Remote control sensor on receiver is blocked. • Remote control is out of range.	• Replace batteries with new AAA ALKALINE batteries, ensuring correct polarity. • Remove any objects blocking the line of sight between the remote and the receiver. • Ensure the receiver's remote sensor is clear. • Move closer to the receiver (within approximately 20 feet / 6 meters).
Remote control works intermittently.	• Low battery power. • Interference from other electronic devices.	• Replace batteries. • Ensure no strong light sources (e.g., direct sunlight, fluorescent lights) are interfering with the receiver's sensor.

7. SPECIFICATIONS

Model:	RC-1158
Brand:	ECONTROLLY
Compatibility:	Denon AVR-1312, AVR1312, DHT-1312BA, DHT1312BA, DHT-1312XP, DHT1312XP AV Receivers
Power Source:	2 x AAA ALKALINE Batteries (not included)
Special Feature:	Pre-programmed, no setup required
Color:	Black
Product Dimensions:	10 x 4 x 1.5 inches (approximate)
Item Weight:	2.12 ounces (without batteries)

8. SUPPORT AND CONTACT INFORMATION

If you encounter any questions or issues regarding the ECONTROLLY RC-1158 replacement remote control, please do not hesitate to contact our customer support team. Refer to your purchase documentation or the seller's contact information for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

