

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SUSTEAS](#) /

› [SUSTEAS 3-in-1 Electric Indoor Grill & Panini Press \(Model SL-107A\) - Instruction Manual](#)

SUSTEAS SL-107A

SUSTEAS 3-in-1 Electric Indoor Grill & Panini Press (Model SL-107A) - Instruction Manual

Your guide to safe and efficient operation of your appliance.

PRODUCT OVERVIEW

The SUSTEAS 3-in-1 Electric Indoor Grill and Panini Press, Model SL-107A, is a versatile kitchen appliance designed for grilling a variety of foods. Its compact design and multiple cooking modes make it suitable for preparing sandwiches, meats, and vegetables with ease.



Image: The SUSTEAS 3-in-1 Electric Indoor Grill shown in closed position, grilling four sandwiches with melted cheese.

SETUP

1. **Unpacking:** Carefully remove the grill and all packaging materials. Retain packaging for future storage or transport.
2. **Placement:** Place the appliance on a stable, flat, and heat-resistant surface. Ensure there is adequate space around the grill for ventilation.
3. **Initial Cleaning:** Before first use, wipe the non-stick cooking plates with a damp cloth to remove any manufacturing residues. Dry thoroughly.
4. **Grease Tray:** Ensure the removable grease tray is correctly inserted into its slot at the back of the unit.

OPERATING INSTRUCTIONS

Power and Temperature Control

- **Power On:** Plug the power cord into a standard electrical outlet. The red indicator light will illuminate, signaling that the unit is receiving power.
- **Set Temperature:** Turn the temperature control dial to your desired heat setting. The grill offers a range from approximately 360°F to 410°F. The green indicator light will illuminate when the grill has reached the selected temperature, indicating it is ready for cooking.

Cooking Modes

- **Closed Position (Panini Press / Contact Grill):** This mode is ideal for grilling sandwiches, paninis, and thicker cuts of meat or vegetables. The floating hinge design allows the top plate to adjust to the thickness of your food, ensuring even cooking and grill marks on both sides.
- **Open Position (Full Grill):** To use as an open grill, locate the release button on the side of the unit. Press the button and gently push the top plate back until it lies flat, creating a larger, double-sided grilling surface. This mode is suitable for cooking multiple items simultaneously, such as hotdogs, pancakes, or various vegetables.

Your browser does not support the video tag.

Video: Demonstrates the preparation of a panini using the grill in its closed position, highlighting the floating hinge feature.

Your browser does not support the video tag.

Video: Shows the grill in its open, flat position, cooking hotdogs and pancakes simultaneously, demonstrating its versatility.

Cooking Tips

- **Utensils:** Always use heat-resistant, non-metal utensils (e.g., silicone or wooden) to avoid damaging the non-stick coating.
- **Grease Management:** The integrated grease tray collects excess fats and oils, promoting healthier cooking and easier cleanup. Ensure it is properly placed before cooking.

MAINTENANCE

1. **Cool Down:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Cleaning Plates:** Wipe the non-stick cooking plates with a damp, soapy cloth. For stubborn residue, a soft brush or sponge can be used. Rinse with a clean, damp cloth. Do not use abrasive cleaners, metal scouring pads, or sharp objects, as these can damage the non-stick surface.
3. **Grease Tray:** Remove the grease tray, empty its contents, and wash it with warm, soapy water. Rinse thoroughly and dry before reinserting.
4. **Exterior:** Wipe the exterior of the grill with a damp cloth.
5. **Important:** Never immerse the main unit of the appliance in water or any other liquid.

TROUBLESHOOTING

- **Appliance Not Heating:** Ensure the power cord is securely plugged into a functional electrical outlet. Verify that the temperature dial is set to an active heating level (not "OFF"). Check if the red and green indicator lights are functioning as described in the Operating section.
- **Food Sticking:** Ensure the non-stick plates are clean and free of residue. Lightly brush cooking oil on the plates before preheating for certain foods. Avoid using metal utensils that can damage the non-stick coating.
- **Uneven Cooking:** Ensure the appliance is preheated to the correct temperature before adding food. Distribute food evenly across the cooking plates. For thicker items, allow more cooking time or adjust temperature as needed.

SPECIFICATIONS

- **Product Dimensions:** 13 x 12.87 x 4.92 inches
- **Item Weight:** 6.76 pounds
- **Item Model Number:** SL-107A
- **Brand:** SUSTEAS
- **Wattage:** 1500 watts
- **Style:** Modern
- **Number of Settings:** 4 (referring to temperature levels)

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the documentation included with your SUSTEAS 3-in-1 Electric Indoor Grill & Panini Press (Model SL-107A) or visit the official SUSTEAS website. These resources provide comprehensive details regarding product guarantees, service, and contact information for assistance.

Related Documents - SL-107A



[SUSTEAS SL-107A Electric Grill Instruction Manual](#)

Comprehensive instruction manual for the SUSTEAS SL-107A Electric Grill, covering safety precautions, operating components, handling, usage tips, cleaning, and product specifications.



[Susteas Electric Steamer Instruction Manual](#)

This instruction manual provides detailed information on the safe operation, application, cleaning, and maintenance of the Susteas Electric Steamer. It includes technical specifications, product structure diagrams, operation panel guidance, and fault analysis.




[SUSTEAS Vegetable Grater Instruction Manual](#)

Comprehensive guide for the SUSTEAS Vegetable Grater, covering product parts, installation, blade changing, materials, and environmental disposal information.



[Smart BBQ Drop-in & Side Burner User Manual | 4000DG-SL-SS/BLK](#)

Comprehensive user manual for the Smart Outdoor Living Drop-in BBQ and Side Burner (models 4000DG-SL-SS/BLK, SMA-DSG0010-SS/BLK). Includes installation, safety, operation, and maintenance guides.

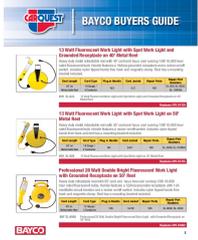

[Bayco Buyer's Guide: Work Lights and Extension Cords](#)

Comprehensive buyer's guide for Bayco work lights, extension cords, and related accessories, featuring detailed specifications, part numbers, and product descriptions.