

[Manuals.plus](#) /

› [MINIBEAR](#) /

› MINIBEAR Instant Print Camera User Manual

MINIBEAR D2

MINIBEAR Instant Print Camera User Manual

Model: D2

1. PRODUCT OVERVIEW

The MINIBEAR Instant Print Camera (Model D2) is a versatile digital camera designed for children, featuring instant print capabilities without the need for ink. It supports high-resolution photos and videos, includes fun creative options, and is built with durability in mind for young users.



Figure 1: MINIBEAR Instant Print Camera with included accessories (print paper rolls, 32GB SD card, lanyard).

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x MINIBEAR Kids Instant Camera
- 1 x Protective Case
- 1 x Lanyard
- 1 x 32GB Memory Card
- 3 x Print Paper Rolls
- 1 x USB Charging Cable
- 1 x User Manual (this document)



Figure 2: Complete package contents of the MINIBEAR Instant Print Camera.

3. SETUP

3.1. Charging the Camera

Before first use, fully charge the camera. Connect the provided USB cable to the camera's charging port and to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show the charging status.

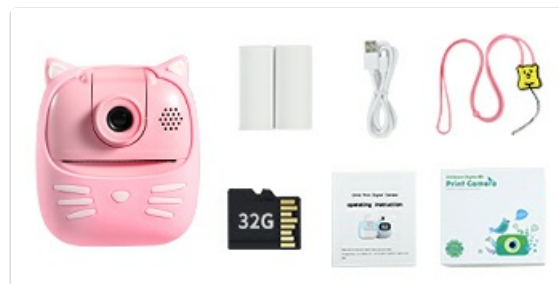


Figure 3: USB charging port location on the camera.

3.2. Inserting the Memory Card

The camera comes with a 32GB TF (MicroSD) card. Locate the memory card slot on the side of the camera. Insert the TF card with the gold contacts facing down until it clicks into place. To remove, push the card in again until it springs out.

Camera Introduction



Figure 4: Diagram showing the memory card slot and other camera components.

3.3. Loading Print Paper

The camera uses thermal paper for instant prints. Follow these steps to load a new roll:

1. Open the camera door where the paper roll is inserted.
2. Place the new paper roll into the compartment, ensuring the paper feeds from the bottom and out towards the front of the camera. If the printing is unclear, adjust the "Print Density" in camera settings (values 4 or 5 are recommended for clearest prints).
3. Close the camera door, leaving a small piece of paper extending outside the camera.



Figure 5: Step-by-step guide for loading thermal print paper.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

Press and hold the Power button (usually marked with a power symbol) to turn the camera on or off.

4.2. Taking Photos

The camera features a 180° reversible lens, allowing for both front-facing and selfie shots.

1. Rotate the lens to your desired direction (front or rear).
2. Frame your shot using the display screen.
3. Press the Shutter/Confirm button to capture the photo. The camera supports 5x digital zoom and auto-focus.



Figure 6: The 180° reversible lens for versatile photography.

4.3. Printing Photos

After taking a photo, it is saved to the memory card. To print a photo:

1. Navigate to the album/gallery mode using the navigation buttons.
2. Select the photo you wish to print.
3. Press the Print button. The photo will print in approximately 3 seconds.

The camera uses thermal printing technology, requiring no ink. If prints are faint, adjust the "Print Density" setting (refer to Setup section).



Figure 7: The camera's instant print function.

4.4. Video Recording

The camera supports 1080P HD video recording.

1. Switch to video recording mode from the main menu.
2. Press the Shutter/Confirm button to start recording.
3. Press the Shutter/Confirm button again to stop recording.

The camera can record for 2-3 hours continuously on a full charge.



Figure 8: Camera interface showing video recording function.

4.5. Time-Lapse Function

The time-lapse feature allows the camera to capture photos at set intervals and combine them into a video.

1. Select the time-lapse mode from the camera's menu.
2. Choose the desired interval (e.g., 2s, 5s, 10s).
3. Start the time-lapse capture.



Figure 9: Time-lapse function with adjustable intervals.

4.6. Games and Music Player

The camera includes two puzzle games for entertainment and a music player. To use the music player, download MP3 files to the 32GB memory card via a computer.



Figure 10: Accessing the music player function.



Figure 11: Accessing the puzzle games.

4.7. Transferring Files

Connect the camera to a computer using the provided USB cable to transfer photos and videos. The camera will appear as a removable disk drive, allowing you to copy files to your computer.



Figure 12: Connecting the camera to a computer for file transfer.

5. MAINTENANCE

5.1. Cleaning

Use a soft, dry cloth to clean the camera body and lens. Do not use liquid cleaners or abrasive materials.

5.2. Storage

Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Use the provided protective case and lanyard to prevent damage.



Figure 13: The camera with its protective silicone case.

6. TROUBLESHOOTING

- **Camera Freezes:** If the camera freezes, use a thin pin (not included) to press the reset button located near the charging port.
- **Unclear Prints:** Adjust the "Print Density" setting in the camera's menu to a higher value (e.g., 4 or 5). Ensure the paper roll is inserted correctly.
- **No Power:** Ensure the camera is fully charged. If the issue persists, try a different USB charging cable or power adapter.

7. SPECIFICATIONS

Feature	Detail
Model Name	D2
Photo Resolution	50 Million Pixels (interpolated)
Video Resolution	1920x1080P (Full HD)
Lens Type	180° Reversible Lens
Zoom	5x Digital Zoom
Printing Technology	Thermal (No Ink Required)
Memory	32GB TF Card (Included)
Battery Type	1 Lithium Polymer Battery (Included)
Continuous Video Recording	2-3 Hours
Product Dimensions	6.3 x 5.7 x 2.3 inches

Item Weight	1 pound
Recommended Age	36 months - 15 years

8. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your MINIBEAR Instant Print Camera, please contact MINIBEAR customer service through the retailer's platform or visit the official MINIBEAR website. Please retain your proof of purchase for warranty claims.

© 2025 MINIBEAR. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question