

BTF-LIGHTING RC03RFB+1XC03RF

BTF-LIGHTING RF 2.4GHz Wireless Remote and C03RF Tuya RGB LED Controller Kit User Manual

Model: RC03RFB + C03RF

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your BTF-LIGHTING RF 2.4GHz Wireless Remote (RC03RFB) and C03RF Tuya RGB LED Controller Kit. This kit is designed to control PWM RGB LED strips, offering versatile lighting options and smart home integration.

2. SAFETY INFORMATION

- Ensure the power supply voltage matches the requirements of your LED strip and controller (DC5V/DC12V/DC24V).
- Do not exceed the maximum allowable current for the controller's power interfaces (5A and 12A respectively).
- This product is intended for indoor use only.
- Keep the device away from water, moisture, and high temperatures.
- Do not attempt to disassemble or modify the device. Contact qualified personnel for service.
- Batteries for the remote control are not included and must be purchased separately.

3. PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1x RC03RFB Wireless Remote
- 1x C03RF Tuya Controller
- 1x RF Remote Bracket
- 2x Screws

- 1x Double-sided Adhesive Pad
- 1x RC03RF Remote Control Manual
- 1x C03RF Controller Manual

Note: The Tuya Gateway (GW01W) and 3A batteries for the remote are not included and must be purchased separately.



Image: Components of the BTF-LIGHTING RF 2.4GHz Wireless Remote and C03RF Tuya RGB LED Controller Kit, including the remote, controller, and mounting bracket.

4. SPECIFICATIONS

Feature	Description
Model Number	RC03RFB+1XC03RF
Compatible Lights	PWM 5050SMD, 3528SMD, 5630SMD RGB, FCOB, COB RGB 4-wire (+ R G B) LED strip, Neon Rope light. Not compatible with SPI LED strips (e.g., WS2811, WS2812B).

Voltage Support	DC5V, DC12V, DC24V
Max Current (Controller)	5A and 12A (depending on power interface)
Wireless Technology	2.4GHz RF Wireless Transmission
Control Range	Up to 98 feet (30 meters) in open environments
Group Control	4-zone group control, no device limits per zone
Auto-Transmitting Function	Signals transmit between controllers within 30m for extended range
Smart Home Integration	Works with Tuya Gateway (GW01W) for Smart Life/Tuya Smart APP, Alexa, Google Home (Gateway sold separately)
Remote Features	Touch wheel for color selection, brightness/color adjustment, dynamic modes, speed control, zone control
Material	Plastic
Usage	Indoor use only

5. SETUP

5.1. Wiring the LED Controller

Ensure your LED strip is compatible with this controller (PWM RGB 4-wire). Connect the LED strip to the controller's output terminals (V+, R, G, B) and the appropriate DC power supply to the controller's input terminals (V+, V-). The input voltage must match the voltage of your LED strip (e.g., 12V strip requires a 12V power supply).



Image: Diagram illustrating the connection of a power supply and an RGB LED strip to the C03RF controller.

5.2. Remote Control Pairing

To pair the RC03RFB remote with the C03RF controller:

1. Ensure the controller is powered off.
2. Power on the controller.
3. Within 3 seconds of powering on, press the 'ON' button on the remote control.
4. The connected LED strip should flash to indicate successful pairing.

5.3. Tuya Gateway Connection (Optional)

For smart home integration and app control, a GW01W Tuya Gateway (sold separately) is required. Follow these steps:

1. **Power Your Light Sources:** Connect the LED strip to the power supply and the C03RF controller.
2. **Power the GW01W Tuya Gateway:** Install the gateway within 30m of your lights and near your WiFi router.
3. **Download the Smart Life or Tuya Smart App:** Create an account, add the device, then select the

device working WiFi and enter the password. Ensure to select 2.4G WiFi. The gateway indicator should show blue light (Linking). When the light shows green light, the connection is successful.

4. **Link the Lights or Controller to GW01W Gateway:** Switch off the lamps you want to link, then switch them on again. Press the 'SET' button once on the 2.4G gateway within 5 seconds. The lights will blink 3 times slowly, indicating successful linking.

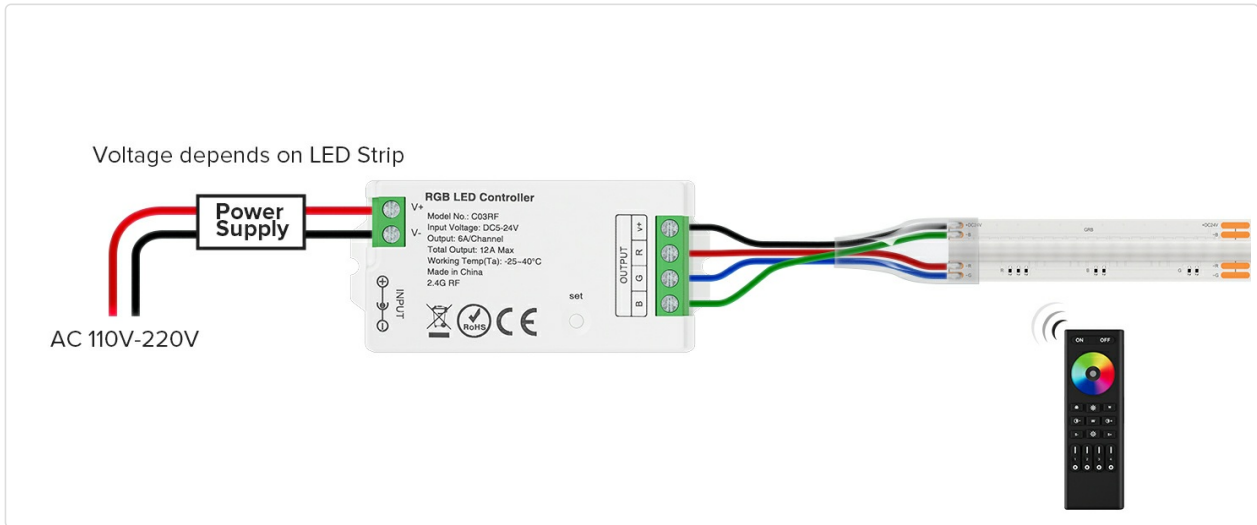


Image: Visual guide for connecting the LED strip controller to the Tuya Smart Life app using the GW01W Tuya Gateway.

6. OPERATING INSTRUCTIONS

6.1. Remote Control Functions (RC03RFB)

The RC03RFB remote features a touch wheel and various buttons for comprehensive control:



Image: Labeled diagram of the RC03RFB remote control, showing the color ring, power buttons, mode buttons, brightness/speed controls, and zone selection buttons.

- **ON/OFF:** Power on/off the connected lights.
- **Color Ring:** Touch to select from 16 million colors.
- **Pilot Lamp:** Indicates remote activity.
- **Dynamic Modes:** Cycle through various pre-programmed lighting effects.
- **Brightness +/-:** Adjust the brightness level.
- **7 Colors Switching:** Quickly switch between primary colors.
- **Color Temp/Saturation:** Adjust color temperature or saturation (if applicable to your LED strip).
- **White Light:** Activate white light mode.
- **Speed +/-:** Adjust the speed of dynamic modes.
- **Zone ON/(un)link Button (1-4):** Turn on/off specific zones or link/unlink controllers to zones.
- **Zone OFF/Night Light Mode:** Turn off a specific zone or activate a low-brightness night light mode.

6.2. Group Control

The remote supports 4 independent zones. You can assign multiple controllers to a single zone, allowing for

synchronized control of various lighting areas. The 2.4GHz RF wireless transmission allows for control up to 98 feet (30 meters) in open environments.



Image: Illustration of 2.4GHz wireless transmission enabling 4-zone control across different rooms in a house.

6.3. Auto-Transmitting Function

The controllers feature an auto-transmitting function. One controller can transmit signals from the remote to another controller within 30 meters. As long as there is a controller within 30 meters of the remote or another controller, the effective control distance can be extended significantly.



Auto-Transmitting Function

One controller can transmit the signals from the remote control to another controller within 30m, as long as there is a strip controller within 30m, the remote control distance can be limitless

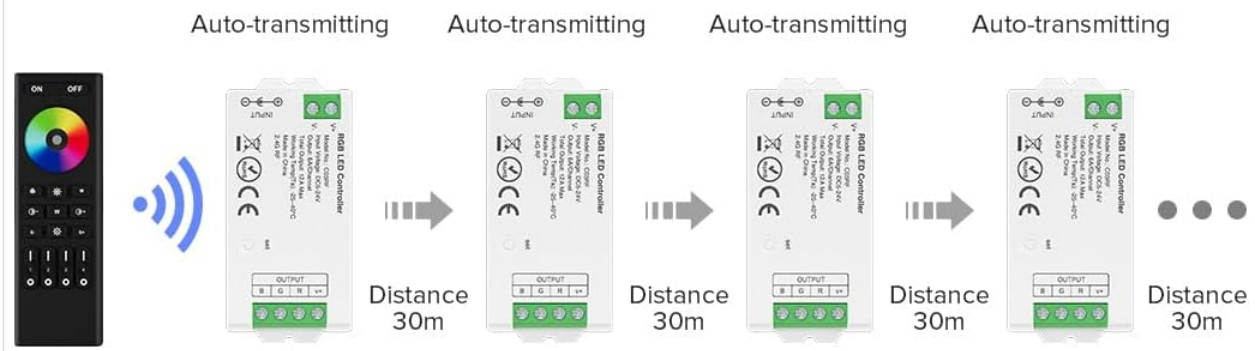


Image: Diagram showing how the auto-transmitting function extends the remote control distance by relaying signals between controllers.

6.4. App Control Features (with Tuya Gateway)

When connected via the Tuya Gateway, the Smart Life or Tuya Smart app unlocks additional features:

- **16 Million Colors:** Access a full spectrum of colors.
- **Brightness and Color Adjustment:** Fine-tune light output and color temperature.
- **Dynamic Scenes:** Choose from various pre-set or custom lighting scenes.
- **Music Rhythm:** Synchronize lights with music.
- **Timer Setting:** Schedule lights to turn on/off at specific times.
- **Voice Control:** Compatible with third-party voice assistants like Amazon Alexa and Google Home.
- **Device Sharing:** Share control with family members.
- **Tap-to-Run & Automation:** Create custom automation routines.
- **Don't Disturb Mode:** Prevents lights from turning on after power outages until manually activated twice.

7. MAINTENANCE

- Clean the remote and controller with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Replace remote batteries (3A, not included) when the control range decreases or the remote becomes unresponsive.

- Ensure all connections remain secure and free from corrosion.

8. TROUBLESHOOTING

Problem	Possible Solution
LED strip does not light up.	Check power supply connection and voltage. Ensure LED strip is correctly wired to the controller (V+, R, G, B). Verify remote is paired.
Remote control is unresponsive.	Replace batteries in the remote. Ensure remote is within range of the controller. Re-pair the remote if necessary.
Colors are incorrect or flickering.	Check wiring connections for the RGB channels. Ensure the LED strip type is compatible (PWM RGB 4-wire).
App control not working.	Ensure Tuya Gateway (GW01W) is powered and connected to 2.4GHz WiFi. Verify the controller is linked to the gateway via the app. Check internet connection.
Group control issues.	Ensure all controllers are correctly assigned to their respective zones. Check the distance between controllers for auto-transmitting functionality.

9. OFFICIAL PRODUCT VIDEO

Watch this official video for an overview of the BTF-LIGHTING 2.4GHz RF LED Controller Series, demonstrating its features and compatibility.

Your browser does not support the video tag.

Video: An official BTF-LIGHTING video showcasing the 2.4GHz RF LED Controller Series, including its various models and smart home integration capabilities.

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your product or visit the official BTF-LIGHTING website. Keep your purchase receipt for warranty claims.

© 2023 BTF-LIGHTING. All rights reserved.

<p>Multilingual Index</p> <p>English----- P.1 Deutsch----- P.15 Español----- P.27 Français----- P.39 Italiano----- P.51 日本語----- P.63 Nederlands----- P.75</p>	<p>BTF-LIGHTING FCOB PWM Dimming LED Strip User Manual - Installation, Specifications, and Control</p> <p>Comprehensive user manual for the BTF-LIGHTING FCOB PWM Dimming LED Strip. Covers product specifications, installation guides, control methods, safety precautions, and troubleshooting for versatile LED lighting applications.</p>
<p>Multilingual Index</p> <p>English----- P.01 Deutsch----- P.14 Español----- P.25 Français----- P.36 Italiano----- P.47 Nederlands----- P.58</p>	<p>BTF-LIGHTING WS2814 IC RGBW Addressable LED Strip User Manual</p> <p>This user manual provides comprehensive details on the BTF-LIGHTING WS2814 IC RGBW Addressable LED Strip, including product specifications, installation guides, precautions, and recommended accessories for optimal use.</p>
<p>Multilingual Index</p> <p>English----- P.01 Deutsch----- P.13 Español----- P.24 Français----- P.35 Italiano----- P.46 Nederlands----- P.57</p>	<p>BTF-LIGHTING 5050SMD RGBW LED Strip User Manual</p> <p>User manual for BTF-LIGHTING 5050SMD RGBW 4 Colors in 1 LED Strip, covering product specifications, installation guides, precautions, and troubleshooting. Learn to set up and use your LED lighting.</p>
<p>Multilingual Index</p> <p>English----- P.01 Deutsch----- P.12 Español----- P.22 Français----- P.32 Italiano----- P.42 Nederlands----- P.52</p>	<p>BTF-LIGHTING SPI Single Color LED Strip User Manual (SMD-FCOB-DIMIC-01-EN)</p> <p>Comprehensive user manual for the BTF-LIGHTING SPI Single Color LED Strip (SMD-FCOB-DIMIC-01-EN). Covers product specifications, installation, precautions, connection diagrams, controller/power supply compatibility, and thermal management. Available in multiple languages.</p>
<p>Multilingual Index</p> <p>English----- P.01 Deutsch----- P.14 Español----- P.26 Français----- P.38 Italiano----- P.50 日本語----- P.62 Nederlands----- P.74</p>	<p>BTF-LIGHTING FCOB WS2812B SPI RGB IC LED Strip User Manual</p> <p>User manual for the BTF-LIGHTING FCOB WS2812B SPI RGB IC LED Strip, detailing product parameters, installation, precautions, and controller compatibility for optimal lighting setups.</p>
<p>Multilingual Index</p> <p>English----- P.01 Deutsch----- P.11 Español----- P.20 Français----- P.29 Italiano----- P.38 日本語----- P.47 Nederlands----- P.57</p>	<p>BTF-LIGHTING WS2812B/WS2812B ECO RGB LED Strip User Manual</p> <p>User manual for BTF-LIGHTING WS2812B and WS2812B ECO individually addressable RGB LED strips. Covers product parameters, precautions, installation, and recommended accessories.</p>

