

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal Easy Fry & Grill XXL Digital Air Fryer EY8018EG User Manual

## Tefal EY8018EG

# Tefal Easy Fry & Grill XXL Digital Air Fryer

MODEL: EY8018EG

## INTRODUCTION

Welcome to the user manual for your new Tefal Easy Fry & Grill XXL Digital Air Fryer, Model EY8018EG. This appliance is designed to provide healthy and versatile cooking options, combining air frying and grilling functionalities. With its 6.5-liter capacity and 1800 watts of power, it is suitable for preparing meals for up to 8 people. This manual will guide you through the safe and efficient use of your appliance, from initial setup to advanced cooking programs and maintenance.



*The Tefal Easy Fry & Grill XXL Digital Air Fryer, Model EY8018EG, showcasing its sleek black design and digital control panel.*

## IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to allow adequate air circulation.
- Do not immerse the appliance body, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children and pets.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool completely before handling or cleaning parts.
- Do not block the air inlets or outlets during operation.

- Use only accessories recommended by the manufacturer.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- The appliance is intended for household use only. Do not use outdoors.

## PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the main parts of your Tefal Easy Fry & Grill XXL.

- **Main Unit:** Houses the heating element, fan, and control panel.
- **Digital Control Panel:** Touchscreen interface for selecting programs, adjusting temperature, and setting timers.
- **Cooking Basket:** Removable basket for holding food during air frying.
- **Grill Plate:** Non-stick cast aluminum grill plate for grilling functions.
- **Separator:** Allows for cooking two different dishes simultaneously in the basket.
- **Handle:** For safely removing and inserting the cooking basket.



Side view of the Tefal Easy Fry & Grill XXL, illustrating its compact dimensions of 30.3 cm (width), 43.2 cm (depth), and 36.2 cm (height).

## XXL HEALTHY AIR FRY & GRILL AT THE SAME TIME

2in1



OR

FULL MEAL



The 2-in-1 functionality of the Tefal Easy Fry & Grill XXL, demonstrating how it can air fry for crispy results or grill for juicy meals, with a 6.5L capacity suitable for up to 8 servings.



*A close-up view of the intuitive digital control panel, featuring temperature display, timer, and various preset program icons.*

## SETUP AND FIRST USE

Before using your appliance for the first time, follow these steps:

1. **Unpack:** Remove all packaging materials, stickers, and labels from the appliance.
2. **Clean Components:** Wash the cooking basket, grill plate, and separator in hot soapy water, then rinse and dry thoroughly. The main unit can be wiped with a damp cloth.
3. **Placement:** Place the main unit on a stable, level, heat-resistant surface. Ensure there is at least 10 cm of free space behind and above the appliance for proper ventilation.
4. **Initial Run (Optional but Recommended):** To eliminate any manufacturing odors, insert the empty basket and grill plate into the appliance. Plug it in and run it for 10-15 minutes at 180°C (350°F). A slight odor may be present, which is normal.
5. **Cool Down:** Allow the appliance to cool completely, then clean the basket and grill plate again.

## OPERATING INSTRUCTIONS

### Basic Operation

1. **Power On:** Plug the appliance into a grounded electrical outlet. The digital display will illuminate.
2. **Insert Food:** Place your ingredients into the cooking basket or onto the grill plate. Do not overfill.
3. **Select Mode:** Choose between 'Air Fry' or 'Grill' mode using the corresponding buttons on the control panel.
4. **Adjust Settings:** Use the temperature controls (+/-) to set the desired cooking temperature (80°C to 200°C) and the

timer controls (+/-) to set the cooking duration (up to 60 minutes for most programs, up to 10 hours for dehydration).

5. **Start Cooking:** Press the 'Start/Stop' button to begin the cooking process.
6. **Monitor & Shake:** For even cooking, especially with air frying, shake the basket halfway through the cooking time. The appliance may beep to remind you.
7. **Finish:** The appliance will beep when the timer expires. Carefully remove the basket/plate using the handle.

## Preset Programs

The EY8018EG features 8 convenient preset programs for common dishes:

- Fries
- Nuggets
- Roasted Chicken
- Pizza
- Meat
- Fish
- Vegetables
- Dessert

To use a preset program, simply select the corresponding icon on the digital control panel. The appliance will automatically set the optimal temperature and time. You can adjust these settings manually if needed.

## Smart Synchronization Mode (Sync)

The intelligent synchronization mode allows you to cook two different dishes simultaneously using the practical separator. When activated, the appliance will ensure both dishes finish cooking at the same time, even if they require different temperatures and durations. Refer to the recipe book for specific guidance on using the Sync mode effectively.



*The Tefal Easy Fry & Grill XXL in a kitchen setting, demonstrating its use for preparing a full meal including grilled meat and air-fried potatoes.*

## MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your Tefal Easy Fry & Grill XXL.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Removable Parts:** The cooking basket, grill plate, and separator are dishwasher safe. Alternatively, they can be washed by hand with hot water, dish soap, and a non-abrasive sponge.
3. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
4. **Interior:** For the interior, gently wipe with a damp cloth. If food residue is stuck, soak the basket/plate in warm soapy water for a few minutes before cleaning.
5. **Drying:** Ensure all parts are thoroughly dry before reassembling or storing the appliance.



Illustration showing the removable parts of the Tefal Easy Fry & Grill XXL, such as the basket and grill plate, being placed in a dishwasher for easy cleaning.

## TROUBLESHOOTING

If you encounter any issues with your Tefal Easy Fry & Grill XXL, refer to the table below for common problems and solutions.

| Problem                                | Possible Cause                                            | Solution                                                                                                   |
|----------------------------------------|-----------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| Appliance does not turn on.            | Not plugged in; power outlet malfunction.                 | Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.                |
| Food is not cooked evenly.             | Basket overloaded; food not shaken.                       | Do not overload the basket. Shake or flip food halfway through cooking.                                    |
| White smoke coming from the appliance. | Greasy food residue; excess oil.                          | Clean the basket and grill plate thoroughly. Remove excess oil from food before cooking.                   |
| Food is not crispy.                    | Too much moisture; insufficient cooking time/temperature. | Pat food dry before cooking. Increase cooking time or temperature slightly. Ensure proper air circulation. |

## SPECIFICATIONS

Technical details for the Tefal Easy Fry & Grill XXL Digital Air Fryer EY8018EG.

| Feature           | Detail                                                                      |
|-------------------|-----------------------------------------------------------------------------|
| Model Number      | EY8018EG                                                                    |
| Capacity          | 6.5 Liters (XXL)                                                            |
| Power / Wattage   | 1800 Watts                                                                  |
| Color             | Black                                                                       |
| Material          | Aluminum, Plastic                                                           |
| Control Method    | Touch (Digital)                                                             |
| Temperature Range | Adjustable from 80°C to 200°C                                               |
| Timer             | Up to 60 minutes (standard), up to 10 hours (dehydration)                   |
| Preset Programs   | 8 (Fries, Nuggets, Roasted Chicken, Pizza, Meat, Fish, Vegetables, Dessert) |
| Special Features  | 2-in-1 Air Fry & Grill, Smart Sync Mode, Dishwasher Safe Parts              |

## WARRANTY AND SUPPORT

Your Tefal Easy Fry & Grill XXL (Model EY8018EG) comes with a**1 Year Warranty from Groupe SEB**. This warranty covers manufacturing defects under normal household use.

For warranty claims, technical support, or service inquiries, please refer to the contact information provided with your purchase documentation or visit the official Tefal website for your region. Keep your proof of purchase for warranty validation.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0C5XVBDMK>

More documents and user manuals: <https://manuals.plus/>