

[Manuals.plus](#) /

› [Miseno](#) /

› Miseno 1.75 GPM Single Hole Kitchen Faucet MNO335 User Manual

Miseno MNO335

Miseno 1.75 GPM Single Hole Kitchen Faucet User Manual

Model: MNO335

INTRODUCTION

Thank you for choosing the Miseno 1.75 GPM Single Hole Kitchen Faucet. This manual provides essential information for the proper installation, operation, and maintenance of your new faucet. Please read these instructions thoroughly before beginning installation and retain them for future reference.



Image: Miseno 1.75 GPM Single Hole Kitchen Faucet in Polished Chrome finish.

SAFETY INFORMATION

- Always turn off the main water supply before installing or servicing the faucet.
- Wear safety glasses and gloves during installation.
- Ensure all local plumbing and building codes are met.
- If you are unsure about any part of the installation, consult a qualified plumber.
- Do not overtighten connections, as this can cause damage.

PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- Kitchen Faucet Assembly

- Mounting Hardware
- Hot and Cold Water Supply Lines
- Pull-Down Spray Head with Hose
- Counterweight for Spray Hose
- Installation Instructions (this manual)





Image: Exploded view showing various components of the Miseno kitchen faucet, including the main body, handle, spray head, hoses, and mounting hardware.

SETUP AND INSTALLATION

Tools Required:

- Adjustable Wrench
- Phillips Head Screwdriver
- Plumber's Putty or Silicone Sealant
- Flashlight
- Bucket
- Teflon Tape

Pre-Installation:

1. Turn off the main water supply to the kitchen.
2. Remove the old faucet (if applicable). Clean the sink or countertop surface thoroughly.
3. Ensure the mounting hole on your sink or countertop is compatible with a single-hole faucet.

Faucet Installation Steps:

1. **Install Faucet Body:** Place the faucet body through the single mounting hole on the sink or countertop. Ensure the base gasket is properly seated between the faucet and the surface.
2. **Secure Faucet:** From underneath the sink, slide the rubber washer, metal washer, and mounting nut onto the threaded shank of the faucet. Tighten the mounting nut securely with an adjustable wrench. Do not overtighten.





Image: View of the mounting hardware components, including the threaded shank, rubber washer, metal washer, and mounting nut, used to secure the faucet to the countertop.

3. **Connect Water Supply Lines:** Connect the hot and cold water supply lines from the faucet to your angle stops. Use Teflon tape on the threaded connections and tighten with an adjustable wrench. The faucet includes integrated supply lines.



Image: Underside view of the faucet base showing the hot and cold water supply hoses ready for connection to the water lines.

4. **Install Pull-Down Hose and Counterweight:** Feed the pull-down spray hose through the faucet spout. Attach the counterweight to the pull-down hose at the marked location (or approximately 6 inches from the bottom of the loop) to ensure smooth retraction.





Image: The counterweight attached to the pull-down spray hose, illustrating its position for proper hose retraction.

5. **Connect Spray Hose:** Connect the pull-down spray hose to the quick-connect fitting or threaded connection on the underside of the faucet body. Ensure a secure connection.
6. **Test for Leaks:** Slowly turn on the main water supply. Check all connections for leaks. If leaks occur, tighten the connections slightly until they stop.
7. **Flush Faucet:** Remove the spray head and turn on the water to flush out any debris from the lines. Run water for a few minutes, then turn off and reattach the spray head.

OPERATING INSTRUCTIONS

Water Flow and Temperature Control:

The Miseno kitchen faucet features a single lever handle for controlling both water flow and temperature.

- **To Turn On/Off:** Lift the handle upwards to turn on the water. Push the handle downwards to turn off the water.
- **To Adjust Water Flow:** The further the handle is lifted, the greater the water flow.
- **To Adjust Temperature:** Move the handle to the left for hot water and to the right for cold water. The position between left and right will provide mixed temperatures.



Image: A close-up of a kitchen faucet handle, demonstrating the range of motion for controlling water flow and temperature.

Using the Pull-Down Spray Head:

The faucet is equipped with a pull-down spray head for increased versatility.

- **To Extend:** Gently pull the spray head downwards from the spout. The hose will extend to allow for greater reach.
- **To Retract:** When finished, guide the spray head back into the spout. The counterweight on the hose will assist in its retraction.
- **Spray Modes:** The spray head typically features buttons or a switch to toggle between stream and spray functions. Press the button to select your desired water pattern.



Image: Close-up of the pull-down spray head of the Miseno faucet, showing the nozzle and buttons for spray mode selection.

MAINTENANCE

Cleaning the Faucet:

- Clean the faucet regularly with a soft cloth and mild soap.

- Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.
- Rinse thoroughly with clean water after cleaning and dry with a soft cloth to prevent water spots.

Aerator Maintenance:

If water flow decreases, the aerator may be clogged with debris. To clean:

1. Unscrew the aerator from the tip of the spray head.
2. Rinse any debris from the screen.
3. Reassemble the aerator and screw it back onto the spray head.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low water flow	Clogged aerator; partially closed shut-off valve; debris in supply lines.	Clean aerator. Ensure shut-off valves are fully open. Flush supply lines.
Leaks at connections	Loose connections; worn washers.	Tighten connections. Replace washers if damaged.
Faucet drips	Worn cartridge.	Replace the faucet cartridge.
Spray head does not retract fully	Counterweight improperly positioned or obstructed.	Adjust counterweight position. Clear any obstructions under the sink.

SPECIFICATIONS

Feature	Detail
Brand	Miseno
Model Number	MNO335
Mounting Type	Single Hole, Deck Mount
Material	Metal
Number of Handles	1 (Lever Handle)
Spout Height	8.5 inches
Item Weight	13.6 pounds
Flow Rate	1.75 GPM (Gallons Per Minute)
Included Components	Faucet, Mounting Hardware, Supply Lines, Pull-Down Spray Head, Counterweight

WARRANTY INFORMATION

This Miseno faucet comes with a limited warranty. For specific details regarding warranty coverage, terms, and conditions,

please refer to the warranty documentation included with your purchase or visit the official Miseno website. Keep your proof of purchase for warranty claims.

SUPPORT

If you require further assistance, have questions about installation, or need to troubleshoot an issue not covered in this manual, please contact Miseno customer support. You can typically find contact information on the Miseno website or on the packaging of your product.

Miseno Official Website: [Visit Miseno Store on Amazon](#)

© 2023 Miseno. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question