

[Manuals.plus](#) /

› [VINABTY](#) /

› VINABTY SHWRMC0137N Replacement Remote Control User Manual for Sharp EQ Series TVs

VINABTY SHWRMC0137N

VINABTY SHWRMC0137N Replacement Remote Control User Manual

Model: SHWRMC0137N

INTRODUCTION

This manual provides comprehensive instructions for the VINABTY SHWRMC0137N replacement remote control. This remote is designed to be a direct replacement for the original SHW/RMC/0137N remote, offering full functionality for compatible Sharp EQ series televisions without the need for programming.

Compatible TV Models:

- Sharp 50EQ3EA, 50EQ4EA, 50EQ6EA, 50EQ7EA
- Sharp 55EQ3EA, 55EQ4EA, 55EQ6EA, 55EQ7EA
- Sharp 65EQ3EA, 65EQ4EA, 65EQ6EA, 65EQ7EA
- Sharp 75EQ3EA, 75EQ4EA, 75EQ6EA, 75EQ7EA

SETUP

The VINABTY SHWRMC0137N remote control requires no programming or complex setup. Simply insert the batteries, and it is ready for use.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

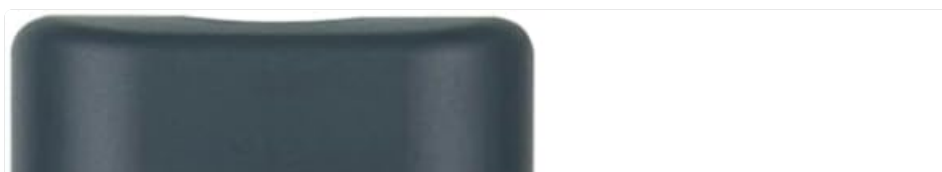






Image: Back of the remote control with the battery cover removed, revealing the two AAA battery slots. Note the polarity markings for correct battery insertion.





Image: Back of the remote control with the battery cover securely installed, indicating readiness for use.

OPERATING INSTRUCTIONS

This remote control operates using infrared (IR) technology. Ensure there is a clear line of sight between the remote control and the TV's IR receiver for optimal performance.



Image: Front view of the VINABTY SHWRMC0137N remote control, displaying all 40 buttons including power, number pad, navigation, volume, channel, and dedicated app buttons.

Button Functions

Button	Function
Power (●)	Turns the TV on or off.
SOURCE	Selects input sources (HDMI, AV, etc.).
0-9	Direct channel selection.
MENU	Accesses the TV's main menu.
GUIDE	Displays the electronic program guide.
INFO	Displays current program information.
Navigation Arrows (Up/Down/Left/Right)	Navigates through menus and options.

Button	Function
OK	Confirms selections.
BACK	Returns to the previous screen or menu.
HOME (△)	Accesses the TV's home screen or smart features.
EXIT	Exits current menu or application.
VOL +/-	Adjusts volume up or down.
CH ^/v	Changes channels up or down.
Mute ()	Mutes or unmutes TV audio.
NETFLIX, YouTube, prn video, Pay	Direct access buttons for streaming services.
AUDIO	Selects audio tracks or modes.
SUB	Activates or deactivates subtitles.
TEXT	Accesses teletext services.
TV	Switches to live TV mode.
Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward)	Controls media playback.
Colored Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions within menus or applications.

MAINTENANCE

Cleaning the Remote Control

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Do not use harsh chemicals or abrasive cleaners.
- Avoid getting moisture into the battery compartment or any openings.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

Problem	Solution
Remote control is not working.	◦ Check if the batteries are inserted correctly with the correct polarity. ◦ Replace the batteries with new AAA batteries. ◦ Ensure there are no obstructions between the remote control and the TV's IR receiver. ◦ Point the remote directly at the TV.

Problem	Solution
Remote control works intermittently.	◦ Batteries may be low; replace them. ◦ Ensure a clear line of sight to the TV. ◦ Check for strong light sources (e.g., direct sunlight, fluorescent lights) that might interfere with the IR signal.
Specific buttons are not responding.	◦ Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris. ◦ If only specific buttons fail, and others work, the remote might be damaged. Consider replacing the remote.

SPECIFICATIONS

- **Model:** SHWRMC0137N
- **Brand:** VINABTY
- **Connectivity Technology:** Infrared (IR)
- **Number of Buttons:** 40
- **Power Source:** 2 x AAA Batteries (not included)
- **Maximum Range:** 10 meters (approx. 33 feet)
- **Special Features:** No programming required, Ergonomic design, Lightweight
- **Dimensions (L x W x H):** 19.5 cm x 4.5 cm x 2 cm (approx. 7.68 in x 1.77 in x 0.79 in)
- **Weight:** 61 grams (approx. 2.15 oz)
- **Compatible TV Models:** Sharp EQ Series (50EQ3EA, 50EQ4EA, 50EQ6EA, 50EQ7EA, 55EQ3EA, 55EQ4EA, 55EQ6EA, 55EQ7EA, 65EQ3EA, 65EQ4EA, 65EQ6EA, 65EQ7EA, 75EQ3EA, 75EQ4EA, 75EQ6EA, 75EQ7EA)

WARRANTY AND SUPPORT

For any issues with the product or service, please contact the seller directly. They aim to provide a satisfactory response within 24 hours.

Note: Specific warranty details may vary by retailer or region. Please refer to your purchase documentation for precise warranty information.