

[manuals.plus](#) /› [innioasis](#) /› [innioasis G1 MP3 Player User Manual](#)

innioasis G1

innioasis G1 MP3 Player User Manual

Model: G1 | Brand: innioasis

1. PRODUCT OVERVIEW

The innioasis G1 MP3 Player is a versatile digital audio player designed for music, audiobooks, and e-books. It features a 4-inch full-touch LCD screen, Wi-Fi, and Bluetooth connectivity, offering a comprehensive entertainment experience with minimal distractions. Its Android operating system allows for pre-installed applications and robust parental controls.

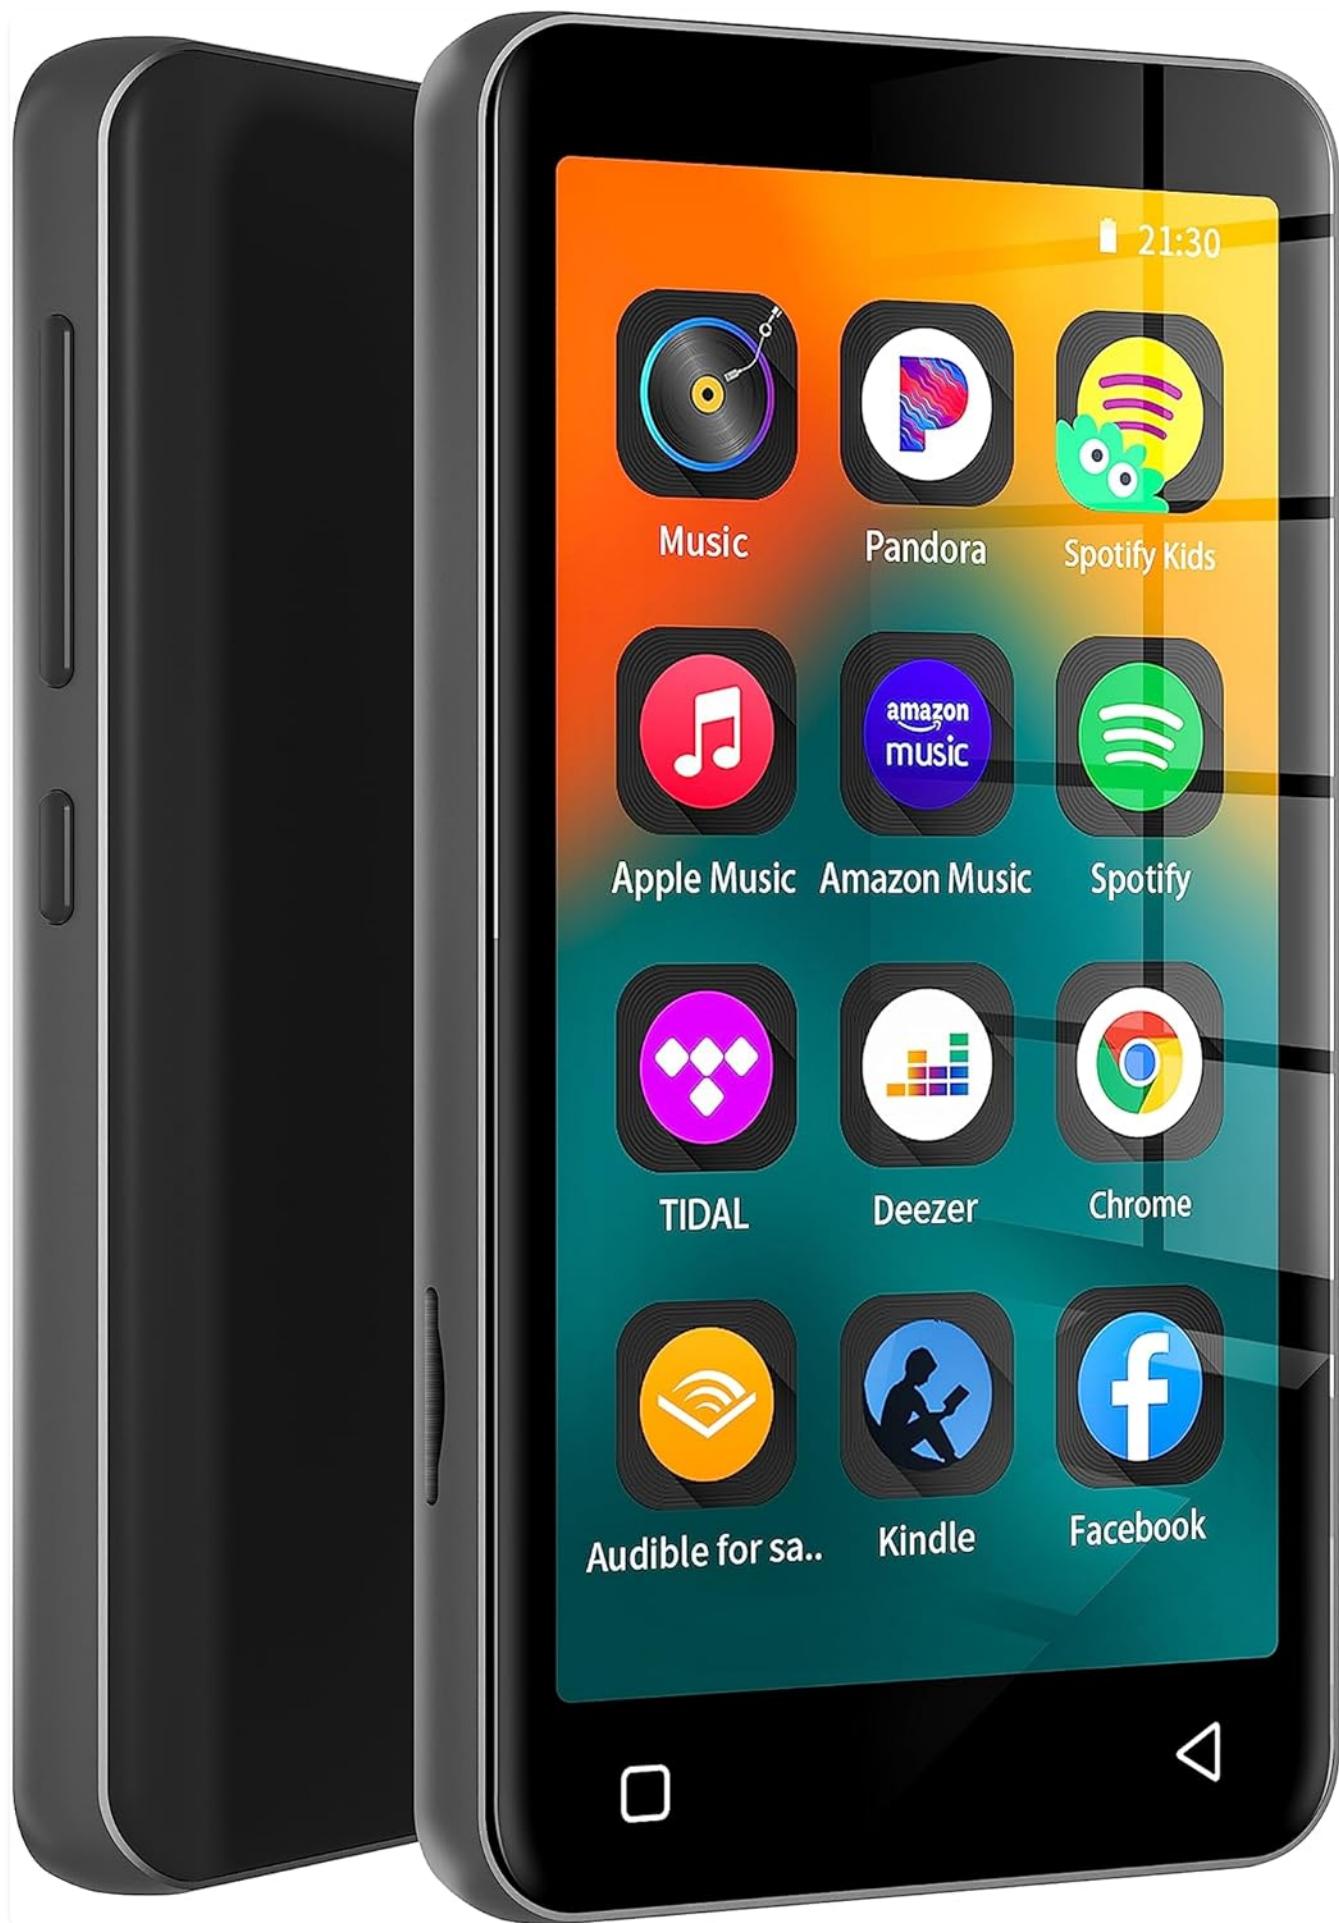


Figure 1: Front view of the innioasis G1 MP3 Player with its intuitive app interface.

2. WHAT'S IN THE BOX

Upon unboxing your innioasis G1 MP3 Player, please ensure all components are present:

- innioasis G1 MP3 Player (1 unit)
- 64GB TF Card (1 unit)
- USB-C Cable (1 unit)
- Wired Headphones (1 pair)
- User Manual (1 copy)



Contact Person: NICK ZOU

Email: innioasis@outlook.com

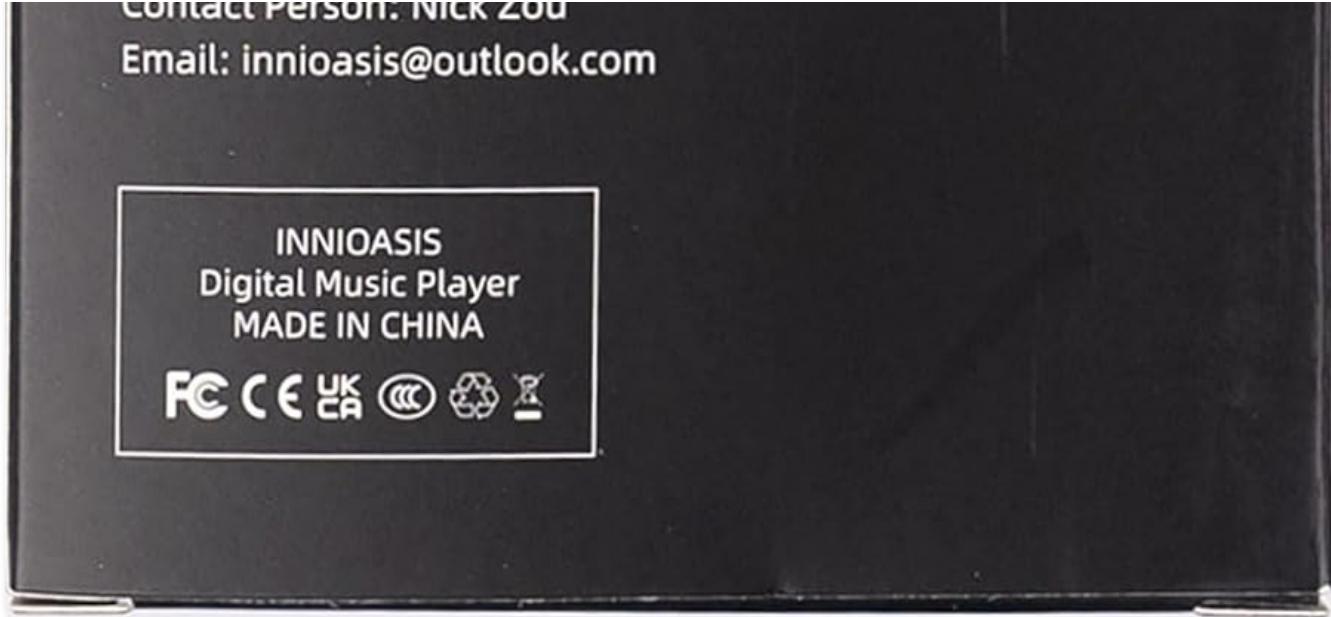


Figure 2: All included accessories with the innioasis G1 MP3 Player.

3. SETUP

3.1 Initial Power On and Setup

- Charge the Device:** Connect the provided USB-C cable to the player and a compatible USB power adapter (not included). The device may come with a partial charge, but a full charge is recommended before first use.
- Power On:** Press and hold the power button located on the side of the device until the innioasis logo appears on the screen.
- Initial Configuration:** Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up basic device preferences.
- Insert SD Card:** Locate the SD card slot on the side of the player. Gently insert the provided 64GB TF card until it clicks into place. This expands the device's storage capacity.

Larger Storage-Put all your love

80GB of storage, plenty for your songs, videos and photos
Whatsmore, It can expand external storage up to 1TB



Figure 3: Inserting the 64GB TF card into the innioasis G1 MP3 Player.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

- **Touchscreen:** The 4-inch LCD screen is fully touch-sensitive for navigation.
- **Home Button:** The square icon on the bottom left of the screen takes you to the home page. Holding it down displays recently opened applications.
- **Back Button:** The arrow icon on the bottom right of the screen navigates back to the previous screen.
- **Volume Control:** Use the physical buttons on the side of the device to adjust the volume.

4.2 Music Playback

The G1 MP3 Player supports a wide range of audio formats including MP3, WAV, FLAC, AAC, APE, OGG, M4A,

WMA, and MP2.

- **Pre-installed Music Apps:** Access popular streaming services like Spotify, Amazon Music, Pandora, Spotify Kids, Tidal, and Deezer directly from the home screen.
- **HiBy Local Music App:** Utilize the powerful HiBy app for offline music playback. It features a graphic equalizer, playlist management (loop list, loop individual, shuffle, sequential play), cover art display, lyrics, and song search.
- **Transferring Music:** Connect the device to your computer using the USB-C cable to transfer music files directly to the internal storage or the SD card.



Figure 4: The G1 player's interface with multiple music application options.

Local Music Player with Wider Compatibility

Supports music formats including MP3, WAV, FLAC, APE, OGG, M4A
AAC, WMA, MP2, etc

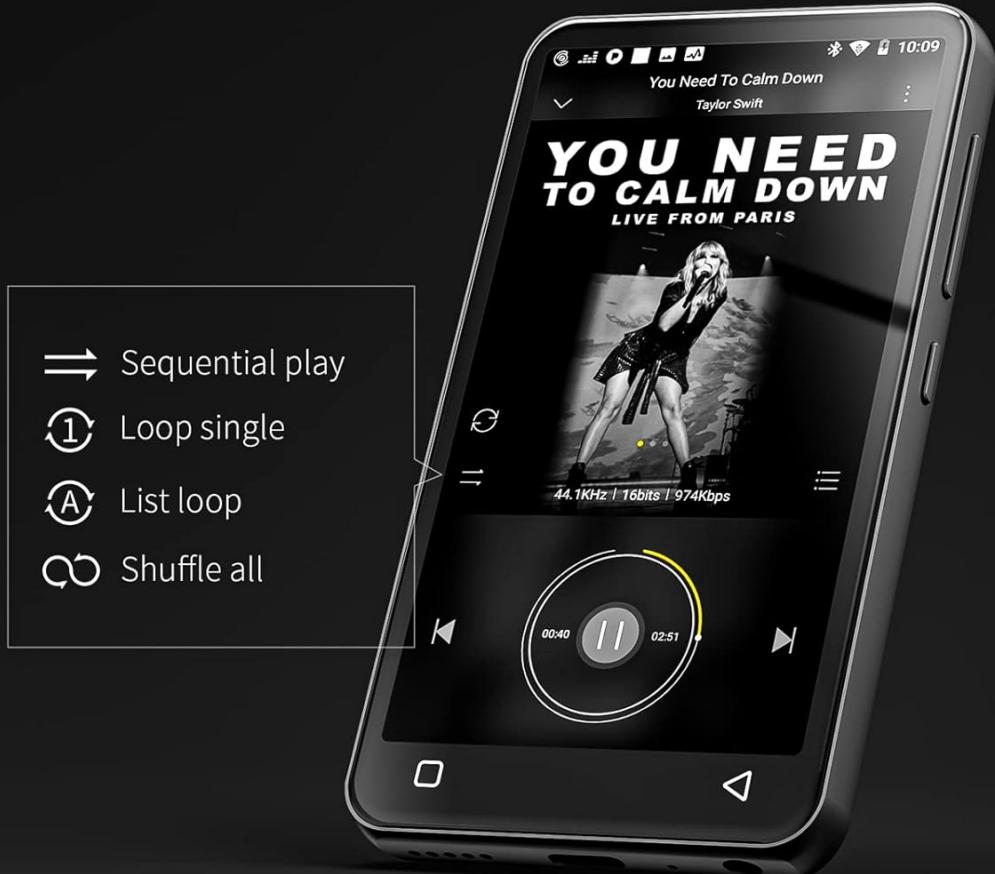


Figure 5: The HiBy local music player interface, highlighting playback modes.

4.3 E-reader and Other Functions

The device comes with pre-installed applications for various daily needs:

- **E-reader:** Access Audible and Kindle for audiobooks and e-books.
- **Video Playback:** Enjoy HD video content. The device supports various video formats for an immersive visual experience.
- **FM Radio:** Tune into local FM radio stations.
- **Recorder:** Use the built-in recorder for voice memos or audio notes.
- **Utilities:** Includes Clock, Gallery, Calculator, and Calendar.
- **Browser:** A Chrome browser is pre-installed and can be removed if not desired.

Amazing Audio-visual Enjoyment

HD video & HiFi sound will reflect an immersive all sensory experience



Figure 6: The G1 player's screen showcasing video playback capabilities.

5. CONNECTIVITY

5.1 Bluetooth Connectivity

The G1 MP3 Player is equipped with Bluetooth 4.2, supporting two-way connection for faster and more stable pairing.

- **Pairing:** Go to Settings > Connected Devices > Bluetooth. Turn on Bluetooth and select your desired device (Bluetooth headsets, speakers, car audio) from the list to pair.
- **Enjoy Wireless Audio:** Once paired, you can enjoy your music and audiobooks wirelessly.

Wider Bluetooth Compatibility

quickly & stable and paired with Bluetooth headphones,
speaker and car stereo



Figure 7: Bluetooth connectivity options for the innioasis G1 MP3 Player.

5.2 Wi-Fi Connectivity

Connect to Wi-Fi for streaming music, browsing, and accessing online content.

- **Connecting:** Go to Settings > Network & Internet > Wi-Fi. Select your desired network and enter the password if prompted.

6. BATTERY AND CHARGING

The G1 MP3 Player is equipped with a built-in 1500mAh lithium battery, designed for extended usage with a low-power solution.

- **Battery Life:** Provides up to 25 hours of continuous music playback or 5 hours of video playback on a full charge.

- **Charging:** Use the provided USB-C cable to charge the device. A full charge typically takes approximately 70 minutes.
- **Battery Indicator:** The battery icon on the top right of the screen indicates the current battery level.



Figure 8: Battery specifications and estimated usage times.

7. STORAGE

The G1 MP3 Player offers ample storage for your media files:

- **Internal Storage:** Built-in 16GB ROM.
- **Included TF Card:** Comes with a 64GB TF card, bringing the total storage to 80GB.
- **Expandable Storage:** Supports external storage expansion up to 1TB using SDXC, SDHC, Micro SD, and Micro SDXC cards.

8. PARENTAL CONTROLS

The innioasis G1 is designed with parental control features to ensure a safe environment for younger users:

- **No App Store:** The device does not have an app store, preventing unauthorized app downloads.
- **Uninstall Pre-installed Apps:** You can remove pre-installed applications that are not frequently used or deemed unsuitable.
- **Set Passcode:** A passcode can be set to prevent children from re-downloading uninstalled apps or altering settings.



Figure 9: The G1 player's interface demonstrating the ability to uninstall apps.

9. SPECIFICATIONS

Feature	Description
Model	G1
Dimensions	0.39 x 2.36 x 4.33 inches
Weight	4.8 ounces
Screen Size	4 Inches
Display Technology	LCD, Full-Touch
Operating System	Android OS
Processor	8 Core CPU 1.9GHz
RAM	2GB
Internal Storage (ROM)	16GB
Included TF Card	64GB (Total 80GB storage)
Expandable Storage	Up to 1TB (SDXC, SDHC, Micro SD, Micro SDXC)
Battery	1500mAh Lithium Ion (included)
Music Playback Time	Up to 25 hours
Video Playback Time	Up to 5 hours
Charging Time	Approx. 70 minutes (Input: 5V=2A)
Connectivity	Bluetooth 4.2 (Two-way), Wi-Fi
Supported Audio Formats	MP3, WAV, FLAC, AAC, APE, OGG, M4A, WMA, MP2, etc.
Special Features	Video Playback, Voice Recorder, Equalizer, FM Radio, E-book, Parental Controls
Compatible Devices	Headphones, Earphones, Bluetooth Speakers, Car Audio
Media Type Support	SDHC, Micro SDHC, SD Card, Micro SDXC, Micro SD
Color	Grey

10. TROUBLESHOOTING

If you encounter any issues with your innioasis G1 MP3 Player, please refer to the following common troubleshooting steps:

- **Device Not Powering On:** Ensure the device is fully charged. Connect it to a power source and wait a few minutes before attempting to power on again.
- **Cannot Connect to Wi-Fi/Bluetooth:** Ensure Wi-Fi/Bluetooth is enabled in settings. Check that the network/device is within range and functioning correctly. Try restarting the G1 player and the other device.
- **Poor Audio Quality:** Check the headphones or speaker connection. If using wired headphones, ensure they are fully inserted into the 3.5mm jack. If using Bluetooth, ensure the connection is stable and the volume is appropriately set on both devices.
- **Device Freezing/Unresponsive:** Press and hold the power button for approximately 10-15 seconds to force a restart.
- **Storage Issues:** If you are unable to save files, check the available storage space in Settings > Storage. Ensure the SD card is properly inserted and recognized.
- **Apps Not Working:** Ensure the device is connected to Wi-Fi if the app requires internet access. Try restarting the app or the device.

11. MAINTENANCE

To ensure the longevity and optimal performance of your innioasis G1 MP3 Player, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the screen and body of the device. Avoid using abrasive cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Protection:** Consider using a protective case and screen protector to prevent scratches and damage from accidental drops.
- **Battery Care:** Avoid fully discharging the battery frequently. Charge the device regularly, even if not in use, to maintain battery health.
- **Software Updates:** Periodically check for and install any available software updates to ensure optimal performance and security.

12. WARRANTY AND SUPPORT

innioasis provides comprehensive support for your G1 MP3 Player:

- **Warranty:** The product comes with a 1-Year Warranty Service.
- **Customer Service:** For any inquiries or support needs, please contact innioasis customer service.
- **Email Support:** You can reach us via email atinnioasis-csc@hotmail.com.
- **Availability:** Our customer service is available 7 days a week, 24 hours a day.

Related Documents - G1

<p>Hello!</p>	<p><u>INNIOASIS G1 Digital Music Player User Guide</u> Comprehensive user guide for the INNIOASIS G1 Digital Music Player, covering setup, features, app usage (Music, Video, Gallery, Ebook, Recorder, FM Radio, Clock, File Transfer), settings, troubleshooting, specifications, and warranty.</p>
	<p><u>Innioasis S1 MP3 Player User Manual</u> User manual for the Innioasis S1 MP3 Player, covering features like music playback, video, e-books, FM radio, file management, and device settings. Includes specifications and warranty information.</p>
<p>Hello!</p>	<p><u>INNIOASIS G1 Digital Music Player User Manual</u> Comprehensive user manual for the INNIOASIS G1 Digital Music Player (Model: 2A6DB-G1). Learn about device buttons, ports, file transfer methods from Windows, macOS, Android, and iOS, and explore the features of the Music app, including song management and playback options.</p>
	<p><u>Innioasis G1 Digital Music Player - Product Overview and Compliance</u> Discover the Innioasis G1, a versatile Digital Music Player. This document provides an overview of its features, specifications, and compliance certifications, including FCC and Canadian standards, ensuring quality and safety.</p>
<p>Hello!</p> <p>Y1_V5.1</p>	<p><u>INNIOASIS Y1 MP3 Music Player User Manual and Guide</u> Comprehensive user manual for the INNIOASIS Y1 MP3 Music Player, covering features like music playback, audiobooks, photos, FM radio, Bluetooth, settings, and troubleshooting. Learn how to transfer music, manage playlists, and use all device functions.</p>

Hello!

[INNIOASIS Y1 MP3 Music Player User Manual](#)

This user manual provides comprehensive instructions for operating the INNIOASIS Y1 MP3 Music Player, covering features like music playback, audiobooks, FM radio, photo viewing, Bluetooth connectivity, and settings.

Y1_V5.30