

[Manuals.plus](#) /

› [GEPAS](#) /

› GEPAS 33W Fast Charger for Oukitel WP19 Smartphone: User Manual

## GEPAS okpacwp19

# GEPAS 33W Fast Charger for Oukitel WP19 Smartphone: User Manual

Model: okpacwp19

## INTRODUCTION

This user manual provides essential information and instructions for the GEPAS 33W Fast Charger and its accompanying USB Type-C cable. This product is specifically designed to provide efficient and rapid charging for your Oukitel WP19 smartphone. Please read this manual thoroughly before using the product to ensure safe and optimal performance.

## PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1x GEPAS 33W Fast Wall Charger (EU Plug)
- 1x 100cm USB Type-C Cable



**Image 1:** The GEPAS 33W Fast Wall Charger (EU plug) and the coiled 100cm USB Type-C cable, as included in the package.

## SAFETY INFORMATION

---

Please observe the following safety precautions to prevent damage to the product, your device, or personal injury:

- Do not expose the charger or cable to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the charger to strong impacts.
- Do not attempt to disassemble, repair, or modify the charger or cable. This will void the warranty and may cause electric shock or fire.
- Ensure the charger is plugged into a compatible power outlet (220V AC).
- Unplug the charger from the power outlet when not in use or during electrical storms.
- Keep out of reach of children.
- If the product appears damaged, discontinue use immediately.

## SETUP

---

Follow these steps to set up your GEPAS 33W Fast Charger:

1. Uncoil the provided 100cm USB Type-C cable.
2. Connect one end of the USB Type-C cable to the USB-C port on the GEPAS 33W Fast Wall Charger.
3. Plug the GEPAS 33W Fast Wall Charger into a standard 220V AC wall outlet.



**Image 2:** The GEPAS 33W Fast Charger with the USB Type-C cable connected, ready for use.

## OPERATING INSTRUCTIONS

---

Once the charger is set up, follow these steps to charge your Oukitel WP19 smartphone:

1. Ensure the GEPAS 33W Fast Wall Charger is securely plugged into a functional wall outlet.
2. Connect the other end of the USB Type-C cable to the charging port of your Oukitel WP19 smartphone.
3. Your smartphone should indicate that it is charging, and if supported, display a fast charging notification.
4. Once your smartphone is fully charged, disconnect the USB Type-C cable from your phone and then unplug the charger from the wall outlet.

The 33W fast charging capability ensures your Oukitel WP19 smartphone charges quickly and efficiently. The charger is designed with multiple protection features, including overvoltage, overcurrent, and short-circuit protection, to safeguard your device during charging.

## MAINTENANCE

---

Proper maintenance helps prolong the life of your charger and cable:

- **Cleaning:** Disconnect the charger from the power outlet and your device before cleaning. Use a soft, dry cloth to wipe the surfaces. Do not use liquid cleaners or aerosols.
- **Storage:** Store the charger and cable in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent damage.
- **Inspection:** Periodically inspect the charger and cable for any signs of wear, fraying, or damage. If any damage is observed, discontinue use.

## TROUBLESHOOTING

If you encounter issues with your GEPAS 33W Fast Charger, refer to the following common problems and solutions:

| Problem                    | Possible Cause                                                                                               | Solution                                                                                                                                                                                                                           |
|----------------------------|--------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Device not charging.       | Charger not properly plugged in. Faulty wall outlet. Cable not connected securely. Damaged cable or charger. | Ensure the charger is firmly plugged into a working wall outlet. Try a different outlet. Reconnect the USB Type-C cable to both the charger and the phone. Inspect the cable and charger for visible damage; replace if necessary. |
| Slow charging.             | Using a non-compatible cable. Phone software issue. High background app usage.                               | Ensure you are using the provided GEPAS USB Type-C cable. Restart your smartphone. Close unnecessary background applications.                                                                                                      |
| Charger or phone gets hot. | Normal during fast charging. Poor ventilation.                                                               | A slight warmth is normal. Ensure the charger and phone are in a well-ventilated area. Avoid charging under blankets or in confined spaces. If overheating is excessive, discontinue use.                                          |

If the problem persists after trying these solutions, please contact customer support.

## SPECIFICATIONS

Detailed technical specifications for the GEPAS 33W Fast Charger:

- Brand:** GEPAS
- Model:** okpacwp19
- Power Output:** 33 Watts (Max)
- Input Voltage:** 220 Volts AC
- Connector Type:** USB Type-C
- Compatible Devices:** OUKITEL WP19 Smartphone
- Special Features:** Fast Charging, Portable
- Total USB Ports:** 1
- Cable Length:** 100 cm
- Protection Features:** Overvoltage Protection, Overcurrent Protection, Short-circuit Protection



**Image 3:** A close-up view of the GEPA33W Fast Charger, displaying its technical specifications and certifications on the casing.

## WARRANTY AND SUPPORT

**Warranty:** The GEPA33W Fast Charger comes with a 1-year manufacturer's warranty. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or external causes.

**Customer Support:** For technical assistance, warranty claims, or any questions regarding your GEPA33W product, please contact your retailer or the manufacturer directly. Please have your purchase receipt and product model number (okpacwp19) available when contacting support.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0C62KYSQ1>

More documents and user manuals: <https://manuals.plus/>