



Manuals.plus /

› KRIB BLING /

› KRIB BLING 25 lbs Portable Full Automatic Washing Machine with Drain Pump, Model XQB201B - User Manual

KRIB BLING XQB201B

KRIB BLING 25 lbs Portable Full Automatic Washing Machine

Model: XQB201B - User Manual

1. INTRODUCTION

Thank you for choosing the KRIB BLING 25 lbs Portable Full Automatic Washing Machine. This compact and efficient appliance is designed to simplify your laundry routine, especially in spaces with limited room such as apartments, dormitories, or RVs. This manual provides essential information for safe operation, proper installation, and effective maintenance to ensure optimal performance and longevity of your washing machine.

The KRIB BLING washing machine combines washing and spin-drying functions in one unit, offering 10 wash programs and 8 water level selections for versatile use. Its automatic imbalance adjustment system ensures stable and quiet operation.



Dorms



RV camping



Apartments



Bathroom

IDEAL FOR
VARIOUS
OCCASIONS!



Figure 1.1: The KRIB BLING portable washing machine is ideal for various occasions, including dorms, RV camping, apartments, and bathrooms, offering laundry convenience in compact living spaces.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance to prevent injury and property damage. Keep this manual for future reference.

- **Water Temperature:** Do not use water at a temperature exceeding 50°C (122°F).

- **Clothing Types:** Avoid washing raincoats or waterproof clothing (e.g., bicycle covers) as this may cause damage to the items or the machine.
- **Ventilation:** Ensure that the vents at the bottom of the machine are well-ventilated. Exercise caution when placing the machine on carpeted surfaces to prevent obstruction of airflow.
- **Tipping:** If the washer is tipped over, any water sound heard is due to the salt water in the balancing ring, which is normal.
- **Electrical Safety:** Ensure the power outlet is properly grounded. Do not operate the machine with a damaged power cord or plug.
- **Child Safety:** Keep children away from the appliance during operation. Utilize the child lock feature on the control panel for added safety.

3. PRODUCT OVERVIEW

Key Features:

- **Full Automatic 2-in-1 Design:** Combines washing and spin-drying functions for convenience.
- **Compact and Portable:** Space-saving design ideal for small living spaces.
- **Built-in Drain Pump:** Allows for flexible drainage from various angles.
- **Multi-functional Control Panel:** Features 10 washing programs, 4 water level modes, 8 water level selections, an LED display, and a child lock.
- **Automatic Imbalance Adjustment:** Minimizes shaking and noise during operation.
- **Large Capacity:** 25 lbs capacity suitable for 5-6 members.

Components:

- Portable Washing Machine Unit
- Water Inlet Hose
- Water Outlet Hose
- Adapter
- Control Panel
- Stainless Steel Inner Tub
- Built-in Filter
- Washing Impeller



Figure 3.1: The KRIB BLING washing machine features a 2-in-1 design, combining washing and spin-drying capabilities for efficient laundry.

Smart control panel with LED display



Figure 3.2: The smart control panel with LED display offers 10 commonly used programs, 4 powder levels, and a 24-hour delay cleaning function.

25 LBS

Large Capacity



T-shirt
250g



Shirts
300g



Jacket
250g



Jeans
400g



Figure 3.3: With a 25 lbs large capacity, the machine can handle various items, such as T-shirts (250g), shirts (300g), jackets (250g), and jeans (400g).



Figure 3.4: Key internal and external components include the inlet hose, water inlet, stainless steel inner tub, built-in filter, and washing impeller.

4. SETUP AND INSTALLATION

Unpacking:

Carefully remove the washing machine from its packaging. Inspect for any damage during transit. Ensure all included components (Water Inlet Hose, Water Outlet Hose, Adapter, Panel) are present.

Placement:

Place the washing machine on a firm, level surface. Ensure adequate ventilation around the machine, especially at the bottom. Avoid placing on thick carpets that might obstruct the vents.



Figure 4.1: The product dimensions are 24 inches (W) x 24 inches (D) x 40 inches (H), making it suitable for compact spaces.

Connecting Water Supply:

1. Connect one end of the Water Inlet Hose to the water inlet on the back of the washing machine.
2. Connect the other end of the Water Inlet Hose to a suitable water faucet using the provided adapter.

Ensure a tight connection to prevent leaks.

Connecting Drain Hose:

1. Attach the Water Outlet Hose to the drain outlet on the machine.
2. Position the drain hose to direct wastewater into a sink, bathtub, or floor drain. Ensure the drain hose is elevated above the water level in the machine to prevent continuous drainage.



Figure 4.2: The compact design allows for convenient placement in various areas, such as a bathroom, with easy access to water and drainage.

5. OPERATING INSTRUCTIONS

Loading Laundry:

1. Open the top lid of the washing machine.
2. Place clothes loosely into the stainless steel inner tub, ensuring not to overload the machine. The maximum capacity is 25 lbs.



Figure 5.1: The inner tub has a diameter of 17.32 inches, providing ample space for a 25 lbs load.

Adding Detergent:

Add the appropriate amount of laundry detergent directly into the tub with the clothes, or into the designated detergent dispenser if available.

Selecting Program and Water Level:

1. Close the top lid securely.
2. Press the 'Power' button to turn on the machine.
3. Use the 'Program' dial or buttons on the control panel to select one of the 10 available wash programs (e.g., Standard, Quick Wash, Heavy Duty, Gentle).
4. Select the desired water level from the 8 available options based on your load size. The machine may also have 4 water level modes.
5. The LED display will show the remaining laundry time.

Starting the Wash Cycle:

Press the 'Start/Pause' button to begin the wash cycle. The machine will automatically proceed through the selected program.

Child Lock:

Activate the child lock feature to prevent accidental changes to settings during operation and ensure family safety.

6. MAINTENANCE

Cleaning the Filter:

Regularly clean the built-in filter to maintain optimal washing performance and prevent lint buildup. Refer to the specific instructions in the full user manual for filter removal and cleaning.

Exterior Cleaning:

Wipe the exterior of the machine with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish.

Storage:

If storing the machine for an extended period, ensure it is completely drained and dry. Disconnect all hoses and the power cord. Store in a dry, cool place.

7. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common troubleshooting tips:

- **Machine Not Starting:** Ensure the power cord is securely plugged in and the lid is fully closed. Check if the 'Power' button has been pressed and a program selected.
- **Water Not Filling:** Verify that the water inlet hose is properly connected and the water faucet is turned on. Check for kinks in the hose.
- **Water Not Draining:** Ensure the drain hose is not kinked or blocked. Confirm the drain hose is positioned correctly and not submerged in water, which can cause a siphon effect.
- **Excessive Vibration/Noise:** This machine features automatic imbalance adjustment. If vibration is excessive, ensure the machine is on a level surface and the laundry load is balanced inside the tub. Redistribute clothes if necessary.

- **Error Codes:** If an error code appears on the LED display, consult the full user manual for specific code meanings and solutions.

8. SPECIFICATIONS

Feature	Detail
Brand Name	KRIB BLING
Model Number	XQB201B
Item Weight	58 pounds
Product Dimensions	24 x 24 x 40 inches (D x W x H)
Capacity	25 Pounds
Noise Level	55 Decibels
Installation Type	Freestanding
Special Features	Auto imbalance adjustment
Color	Grey
Control Console	Push Button
Standard Cycles	10
Access Location	Top Load
Included Components	Adaptor, Drain Hose, Inlet hose, Washing impeller

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included in your product packaging or visit the official KRIB BLING website. Keep your purchase receipt as proof of purchase.

Customer Service: For any questions or assistance, please contact KRIB BLING customer support through the contact information provided on the product packaging or official website.