

Walimex Pro Emerger 400 Set Single

Walimex pro Emerger 400 Set Single Studio Flash Light User Manual

Model: Emerger 400 Set Single (Item Model Number: 23379)

Brand: Walimex Pro

1. INTRODUCTION AND OVERVIEW

The Walimex pro Emerger 400 studio flash light is designed for ambitious photographers seeking a powerful and versatile lighting solution. This compact and mobile flash unit offers a flash output of 400 Ws, adjustable from 1/1 to 1/32, allowing precise control over light intensity. It features an integrated 2.4 GHz receiver for wireless control, a modern 25W LED setting light, and a short recharge time for efficient operation. The practical Walimex pro/Bowens bayonet connection ensures compatibility with a wide range of accessories.



Figure 1: Walimex pro Emerger 400 Studio Flash Light with Reflector

This image displays the Walimex pro Emerger 400 studio flash unit with its standard reflector. The flash tube and LED setting light are visible within the reflector, highlighting the unit's primary light source.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1x Walimex pro Emerger 400 Studio Flash Light with LED Setting Light
- 1x Standard Reflector
- 1x Power Cable (4m)
- 1x Sync Cable (4m)
- 1x Flash Tube (pre-installed or separate)
- 1x Protective Cap
- 1x Lamp Stand 260cm (FT-8051)
- 1x Softbox 60x90cm
- 1x Softbox Adapter
- 1x Studio Flash Shutter Release (Radio Trigger)



1x EMERGER 400
STUDIOBLITZ



1x SOFTBOX 60X90CM
MIT SOFTBOXADAPTER



1x FT-8051 LAMPENSTATIV
260CM



1x STUDIOBLITZ AUSLÖSER

Figure 2: Complete Package Contents

This image illustrates all items included in the Walimex pro Emerger 400 Set Single package, clearly showing the studio flash unit, the 60x90cm softbox, the FT-8051 lamp stand, and the radio trigger.

3. SETUP INSTRUCTIONS

Follow these steps to set up your Walimex pro Emerger 400 studio flash light:

1. **Assemble the Lamp Stand:** Extend the FT-8051 lamp stand to the desired height (up to 260cm) and ensure it is stable.
2. **Attach the Softbox:** Assemble the 60x90cm softbox according to its specific instructions. Attach the softbox adapter to the softbox.
3. **Mount the Flash Unit:** Securely attach the Walimex pro Emerger 400 studio flash unit to the top of the lamp stand. Ensure the mounting screw is tightened.
4. **Attach Softbox to Flash:** Connect the assembled softbox (with adapter) to the Walimex pro/Bowens bayonet mount on the front of the flash unit. Rotate until it locks into place.
5. **Connect Power:** Plug the 4m power cable into the power input on the back of the flash unit and then into a suitable power outlet.

6. **Install Shutter Release:** Insert the radio trigger into your camera's hot shoe or connect it via the sync cable if preferred.

PRODUKTDDETAILS II

walimex^{pro}

KOMPAKTES STARTERSET UM DIREKT LOSZULEGEN – FÜR KLEINERE STUDIOS UND UNTERWEGS GEEIGNET



Inklusive Lampenstativ FT-8051

Mit Federdämpfung, Traglast bis 5kg und von 90 cm bis auf 260 cm ausziehbar



Inklusive Softbox in der Größe 60x90cm

Mit Front- und Zwischendiffusor sowie Bowens/Walimex pro Adapter



Inklusive Studioblitz Auslöser

Auslösung per Funk



UNTERNEHMEN AUS DEUTSCHLAND

Figure 3: Setup Configuration

This image illustrates the complete setup, including the studio flash mounted on the lamp stand, with the softbox attached, and the radio trigger for remote operation.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the controls and functions of your Emerger 400 studio flash:

- **Power On/Off:** Use the main power switch located on the control panel to turn the unit on or off.
- **Flash Output Adjustment:** The flash output can be adjusted steplessly from 1/1 (full power) to 1/32. Use the control dial or buttons on the unit to set the desired power level. The current setting will be displayed on the digital screen.
- **LED Setting Light:** The powerful 25W LED setting light can be controlled independently. This light assists in previewing lighting effects before flashing. Refer to the control panel for specific buttons to activate and adjust its intensity.

- **2.4 GHz Receiver and Radio Trigger:** The integrated 2.4 GHz receiver allows for wireless control using the included radio trigger. The system supports 16 channels and 4 groups, enabling you to control multiple flash units simultaneously or individually. Ensure the flash unit and trigger are set to the same channel and group.
- **Short Recharge Time:** The unit boasts a fast recharge time of 0.2 - 0.9 seconds, indicated by a ready light or sound, allowing for quick successive shots.
- **Accessory Compatibility:** The Walimex pro/Bowens bayonet connection allows for quick attachment and detachment of various light modifiers such as softboxes, beauty dishes, and snoots.

PRODUKTDDETAILS

walimex^{pro}

HOCHWERTIGE VERARBEITUNG & KOMFORTABLER EINSATZ



Modernes LED-Einstelllicht

Mit modernem 25 Watt LED-Einstelllicht. Durch den neuen Standardreflektor wird eine bessere Lichtausbeute und eine gleichmäßigere Ausleuchtung erreicht.



Einfache Bedienung

Leichter und kompakter Studioblitz für ambitionierte Hobbyfotografen – benutzerfreundlich und super einfach steuerbar



Vielfältige Kompatibilität

Dank praktischem Bowens/ walimex pro Bajonettanschluss kompatibel mit vielem Equipment



Leistungsstark und modern

Blitzleistung 400Ws, stufenlos regelbar von 1/1 bis 1/32 und extrem kurze Wiederaufladezeit und sehr leise Gebläsekühlung



UNTERNEHMEN AUS DEUTSCHLAND

Figure 4: Control Panel and Features

This image provides a close-up of the flash unit's rear control panel, highlighting the LED setting light, power input, and the digital display for flash output settings. It also shows the fan vents for cooling.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your studio flash light:

- **Cleaning:** Regularly wipe the exterior of the flash unit with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, ensuring no moisture enters the unit. Do not use harsh chemicals or abrasive

cleaners.

- **Reflector and Softbox:** Keep the standard reflector and softbox clean from dust and fingerprints to maintain light quality.
- **Storage:** When not in use, store the flash unit and accessories in a dry, dust-free environment, preferably in a protective bag or case. Ensure the protective cap is on the flash tube.
- **Flash Tube Replacement:** The flash tube is a consumable part. If it fails or its performance degrades, it can be replaced. Consult a qualified technician or the manufacturer for replacement procedures.

6. TROUBLESHOOTING

If you encounter issues with your Walimex pro Emerger 400, consider the following:

- **Flash Not Firing:**
 - Check if the unit is powered on and connected to a working power outlet.
 - Ensure the radio trigger is correctly installed on your camera and both the trigger and flash are set to the same channel and group.
 - Verify the flash output is not set to minimum or off.
 - Check the sync cable connection if using wired triggering.
- **LED Setting Light Not Working:**
 - Ensure the unit is powered on.
 - Check if the LED light function is activated via the control panel.
- **Unusual Noise:** The unit features a cooling fan. A slight fan noise during operation is normal, especially during extended use or high power settings. If the noise is excessive or unusual, discontinue use and contact support.
- **Overheating:** The unit has built-in protection against overheating. If it becomes excessively hot, it may temporarily shut down. Allow it to cool down before resuming operation. Ensure adequate ventilation around the unit.

If problems persist, please contact Walimex Pro customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Walimex Pro
Model Number	23379
Flash Output	400 Ws
Flash Output Adjustment	1/1 to 1/32 (stepless)
LED Setting Light	25W
Recharge Time	0.2 - 0.9 seconds
Wireless Communication	2.4 GHz Receiver (16 Channels, 4 Groups)
Hardware Interface	Radio Frequency

Accessory Mount	Walimex pro / Bowens Bayonet
Flash Unit Dimensions (approx.)	Length: 30 cm, Width: 12.5 cm, Height: 12.5 cm
Flash Unit Weight (approx.)	1.9 kg
Product Dimensions (Package)	118 x 49 x 44 cm
Product Weight (Package)	5.48 kg

ABMESSUNGEN

walimex^{pro}



Gewicht 1,9 KG



Figure 5: Flash Unit Dimensions

This image provides a visual representation of the Walimex pro Emerger 400 studio flash unit's dimensions and its approximate weight.

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact your retailer. For technical support, product inquiries, or service requests, please visit the official Walimex Pro website or contact their customer service department directly. Ensure you have your product model number (23379) and purchase details available when seeking support.

© 2026 Walimex Pro. All rights reserved.