

[Manuals.plus](#) /

› [AGARO](#) /

› AGARO Supreme Plus 2200W Pressure Washer Instruction Manual

## AGARO Supreme Plus 2200W

# AGARO Supreme Plus 2200W Pressure Washer Instruction Manual

Model: Supreme Plus 2200W

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your AGARO Supreme Plus 2200W Pressure Washer. Please read it thoroughly before first use and keep it for future reference.



Image: The AGARO Supreme Plus 2200W Pressure Washer unit.

Video: Overview of the AGARO Supreme Plus High Pressure Washer, showcasing its features and applications.

## 2. SAFETY INFORMATION

Always prioritize safety when operating the pressure washer. Failure to follow these instructions may result in injury or damage to the equipment.

- Do not operate the pressure washer without reading the user manual carefully.
- Avoid pointing the high-pressure spray at people, animals, or electrical devices.
- Use only with cold water supply to prevent damage and hazards.
- Ensure all connections are secure before starting the machine to prevent leaks.
- Wear appropriate personal protective equipment (PPE) such as safety glasses and gloves.

## 3. WHAT'S IN THE BOX

Verify that all components are present upon unpacking your AGARO Supreme Plus Pressure Washer:

- 3M Inlet Hose

- 8M Outlet Hose
- Gun with Extension Rod
- Connector
- Foam Bottle
- 4M Long Power Cord
- Filter



Image: Visual representation of the pressure washer and its included accessories.

## 4. SETUP

Follow these steps to correctly set up your pressure washer:

1. Attach the inlet pipe to the tap connector. Connect the bucket filter if needed.
2. Attach the inlet pipe to the inlet connector.
3. Screw the inlet filter onto the main unit.
4. Attach the inlet connector to the inlet filter.
5. Push and screw the outlet hose pipe with the outlet connector.

6. Turn ON the machine without connecting the hose pipe to the gun to release air.
7. Attach the outlet hose pipe to the spray gun.
8. Connect the spray gun extension rod to the spray gun.
9. Attach any nozzle to the spray gun extension rod.

**Important:**

- Before using, remove air from the machine first. Attach the hose pipe to the outlet filter and switch ON. Allow the machine to run and water to flow from the hose pipe.
- Always use an inlet filter to avoid machine choking.
- Always attach the inlet and outlet connectors tightly to avoid leakage.

## How to install

1. Attach inlet pipe to tap connector.   
 or   
 Connect bucket filter if needed.
2. Attach inlet pipe to inlet connector.
3. Screw inlet filter onto main unit.
4. Attach inlet connector to inlet filter.
5. Push and screw the outlet hose pipe with the outlet connector.
6. Turn ON machine without connecting hose pipe to gun to release air.
7. Attach outlet hose pipe to spray gun.
8. Connect spray gun extension rod to spray gun.
9. Attach any nozzle to spray gun extension rod.
10. Correct: Water inlet quick connection link method.   
 Wrong: There is a gap in the middle.

Image: Detailed installation steps for the pressure washer.

Video: Demonstrates important 'Do's and Don'ts' for setting up and using the pressure washer, including air removal and filter usage.

## 5. OPERATING INSTRUCTIONS

The AGARO Supreme Plus Pressure Washer is designed for powerful and efficient cleaning across various

applications.

### Key Features:

- **Powerful 2200 Watts Motor:** Removes stubborn dirt, oil, and grime with 140 bars of high pressure.
- **8 Litres/min Water Flow:** Allows for quick cleaning of large surfaces.
- **Adjustable Pressure Regulator:** Set water spray from low to high speed for different cleaning needs.
- **Foam Bottle:** Easily apply foam directly through the machine for enhanced cleaning.
- **Automatic Pump Shutoff:** Pump automatically shuts off when the trigger is not engaged, saving energy and prolonging pump life.

### Adjusting Spray and Applying Foam:

## Fast & Efficient

### Adjustable Spray Nozzle

		
<b>Low Speed</b>	<b>Medium Speed</b>	<b>High Speed</b>
		



## 350 ml Foam Bottle

- Push to attach
- Raise to release




**Adjustable pressure nozzle**  
Twist to adjust from Low-High

Image: Adjustable spray nozzle and foam bottle usage.

### Multipurpose Use:

This pressure washer is suitable for a variety of cleaning tasks:

# Adjustable nozzle

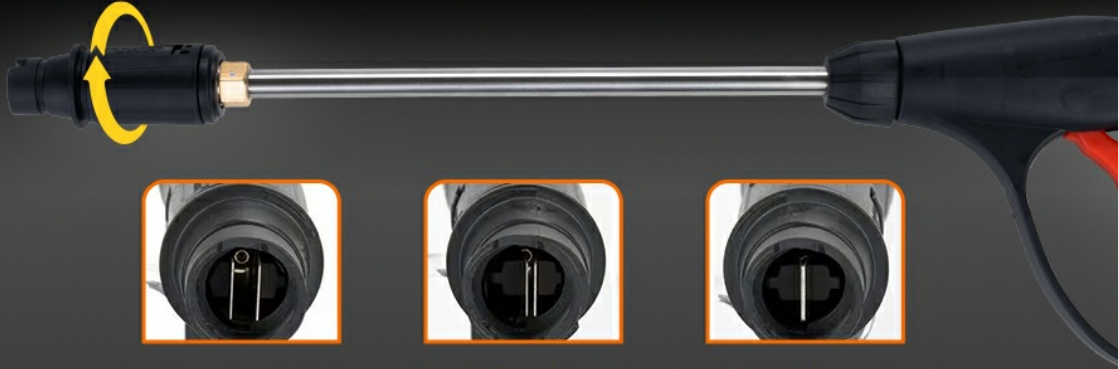

Low Speed



Medium Speed



High Speed



Image: Examples of cleaning applications including bikes, cars, outdoor spaces, and home exteriors.

## Car Wash Made Effortless



Image: Cleaning a car with the pressure washer.

## Blast Mud Off in Seconds



Image: Cleaning a bike with the pressure washer.



Image: Cleaning a patio floor with the pressure washer.

## 6. MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your pressure washer.

- **Overheating Prevention:** After using for 15-20 minutes, give the machine a rest for some time to avoid overheating.
- **Oil Change:** Change oil after 150-200 hours of operation.
- **Filter Cleaning:** Regularly check and clean the inlet filter and nozzles to prevent blockages and maintain pressure.
- **Residual Water:** After use, tilt the machine to pour out any residual water to prevent freezing or mineral buildup.

Video: Provides essential 'Do's and Don'ts' for maintaining the pressure washer, including resting periods and proper water drainage.

## 7. TROUBLESHOOTING

---

If you encounter issues with your pressure washer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Low or no pressure	Air in the pump; clogged inlet filter or nozzle; insufficient water supply; worn seals.	Ensure air is purged from the system (see Setup section). Clean or replace filters/nozzles. Check water supply. Contact customer support if seals are suspected.
Motor runs continuously when trigger is released	Bypass valve issue; air in the system; internal leak.	Purge air from the system. Check all connections for leaks. If the problem persists, contact customer support.
Machine vibrates excessively or makes unusual noise	Air in the pump; loose components; internal pump issue.	Ensure air is purged. Check for any loose parts and tighten. If noise or vibration continues, contact customer support.

Video: A user demonstrating a low-pressure issue with the pressure washer, where the motor runs but pressure is minimal. This can help in diagnosing similar problems.

## 8. SPECIFICATIONS

Feature	Detail
Brand	AGARO
Model Number	33992
Power Source	Corded Electric
Colour	YELLOW
Item Weight	9300 Grams
Hose Length	8 Metres (Outlet), 3 Metres (Inlet)
Product Dimensions (L x W x H)	37L x 23W x 22H Centimeters
Maximum Flow Rate	7.5 Liters Per Minute
Maximum Pressure	140 Bars
Power Cord Length	4 Metres

# Powerful Cleaning

2200 Watts Motor & 140 Bar Pressure  
8 Litres per minute Water Flow Rate



Image: Illustration of the powerful motor and its specifications.

## 9. WARRANTY AND SUPPORT

The AGARO Supreme Plus High Pressure Washer comes with a manufacturer warranty. For specific warranty details, please refer to the documentation included with your product or contact customer support. For further assistance, please contact us:

- **Phone:** 9821486487
- **Email:** [info@uclindia.com](mailto:info@uclindia.com)

Our customer service team will help you.

