

[Manuals.plus](#) /

› [Cryfokt](#) /

› Cryfokt Foldable Portable Mini Washing Machine User Manual

Cryfokt Cryfoktc6ta4xgfqp-13

Cryfokt Foldable Portable Mini Washing Machine User Manual

Model: Cryfoktc6ta4xgfqp-13

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Cryfokt Foldable Portable Mini Washing Machine. Please read this manual thoroughly before first use and retain it for future reference.

This compact and portable washing machine is designed for washing small items such as underwear, socks, baby clothes, or other delicate garments, making it ideal for travel, dorms, or small living spaces.

SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not immerse the main body of the washing machine in water. Only the washing bucket is designed to hold water.
- Ensure the power cord and plug are intact before connecting to a power source. Do not use if damaged.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.
- Do not wash items that are excessively heavy or contain hard objects that could damage the pulsator.
- Unplug the appliance from the power outlet when not in use or before cleaning.
- Do not operate the machine on an unstable or uneven surface.
- Avoid placing the machine near heat sources or in direct sunlight.
- Do not use harsh chemicals or abrasive cleaners on the machine.

PRODUCT OVERVIEW

Familiarize yourself with the components of your portable washing machine.



Figure 1: Front view of the Cryfokt Foldable Portable Mini Washing Machine in its expanded state, showing the control panel at the bottom.



Figure 2: Top-down view of the washing machine's interior, showing the pulsator at the bottom of the tub.



Figure 3: Bottom view of the washing machine, showing the stable base and warning labels.

Key Components:

- **Foldable Tub:** The main washing compartment that can be collapsed for storage.
- **Control Panel:** Located at the front base, with buttons for different washing modes.
- **Pulsator:** The rotating disc at the bottom of the tub that agitates water and clothes.
- **Drain Basket:** A removable basket for draining and light drying.
- **Handle:** For easy portability.

SETUP

Follow these steps to set up your washing machine for first use:

1. **Unpack:** Carefully remove the washing machine and all accessories from its packaging.

2. **Expand:** Place the folded washing machine on a flat, stable surface. Gently press down on the top rim while pulling up the handle to expand the tub to its full height.



Figure 4: The washing machine shown in both its expanded (top) and folded (bottom) configurations, demonstrating its compact storage capability.

3. **Position:** Place the machine in a location where it can be easily filled with water and drained. Ensure it is near a power outlet.
4. **Connect Power:** Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

Learn how to effectively use your portable washing machine.

Washing Cycle:

1. **Add Water:** Fill the tub with an appropriate amount of water. Do not exceed the maximum fill line.
2. **Add Detergent:** Add a small amount of liquid or powder detergent suitable for delicate items.
3. **Load Laundry:** Place small, lightweight items into the tub. Do not overload the machine. The capacity is 6.5 liters.

4. **Select Mode:** Press the power button on the control panel to turn on the machine. Then, select your desired cleaning mode.



Figure 5: The control panel displaying three distinct cleaning modes: 1 minute for Quick Cleaning, 5 minutes for Standard Cleaning, and 10 minutes for Strong Cleaning.

- **1 Min:** Quick Cleaning (for very lightly soiled items or quick rinse)
 - **5 Min:** Standard Cleaning (for daily light laundry)
 - **10 Min:** Strong Cleaning (for more soiled items)
5. **Start Washing:** The machine will begin its cycle automatically after mode selection.
6. **Draining:** Once the wash cycle is complete, the machine supports draining.

Folding Washing Machine that Supports Draining

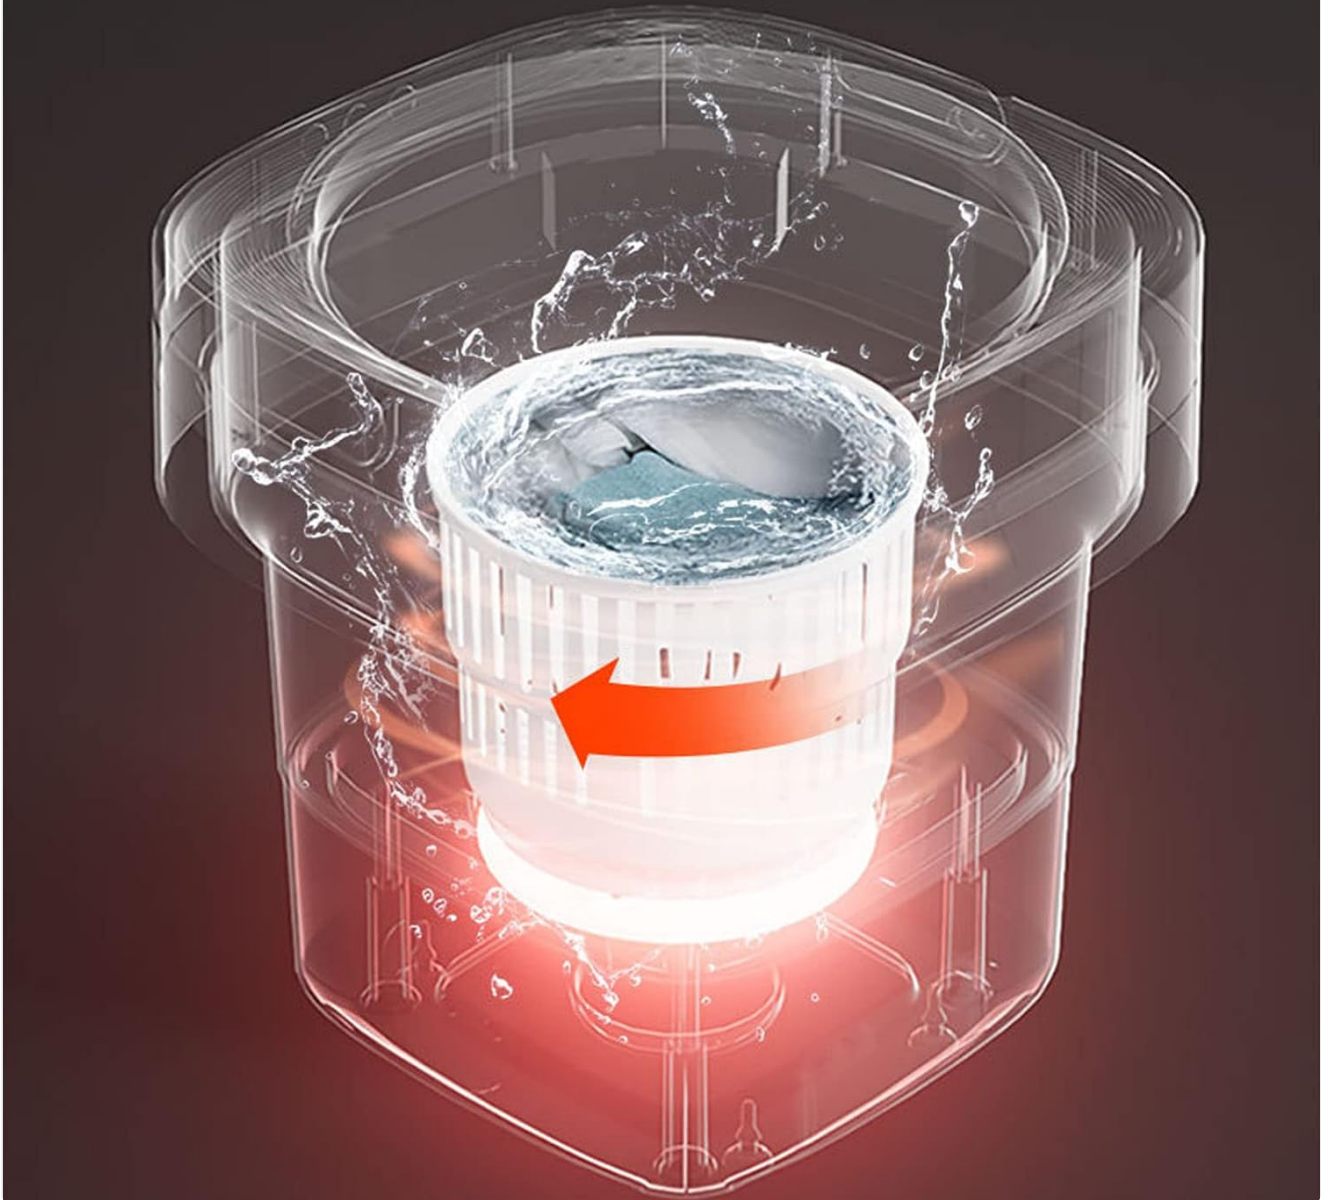


Figure 6: An illustrative diagram depicting the internal mechanism of the washing machine during the draining process, with water being expelled from the tub.

7. **Use Drain Basket:** For additional draining or light drying, place the washed items into the removable drain basket and insert it into the machine.

Removable Drain Basket Draining and Drying



Figure 7: A close-up view of the removable drain basket, designed for efficient draining and light drying of garments.

MAINTENANCE

Regular cleaning and proper storage will extend the life of your washing machine.

- **Cleaning the Tub:** After each use, rinse the tub with clean water and wipe it dry with a soft cloth.
- **Cleaning the Exterior:** Wipe the exterior of the machine with a damp cloth. Do not use abrasive cleaners or solvents.
- **Draining:** Ensure all water is drained from the machine after use to prevent mold and odors.
- **Storage:** When not in use, fold the washing machine for compact storage. Store in a cool, dry place away from direct sunlight.

Easy to Carr for Trave



Figure 8: The folded washing machine neatly packed inside a suitcase, illustrating its portability and ease of transport for travel.

TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start.	Not plugged in; Power outage; Power button not pressed.	Ensure power cord is securely plugged in; Check power supply; Press the power button firmly.
Water does not drain.	Drain hose kinked or blocked; Machine not elevated for gravity drain.	Check and clear any obstructions in the drain hose; Ensure the machine is placed higher than the drain point.
Machine makes unusual noise.	Overloaded; Unbalanced load; Foreign object in tub.	Reduce laundry load; Redistribute items evenly; Check for and remove any foreign objects.

Problem	Possible Cause	Solution
Washing performance is poor.	Too much laundry; Insufficient detergent; Incorrect wash mode.	Reduce load size; Use appropriate amount of detergent; Select a longer wash mode (e.g., 10 min).

SPECIFICATIONS

Technical details of your Cryfokt Foldable Portable Mini Washing Machine.

Feature	Detail
Brand	Cryfokt
Model Number	Cryfoktc6ta4xgfqp-13
Capacity	6.5 Liters
Dimensions (Expanded)	Approx. 30cm x 30cm x 30cm (11.81in x 11.81in x 11.81in)
Dimensions (Folded)	Approx. 30cm x 30cm x 12.5cm (11.81in x 11.81in x 4.92in)
Cleaning Modes	1 min (Quick), 5 min (Standard), 10 min (Strong)
Drainage	Supported (Gravity drain)
Features	Foldable design, Portable, Removable drain basket



Figure 9: Visual representation of the washing machine's dimensions in both expanded and folded states, indicating height and width measurements.

WARRANTY AND SUPPORT

Information regarding warranty coverage and customer support is typically provided with your purchase documentation. Please refer to the packaging or included warranty card for specific details on your product's warranty period and how to contact customer service for support or service inquiries.

For further assistance, please contact the seller or manufacturer directly through the platform where the product was purchased.