

[Manuals.plus](#) /

› [Cftore](#) /

› Cftore Portable Air Conditioner 3-IN-1 Evaporative Air Cooler User Manual

Cftore B0C65T8VLX

Cftore Portable Air Conditioner 3-IN-1 Evaporative Air Cooler User Manual

Model: B0C65T8VLX

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Cftore Portable Air Conditioner 3-IN-1 Evaporative Air Cooler. Please read this manual thoroughly before use and retain it for future reference.

PRODUCT FEATURES

- **Adjustable Modes and Speeds:** Offers 3 wind modes (Normal, Sleep, Cool) and 3 fan speeds (High, Medium, Low) for a total of 9 cooling combinations.
- **Wide Oscillation:** Features 100° wide oscillation to distribute cool air effectively across a room up to 39 square meters (approximately 420 square feet).
- **Convenient Control:** Equipped with an easy-to-use control panel and a 20-foot remote control for convenient operation from a distance.
- **Enhanced Cooling:** Includes 5 ice packs to provide additional freshness.
- **Bladeless Design:** Ensures safety, especially for households with children or pets.
- **Space-Saving Design:** Compact unit designed to fit in corners or near windows for optimal airflow.
- **Portability:** Freestanding design with wheels for easy movement.
- **Timer Function:** Features a 12-hour timer for scheduled operation.

SAFETY INSTRUCTIONS

Please observe the following safety precautions to reduce the risk of fire, electric shock, or injury:

- Always place the unit on a stable, level surface.

- Do not block air inlets or outlets.
- Do not immerse the unit, plug, or cord in water or other liquids.
- Unplug the unit before cleaning, refilling water, or performing maintenance.
- Keep out of reach of children and pets.
- Do not operate with a damaged cord or plug.
- Ensure the power supply matches the voltage specified on the unit's rating label.

SETUP

1. **Unpacking:** Carefully remove the air cooler from its packaging. Retain packaging for storage or return if necessary.
2. **Placement:** Position the unit on a firm, level surface. Ensure there is adequate space around the unit for proper airflow, especially near air inlets and outlets. The space-saving design allows placement in corners or next to windows.
3. **Water Tank:** Pull out the water tank. Fill it with clean water. For enhanced cooling, place the provided ice packs (after freezing) into the water tank. Do not overfill.
4. **Power Connection:** Plug the power cord into a standard electrical outlet.



Image: The Cftore Portable Air Cooler showcasing its portability features including 360° wheels, integrated handles, and

the included 5 ice packs for enhanced cooling.

OPERATING INSTRUCTIONS

Your air cooler can be operated using the control panel on the top of the unit or the included remote control.

Control Panel and Remote Control

The control panel and remote control share similar functions. Ensure the remote control has batteries installed (not included, typically AAA) and is pointed towards the unit's receiver.



Image: Close-up view of the Cifore Portable Air Cooler's top control panel and the accompanying remote control, highlighting the various function buttons.

Power On/Off

- Press the **Power** button on the control panel or remote to turn the unit on or off.

Adjusting Speeds and Modes

The air cooler offers various settings to customize your cooling experience.

Adjustable Speeds & Modes



Image: The Cftore Portable Air Cooler illustrating its three adjustable fan speeds (Low, Medium, High) and three operating modes (Normal, Cool, Sleep).

- **Speed:** Press the **Speed** button repeatedly to cycle through Low, Medium, and High fan speeds.
- **Mode:** Press the **Mode** button to select between Normal, Sleep, and Cool modes.
 - *Normal Mode:* Provides a consistent airflow at the selected speed.
 - *Sleep Mode:* Operates quietly with reduced fan speed for comfortable sleep.
 - *Cool Mode:* Activates the evaporative cooling function, utilizing water and ice packs for colder air.

Timer Function

Set the unit to automatically turn off after a specified period, up to 12 hours.

12 Hour Timer & More Comfort

Makes Long Hot Summer Easy



Image: The Cftore Portable Air Cooler highlighting its 12-hour timer feature, suitable for use during sleep or office hours.

- Press the **Timer** button repeatedly to set the desired operating duration in hourly increments. The display will show the set time.

Oscillation

Activate the oscillation feature to distribute cool air over a wider area.



Image: An aerial view showing the Cftore Portable Air Cooler's 100° wide oscillation angle, effectively cooling a broad area, and indicating the 20-foot remote control range.

- Press the **Oscillation** button to start or stop the 100° wide oscillation.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your air cooler.

1. **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
2. **Cleaning the Water Tank:** Periodically empty and clean the water tank to prevent mold and mildew growth. Use a mild detergent and rinse thoroughly. Ensure the tank is dry before refilling or storing.
3. **Air Filter Cleaning:** The unit may have an air filter that requires regular cleaning. Refer to the filter access points and clean according to manufacturer recommendations (typically rinsing with water).
4. **Storage:** If storing the unit for an extended period, ensure the water tank is empty and clean. Store in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your air cooler, refer to the following common problems and solutions:

- **Unit does not power on:**
 - Check if the power cord is securely plugged into a working outlet.
 - Ensure the power button has been pressed.
- **No cool air:**
 - Verify the water tank is filled with water.
 - Ensure ice packs are frozen and placed in the water tank (if using Cool mode).
 - Check that the unit is set to "Cool Mode".
- **Weak airflow:**
 - Increase the fan speed setting.
 - Ensure air inlets and outlets are not obstructed.
- **Remote control not working:**
 - Replace batteries in the remote control.
 - Ensure there are no obstructions between the remote and the unit's receiver.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Brand	Cftore
Model Number	B0C65T8VLX
Mounting Type	Freestanding
Special Features	Portable, Timer
Controls Type	Remote
Floor Area Coverage	420 Square Feet (approx. 39 square meters)
Item Weight	11.5 pounds (5.22 Kilograms)
Included Components	Remote Control, 5 Ice Packs
Number of Speeds	3
Product Dimensions (D x W x H)	13"D x 15.5"W x 29"H
UPC	653998203092

QUIET, EFFICIENT, POWERFUL

PORTABLE AIR CONDITIONER



Image: The Cftore Portable Air Cooler emphasizing its coverage of up to 420 sq. ft., 12-hour timer, and quiet operation at ≤40 dB.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the Cftore official website or contact their customer service department.