

Girmi TP57

Girmi TP57 Toaster Instruction Manual

Model: TP57 (GTP5706)

1. INTRODUCTION

Thank you for choosing the Girmi TP57 Toaster. This appliance is designed for toasting bread slices and sandwiches, offering convenience and efficiency in your kitchen. Please read this manual carefully before using the toaster to ensure safe and optimal operation. Keep these instructions for future reference.

2. SAFETY INSTRUCTIONS

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies,

walls, and the like, when in operation.

- Do not attempt to dislodge food when toaster is plugged in.
- Do not leave the toaster unattended during operation.
- Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Girmi TP57 Toaster:



Figure 1: Front view of the Girmi TP57 Toaster, showcasing its brushed stainless steel finish and the Girmi brand logo.



Figure 2: Close-up of the control panel, featuring the browning control dial (1-8), and three function buttons: Defrost, Reheat, and Cancel. The toast lift lever is also visible.



Figure 3: The removable crumb tray, shown partially extracted from the bottom of the toaster for easy cleaning.



Figure 4: Two stainless steel sandwich tongs, designed to hold and toast sandwiches or smaller bread items securely within the toaster slots.

Components:

- **Toasting Slots:** Two wide slots for bread slices or sandwiches.
- **Browning Control Dial:** Adjusts toasting level from 1 (light) to 8 (dark).
- **Defrost Button:** For toasting frozen bread.
- **Reheat Button:** For warming previously toasted bread without further browning.
- **Cancel Button:** Stops the toasting cycle immediately.
- **Toast Lift Lever:** Lowers and raises bread into the slots.
- **Removable Crumb Tray:** Collects crumbs for easy cleaning.
- **Stainless Steel Tongs:** For safely inserting and removing sandwiches or small items.

4. SETUP

1. **Unpacking:** Carefully remove the toaster and all accessories from the packaging. Remove any protective films or stickers.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials

such as curtains or walls. Ensure there is adequate ventilation around the toaster.

3. **First Use:** Before toasting food for the first time, operate the toaster without bread for a few cycles at the highest browning setting (8) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate. Ensure the area is well-ventilated.
4. **Power Connection:** Ensure your power outlet voltage matches the rating label on the bottom of the toaster (230V). Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

5.1. Toasting Bread

1. Place one or two slices of bread into the toasting slots. For sandwiches, use the provided stainless steel tongs to hold the sandwich securely.
2. Select your desired browning level using the browning control dial, from 1 (lightest) to 8 (darkest). A medium setting (3-5) is usually recommended for most bread types.
3. Press the toast lift lever down until it locks into place. The toaster will begin toasting, and the indicator light (if present) will illuminate.
4. Once the selected browning cycle is complete, the toast will automatically pop up, and the toaster will switch off.
5. Carefully remove the toasted bread. If using tongs, ensure they are cool enough to handle.

5.2. Defrost Function

This function is ideal for toasting frozen bread without burning it.

1. Place frozen bread into the toasting slots.
2. Select your desired browning level.
3. Press the toast lift lever down until it locks.
4. Press the **Defrost** button. The indicator light for the Defrost function will illuminate. The toaster will automatically adjust the toasting time to first defrost and then toast the bread.
5. The toast will pop up automatically when done.

5.3. Reheat Function

Use this function to warm up already toasted bread without further browning.

1. Place previously toasted bread into the slots.
2. Press the toast lift lever down until it locks.
3. Press the **Reheat** button. The indicator light for the Reheat function will illuminate. The toaster will warm the bread for a short period.
4. The toast will pop up automatically when done.

5.4. Cancel Function

To stop the toasting cycle at any time, simply press the **Cancel** button. The toast lift lever will immediately release, and the toaster will switch off.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

- Always unplug the toaster** from the power outlet and allow it to cool completely before cleaning.
- Crumb Tray:** Pull out the removable crumb tray from the bottom of the toaster. Dispose of the collected crumbs. Wipe the tray with a damp cloth and dry thoroughly before reinserting.
- Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can scratch the stainless steel finish. Dry thoroughly.
- Interior:** Do not attempt to clean the inside of the toaster with sharp objects or by immersing it in water. If food gets stuck, unplug the toaster, allow it to cool, and carefully dislodge it with a non-metallic utensil.
- Storage:** When not in use, store the toaster in a clean, dry place.

7. TROUBLESHOOTING

If you encounter issues with your toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the toaster is securely plugged into a working outlet. Check your circuit breaker.
Bread does not toast evenly.	Uneven bread thickness; first use residue.	Ensure bread slices are of uniform thickness. Run a few empty cycles for first use.
Smoke coming from toaster.	Food stuck inside; crumbs accumulated; first use residue.	Immediately press Cancel and unplug. Allow to cool, then clean crumb tray and remove any stuck food. Ensure good ventilation during first use.
Toast is too light/dark.	Browning control setting is incorrect.	Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast.
Toast lift lever does not stay down.	Toaster not plugged in; internal mechanism issue.	Ensure the toaster is plugged in. If the issue persists, contact customer support.

If the problem persists after attempting these solutions, please contact Girmi customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Girmi
Model Number	TP57 (GTP5706)
Power	750 – 850 W
Voltage	230V

Feature	Detail
Material	Stainless Steel, Metal
Color	Silver
Dimensions (L x W x H)	28 x 17 x 18 cm
Item Weight	1.08 Kilograms
Number of Slots	2
Browning Levels	8
Functions	Defrost, Reheat, Cancel
Automatic Stop	Yes
Special Feature	Non-slip base
Country of Origin	China

9. WARRANTY AND SUPPORT

Girmi products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Girmi website. If you require technical assistance, have questions about your product, or need to report a defect, please contact Girmi customer support through their official channels. Keep your proof of purchase for warranty claims. For further assistance, you may visit the [Girmi brand page on Amazon](#) or the manufacturer's official website.