

[Manuals.plus](#) /

› [NOVOJOY](#) /

› NOVOJOY 10-inch Android Tablet NV-YQ10S User Manual

NOVOJOY NV-YQ10S

NOVOJOY 10-inch Android Tablet NV-YQ10S User Manual

Model: NV-YQ10S | Brand: NOVOJOY

INTRODUCTION

This manual provides detailed instructions for the NOVOJOY 10-inch Android Tablet NV-YQ10S. Please read this guide thoroughly before using your device to ensure proper operation and to maximize its features. Keep this manual for future reference.

WHAT'S IN THE BOX

Verify that all items are present in your package:

- 1 x NOVOJOY 10-inch Android Tablet (6GB RAM + 64GB ROM)
- 1 x Bluetooth Keyboard
- 1 x Wireless Mouse
- 1 x Standable Protective Case
- 1 x Stylus
- 1 x Type-C Cable
- 1 x Charger
- 1 x Screen Protector Film (pre-applied or included)



Android
13.0 OS



6GB RAM
64GB ROM



Quad-Core
2.0Ghz



2+8MP
camera



Wi-Fi 6
2.4G/5G WiFi



1280*800
IPS



Type-C



Bluetooth
5.0



1TB
Card Solt



6000mAh
Battery



Image: The NOVOJOY tablet alongside its complete set of accessories, including the Bluetooth keyboard, wireless mouse, stylus, and protective case.

SETUP

1. Initial Charging

Before first use, fully charge the tablet using the provided Type-C cable and charger. Connect the Type-C cable to the tablet's charging port and the charger to a power outlet. The charging indicator will show the charging status.

2. Powering On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options on the screen.
- **To Restart:** Press and hold the Power button, then select 'Restart' from the options.

3. Initial Android Setup

Upon first power-on, follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, Google account login, and privacy settings. The tablet runs on Android 13 OS.



Image: The tablet screen showing the Android 13 operating system with pre-installed applications and privacy features highlighted.

4. Connecting Bluetooth Accessories (Keyboard & Mouse)

To use the Bluetooth keyboard and wireless mouse:

1. **For Keyboard:** Turn on the keyboard. On your tablet, go to **Settings > Connected devices > Bluetooth**. Turn on Bluetooth and search for available devices. Select the keyboard from the list and follow any pairing instructions.
2. **For Mouse:** The wireless mouse typically uses a USB receiver. Plug the USB receiver into the tablet's USB port (you may need a USB-C to USB-A adapter, not included). The mouse should connect automatically.

Pre installed Android 13 operating system



Android 13

Protect Your Privacy



Privacy

Security & Device Controls



Image: A user operating the NOVOJOY tablet in laptop mode, utilizing the external Bluetooth keyboard for typing.

OPERATING INSTRUCTIONS

1. Basic Navigation

The tablet features a 10.1-inch multi-touch IPS display. Use standard Android gestures:

- **Tap:** Select an item.
- **Swipe:** Scroll through pages or lists.
- **Pinch-to-Zoom:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move icons.

2. Wi-Fi Connectivity

The tablet supports 2.4G/5G-WiFi and WIFI6 standards for fast internet access. To connect:

1. Go to **Settings > Network & internet > Wi-Fi**

2. Turn on Wi-Fi.
3. Select your desired network from the list and enter the password if prompted.

3. Storage Expansion

The tablet comes with 64GB of internal storage and supports expansion up to 1TB using a microSD card. Insert the microSD card into the designated slot on the tablet. You can then manage files and applications on the external storage.

4. Camera Usage

The tablet is equipped with an 8MP rear camera and a 2MP front camera. Open the Camera app to take photos or record videos. Switch between front and rear cameras as needed for video calls or capturing moments.

5. Display Features

The 10.1-inch IPS display offers a resolution of 1280x800 pixels. For comfortable viewing, especially during extended reading, activate the 'Reading Mode' in the display settings to reduce eye strain.

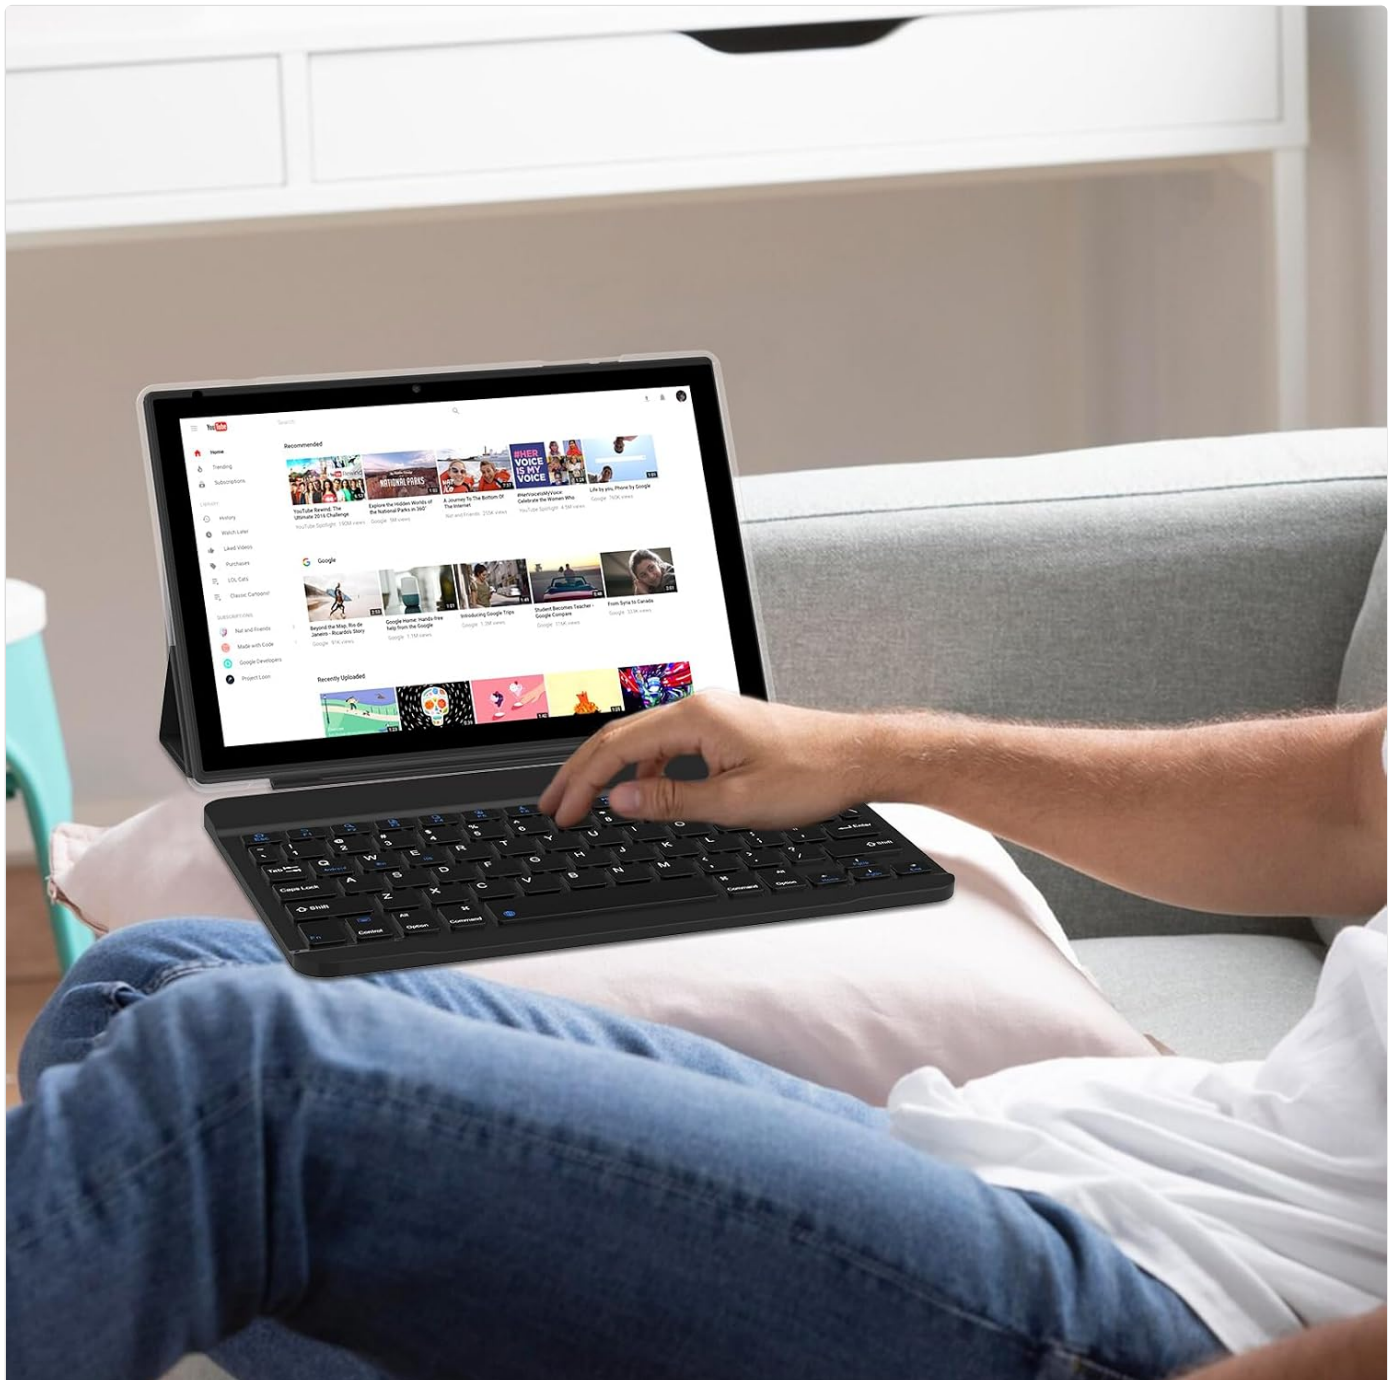


Image: The tablet's 10.1-inch IPS display showcasing a high-definition image, illustrating its visual capabilities.

MAINTENANCE

1. Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials that could damage the surface. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution.

2. Battery Care

- Avoid extreme temperatures, as they can degrade battery life.
- Do not let the battery completely drain frequently.
- Use only the provided charger or a certified compatible charger.

3. Software Updates

Regularly check for and install system updates to ensure optimal performance, security, and access to new features. Go to **Settings > System > System update** to check for updates.

4. Storage Management

Periodically review and delete unnecessary files, apps, and media to free up storage space and maintain tablet speed. You can also move large files to an external microSD card.

TROUBLESHOOTING

If you encounter issues with your NOVOJOY tablet, refer to the following common solutions:

Problem	Possible Solution
Tablet does not power on	Ensure the tablet is charged. Connect it to the charger for at least 30 minutes, then try powering on again. If unresponsive, perform a forced restart by holding the power button for 10-15 seconds.
Wi-Fi connection issues	Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.
Bluetooth accessories not pairing	Ensure Bluetooth is enabled on the tablet and the accessory is in pairing mode. Check battery levels of accessories. Restart both devices and try pairing again. For the mouse, ensure the USB receiver is properly inserted.
Tablet is slow or unresponsive	Close unused applications. Clear cache data. Check for system updates. Free up storage space. If the issue persists, consider a factory reset (back up your data first).
Battery drains quickly	Reduce screen brightness. Close background apps. Disable Wi-Fi/Bluetooth when not in use. Limit location services. Check for apps consuming excessive power in battery settings.

Factory Reset (Last Resort)

If software issues persist, you may need to perform a factory reset.**Warning: This will erase all data on your tablet.**

Back up important data before proceeding. Go to **Settings > System > Reset options > Erase all data (factory reset)** and follow the on-screen instructions.

SPECIFICATIONS

Key technical specifications for the NOVOJOY NV-YQ10S tablet:

Feature	Detail
Brand	NOVOJOY
Model Name	NV-YQ10S
Operating System	Android 13
Processor Speed	2.0 GHz Quad-Core
RAM Memory	6 GB DDR4
Internal Storage	64 GB
Expandable Storage	Up to 1 TB (microSD card)
Screen Size	10.1 Inches
Display Resolution	1280 x 800 Pixels (IPS)
Rear Camera	8 MP
Front Camera	2 MP
Battery Capacity	6000 mAh (Lithium Polymer)
Battery Average Life	Up to 12 Hours
Connectivity	Wi-Fi (2.4G/5G, WIFI6, 802.11ax), Bluetooth 5.0
Ports	1 x USB Type-C
Dimensions (L x W x Thickness)	9.48" x 6.4" x 0.29"
Item Weight	16 ounces

WARRANTY AND SUPPORT

Warranty Information

The NOVOJOY NV-YQ10S tablet comes with a **one-year limited warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or external factors. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, warranty claims, or further inquiries, please contact NOVOJOY customer support through the retailer where you purchased the product or visit the official NOVOJOY website for contact details.

© 2024 NOVOJOY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page
<https://manuals.plus/asin/B0C65YP9QL>
More documents and user manuals: <https://manuals.plus/>