

ADLER EUROPE AD 4494

Adler AD 4494 Milk Frother User Manual

Model: AD 4494 | Brand: ADLER EUROPE

1. INTRODUCTION

Thank you for choosing the Adler AD 4494 Milk Frother. This appliance is designed to effortlessly create creamy milk froth for your favorite coffee beverages like lattes and cappuccinos, as well as heat milk for hot chocolate and other drinks. Please read this manual carefully before first use to ensure safe and optimal operation.

Important Safety Instructions

- Always ensure the frother is placed on a stable, flat, heat-resistant surface.
- Do not immerse the base unit or power cord in water or any other liquid.
- Keep the appliance out of reach of children.
- Do not operate the frother with a damaged cord or plug.
- Unplug the frother from the power outlet when not in use and before cleaning.
- Do not fill above the maximum fill line indicated inside the jug.
- The frother jug becomes hot during operation. Handle with care.

2. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Adler AD 4494 Milk Frother:

- Milk Frother Jug (with non-stick coating)
- Transparent Lid
- Frothing Whisk (spring coil)
- Heating Whisk (no spring coil)
- Power Base
- Cleaning Brush



Image: Exploded view showing the milk frother jug, transparent lid, frothing whisk, and power base.



Image: The Adler AD 4494 Milk Frother assembled on its power base, displaying the control buttons.

3. SETUP

Before First Use

1. Unpack all components and remove any packaging materials.
2. Wash the inside of the milk frother jug, the lid, and the whisks with warm soapy water. Rinse thoroughly and dry. The power base should only be wiped with a damp cloth.
3. Ensure the frother jug is completely dry before placing it on the power base.

Attaching the Whisk

The frother comes with two whisks: one for frothing (with a spring coil) and one for heating (without a spring coil). Choose the appropriate whisk for your desired function.

- To attach, simply place the whisk onto the small shaft at the bottom center of the frother jug. It is held in place magnetically.
- For frothing, use the whisk with the spring coil.
- For heating milk without frothing, use the whisk without the spring coil.



Image: Top-down view inside the frother jug, highlighting the whisk attachment point.



Image: Top-down view inside the frother jug, showing the frothing whisk securely attached.

4. OPERATING INSTRUCTIONS

Ensure the frother is correctly assembled and placed on its power base. Plug the power base into a suitable electrical outlet.

Fill Lines

Inside the frother jug, you will find two fill lines:

- **MAX FROTH:** For frothing milk. Do not exceed this line (approx. 130 ml) to prevent overflow.
- **MAX HEAT:** For heating milk without frothing. Do not exceed this line (approx. 300 ml).

Control Buttons

The control panel features a central power button and indicator lights for different functions:

- **Power Button (Central):** Press once to start, press and hold for cold froth.
- **Hot Froth/Heat Milk Indicator (Cup with steam):** Illuminates when heating and frothing or just heating.
- **Cold Froth Indicator (Snowflake):** Illuminates when performing cold frothing.

Frothing Hot Milk (Latte, Cappuccino)

1. Place the frothing whisk (with spring coil) into the jug.
2. Pour cold milk into the jug, ensuring it does not exceed the 'MAX FROTH' line.
3. Place the lid on the jug.
4. Press the power button once. The frother will start, and the hot froth indicator will light up.
5. The frother will automatically stop when the milk reaches the optimal temperature and froth consistency.
6. Carefully remove the lid and pour the frothed milk into your beverage.



Image: A hand pouring perfectly frothed milk from the Adler AD 4494 into a coffee cup.

Heating Milk (No Froth)

1. Place the heating whisk (without spring coil) into the jug.
2. Pour cold milk into the jug, ensuring it does not exceed the 'MAX HEAT' line.
3. Place the lid on the jug.

- 4. Press the power button once. The frother will start, and the hot froth indicator will light up.
- 5. The frother will automatically stop when the milk reaches the desired temperature.

Cold Frothing

- 1. Place the frothing whisk (with spring coil) into the jug.
- 2. Pour cold milk into the jug, ensuring it does not exceed the 'MAX FROTH' line.
- 3. Place the lid on the jug.
- 4. Press and hold the power button for approximately 2-3 seconds. The cold froth indicator (snowflake icon) will light up.
- 5. The frother will operate for a short period to create cold froth and then automatically stop.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your milk frother.

After Each Use

- 1. Unplug the frother from the power outlet.
- 2. Allow the frother jug to cool down.
- 3. Remove the whisk from the jug.
- 4. Wash the inside of the jug, the lid, and the whisk with warm soapy water using the provided cleaning brush. The non-stick coating makes cleaning easy.
- 5. Rinse thoroughly and dry all parts.
- 6. Wipe the exterior of the frother jug and the power base with a damp cloth. Do not use abrasive cleaners or immerse the power base in water.

Storage

Store the frother in a clean, dry place. You can store the unused whisk magnetically attached to the lid or inside the jug.

6. TROUBLESHOOTING

If you encounter any issues with your Adler AD 4494 Milk Frother, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Frother does not turn on.	Not plugged in; power outage; frother not correctly placed on base.	Check power connection; ensure frother is properly seated on the base.
Milk not frothing or insufficient froth.	Incorrect whisk used; milk level too high/low; type of milk; whisk not attached.	Ensure frothing whisk is used; check milk level (MAX FROTH); use cold, fresh milk (dairy or suitable plant-based); ensure whisk is securely attached.

Problem	Possible Cause	Solution
Milk overflows.	Milk level exceeds MAX FROTH line.	Reduce milk quantity to below the MAX FROTH line.
Milk is not hot enough.	Heating whisk not used; frother stopped prematurely.	Ensure heating whisk is used for heating only; allow cycle to complete automatically.

If the problem persists after trying these solutions, please contact ADLER EUROPE customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	ADLER EUROPE
Model Number	AD 4494
Color	White
Product Dimensions (L x W x H)	16 x 16 x 20.5 cm
Capacity (Frothing)	130 Milliliters
Capacity (Heating)	300 Milliliters
Power	500 Watts
Material	Stainless Steel
Item Weight	905 g
Special Features	Variable froth adjustment, Non-stick coating, Heating function, Cold froth function
Included Components	Cleaning brush, Lid, User manual, Jug
Power Source	Corded Electric

8. WARRANTY AND SUPPORT

The Adler AD 4494 Milk Frother comes with a standard manufacturer's warranty. Please refer to the warranty card included in the product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, spare parts, or any questions not covered in this manual, please contact ADLER EUROPE customer service. Contact information can typically be found on the manufacturer's official website or on the product packaging.

Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question