

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PAWPRO](#) /

› [PAWPRO ALPHA1 Additional Collar User Manual](#)

PAWPRO ALPHA1

PAWPRO ALPHA1 Additional Collar User Manual

Model: ALPHA1

PRODUCT OVERVIEW

The PAWPRO ALPHA1 Additional Collar is designed as a replacement or supplementary collar for your dog training system. It is waterproof and rechargeable, offering three distinct modes: Beep, Vibration, and Boost Vibration. This collar is intended to be used in conjunction with a compatible remote control (not included with this additional collar) to assist in dog training and behavior modification.





Image: PAWPRO ALPHA1 Additional Collar. This image displays the black collar with white reflective stitching, featuring the central control unit with the PAWPRO logo and power button. The collar is shown unbuckled.

PACKAGE CONTENTS

- 1 x PAWPRO ALPHA1 Additional Collar (Black)
- 1 x USB Charging Cable
- 1 x User Manual (this document)

Note: This product is an additional collar and does not include a remote control.

SETUP

1. Charging the Collar

1. Connect the USB charging cable to the charging port on the collar unit.
2. Plug the other end of the USB cable into a standard USB power adapter (not included) or a computer USB port.
3. The indicator light on the collar will show charging status (e.g., red for charging, green for fully charged).
4. Allow approximately 2-3 hours for a full charge.

5. Disconnect the charging cable once fully charged.

2. Pairing with a Remote Control (if applicable)

This additional collar is designed to be paired with a compatible PAWPRO remote control (sold separately). Refer to your remote control's user manual for specific pairing instructions. Typically, the process involves:

- Turning on the collar unit.
- Activating pairing mode on the remote control.
- Pressing a specific button on the collar or remote to initiate pairing.
- Confirmation of successful pairing (e.g., indicator light change).

3. Fitting the Collar

Proper fit is crucial for comfort and effectiveness. The collar should be snug but not too tight. You should be able to fit one or two fingers comfortably between the collar strap and your dog's neck.

- Place the collar around your dog's neck, ensuring the receiver unit is positioned centrally under the chin or on the side of the neck.
- Adjust the strap length using the buckle until a snug fit is achieved.
- Trim any excess strap length if necessary, and use the provided strap keeper to secure the loose end.

OPERATING INSTRUCTIONS

Powering On/Off

- To turn on: Press and hold the power button on the collar unit until the indicator light illuminates.
- To turn off: Press and hold the power button until the indicator light turns off.

Modes of Operation

The PAWPRO ALPHA1 collar supports three training modes, controlled via your paired remote:

- **Beep Mode:** Emits an audible tone. Useful for warning or attention-getting.
- **Vibration Mode:** Delivers a gentle vibration. Effective for non-aversive correction.
- **Boost Vibration Mode:** Provides a stronger vibration. For situations requiring a more noticeable stimulus.

Refer to your remote control's manual for instructions on how to select and activate these modes.

MAINTENANCE

- **Cleaning:** Clean the collar with a damp cloth and dry it thoroughly. Avoid submerging the collar in water or using harsh chemical cleaners.
- **Charging:** Recharge the collar using the provided charger. Follow manufacturer instructions to prevent battery damage.
- **Storage:** When not in use for extended periods, store the collar in a cool, dry place. Ensure it is fully charged before storing and recharge every few months to maintain battery health.
- **Inspection:** Regularly inspect the collar for any signs of wear, damage, or loose components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Collar not turning on.	Battery is depleted.	Charge the collar fully.

Problem	Possible Cause	Solution
Collar not responding to remote.	Not paired or out of range.	Ensure collar is on and charged. Re-pair the collar with the remote. Check remote battery. Ensure you are within the effective range.
Modes (Beep/Vibration) not working.	Collar not properly fitted or unit malfunction.	Adjust collar fit. Ensure contact points are touching the dog's skin (if applicable, though this model seems to be contact-free). If issue persists, contact support.
Collar not holding charge.	Battery degradation or faulty charging cable/port.	Try a different USB charging port or cable. If the issue persists, the battery may need replacement or the unit may be faulty. Contact support.

SPECIFICATIONS

- Model:** ALPHA1
- Brand:** PAWPRO
- Recommended for:** Dogs (All life stages)
- Dimensions:** Approximately 1 x 1 x 0.1 cm (Collar unit); 140 grams (Weight)
- Closure Type:** Buckle
- Color:** Black
- Material:** Nylon
- Modes:** Beep, Vibration, Boost Vibration
- Waterproof:** Yes (Specific IP rating not provided, but stated as "Étanche")
- Rechargeable:** Yes
- Battery:** Internal rechargeable battery (details not specified in input, but implied)

WARRANTY AND SUPPORT

PAWPRO products are designed for durability and performance. For information regarding warranty coverage, please refer to the warranty card included with your original PAWPRO training system or visit the official PAWPRO website.

If you encounter any issues or have questions about your PAWPRO ALPHA1 Additional Collar, please contact PAWPRO customer support. Contact details can typically be found on the product packaging, the official PAWPRO website, or through your point of purchase.

Customer Support: Please refer to the contact information provided with your original purchase or visit the PAWPRO official website for assistance.

© 2024 PAWPRO. All rights reserved.

This manual is for informational purposes only. PAWPRO reserves the right to make changes to product specifications without prior notice.