

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [FurReal](#) /
- › [FurReal My Minis Kitty Interactive Toy Instruction Manual](#)

FurReal 28062-000-2C-006-OPP

FurReal My Minis Kitty Interactive Toy Instruction Manual

Model: 28062-000-2C-006-OPP

INTRODUCTION

This manual provides essential information for the safe and proper use of your FurReal My Minis Kitty Interactive Toy. Please read these instructions carefully before use and retain them for future reference.



Image: FurReal My Minis Kitty interactive toy being held by a child.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x FurReal My Minis Kitty Interactive Toy
- 1 x AA Battery (pre-installed or included separately)

SAFETY INFORMATION

- **Choking Hazard:** This toy may contain small pieces. Not suitable for children under 3 years due to potential choking hazards.
- **Battery Safety:**
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Remove batteries if the toy is not used for a long period.
 - Dispose of used batteries responsibly.

- **Adult Supervision:** Adult supervision is recommended during play, especially for younger children.

SETUP

1. Unboxing

Carefully remove the FurReal My Minis Kitty from its packaging. Ensure all protective materials are discarded properly.

2. Battery Installation

The toy requires 1 AA battery. A battery is typically included and may be pre-installed. If not, locate the battery compartment, usually on the underside of the toy. Use a small screwdriver to open the compartment, insert the AA battery observing the correct polarity (+/-), and securely close the compartment.

Note: Always use fresh batteries. Do not mix old and new batteries, or different types of batteries.

OPERATING INSTRUCTIONS

The FurReal My Minis Kitty is designed for simple interactive play.

Activating Movement

1. Ensure the battery is correctly installed.
2. Gently pet the kitty's back. This action activates its internal mechanism.
3. Observe the kitty's tail wag and head bobble up and down, mimicking a real pet's movements.



Image: Hand petting the back of the interactive kitty to activate movement.

The toy is designed to provide a basic interactive experience through motion. It does not produce sounds.

MAINTENANCE

Cleaning

To clean the toy, gently wipe its surface with a slightly damp cloth. Do not immerse the toy in water or use harsh cleaning agents, as this may damage the electronic components.

Storage

When not in use for extended periods, it is recommended to remove the battery to prevent leakage and potential damage to the toy. Store the toy in a clean, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Toy does not move.	Battery is depleted or incorrectly installed.	Replace with a fresh AA battery, ensuring correct polarity.
Movement is weak or inconsistent.	Battery power is low.	Replace with a fresh AA battery.

SPECIFICATIONS

- **Model Number:** 28062-000-2C-006-OPP
- **Product Dimensions:** 4.5 x 5.5 x 5.5 inches
- **Item Weight:** 5.9 ounces
- **Battery Requirement:** 1 x AA battery (included)
- **Recommended Age:** 4 - 8 years
- **Manufacturer:** Just Play

WARRANTY INFORMATION

Specific warranty details for the FurReal My Minis Kitty Interactive Toy are not provided in this manual. For information regarding warranty coverage, please contact the manufacturer, Just Play, directly or refer to the product packaging for any included warranty cards or documentation.

CUSTOMER SUPPORT

For further assistance, questions, or concerns regarding your FurReal My Minis Kitty Interactive Toy, please contact the manufacturer:

Manufacturer: Just Play

Brand: FurReal

Website: [Visit the FurReal Store on Amazon](#) (for product information)

Please refer to the product packaging for direct contact information such as phone numbers or email addresses.