

[Manuals.plus](#) /

› [ReadyWired](#) /

› ReadyWired Turntable Belt Instruction Manual for Pioneer Turntables

ReadyWired Turntable Belt

ReadyWired Turntable Belt Instruction Manual

For Pioneer PL-2E, PL-33, PL-240, PL-333, MX-40, MX-80, PL-15R, PL-B12, PEB1060, PNR-001
Turntables

INTRODUCTION

This manual provides instructions for the proper installation and maintenance of your ReadyWired Turntable Belt. This replacement belt is designed for 100% compatibility with various Pioneer turntable models, ensuring optimal performance for your audio equipment.

Compatible Pioneer Turntable Models:

- PL-2E
- PL-33
- PL-240
- PL-333
- MX-40
- MX-80
- PL-15R
- PL-B12
- PEB1060
- PNR-001

SAFETY INFORMATION

Always disconnect your turntable from the power source before performing any maintenance or installation. Exercise caution when handling delicate turntable components. Keep small parts away from children.

SETUP AND INSTALLATION

Follow these steps to replace or install your turntable belt:

1. **Prepare the Turntable:** Disconnect the turntable from the power outlet. Remove the platter mat and the turntable platter to expose the motor pulley and the sub-platter (or inner rim of the platter, depending on your model).
2. **Remove Old Belt (if applicable):** Carefully remove the old, worn, or broken belt from the motor pulley and the sub-platter/platter.
3. **Clean Surfaces:** Use a clean, lint-free cloth and isopropyl alcohol to gently clean the motor pulley and the surface where the belt will sit on the sub-platter/platter. This removes any residue that could affect belt grip.
4. **Install New Belt:**



Image: The ReadyWired Turntable Belt, designed for precise fit and optimal performance.

Carefully loop the new ReadyWired turntable belt around the motor pulley. Then, stretch the belt gently around the sub-platter or the inner rim of the main platter. Ensure the belt is seated correctly and is not twisted.

5. **Reassemble:** Place the turntable platter back onto the spindle, ensuring it sits correctly. Replace the platter mat.
6. **Test:** Reconnect the turntable to the power outlet. Test the turntable by selecting a speed and observing if the platter rotates smoothly and at the correct speed.

OPERATING INSTRUCTIONS

Once the belt is installed, operate your turntable according to its original manufacturer's instructions. The ReadyWired belt ensures consistent platter rotation for accurate playback.

MAINTENANCE

To prolong the life of your turntable belt and maintain optimal performance:

- **Regular Cleaning:** Periodically inspect the belt, motor pulley, and platter rim for dust or debris. Clean with a lint-free cloth.
- **Avoid Stretching:** Do not overstretch the belt during installation or handling, as this can reduce its elasticity and lifespan.

- **Storage:** If storing the turntable for an extended period, it is advisable to remove the belt to prevent it from developing flat spots or losing tension.
- **Replacement:** Turntable belts are wear-and-tear items. Replace the belt if you notice a decrease in speed stability, slippage, or if the belt appears cracked or brittle.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Platter not spinning or spinning too slowly	Belt is loose, broken, or improperly installed. Motor pulley or platter rim is dirty.	Check belt installation. Clean motor pulley and platter rim. Replace belt if broken or stretched.
Inconsistent platter speed (wow and flutter)	Belt is worn, stretched, or dirty.	Clean the belt and contact surfaces. Replace the belt if it shows signs of wear or stretching.
Belt keeps slipping off	Belt is too large or improperly seated. Surfaces are oily or dirty.	Ensure correct belt size and proper seating. Clean all contact surfaces thoroughly with isopropyl alcohol.

SPECIFICATIONS

Product Type: Turntable Drive Belt

Brand: ReadyWired

Compatibility: Pioneer PL-2E, PL-33, PL-240, PL-333, MX-40, MX-80, PL-15R, PL-B12, PEB1060, PNR-001

Material: High-quality rubber

Color: Black

Dimensions: *Refer to product packaging for exact belt dimensions if needed.*

UPC: 300746062226

WARRANTY AND SUPPORT

ReadyWired guarantees 100% compatibility for the listed models. For specific warranty information or technical support, please refer to the seller's return policy or contact the ReadyWired customer service directly through their official channels. The seller for this product is River City Electronics.

Note: Turntable belts are consumable items and their lifespan depends on usage and environmental factors.

