

[Manuals.plus](#) /

› [Mastela](#) /

› Mastela Techno Plus Reclining Footrest Chair User Manual

Mastela Techno Plus

Mastela Techno Plus Reclining Footrest Chair User Manual

Model: Techno Plus | Brand: Mastela

1. INTRODUCTION

Thank you for choosing the Mastela Techno Plus Reclining Footrest Chair. This manual provides essential information for the safe and effective use, assembly, operation, and maintenance of your product. Please read it thoroughly before use and keep it for future reference.

2. SAFETY INFORMATION

- Always use the 5-point safety harness to secure your child.
- Never leave your child unattended in the chair.
- Ensure the chair is placed on a flat, stable surface.
- Do not use the chair if any parts are damaged or missing.
- Keep children away from the product during assembly and disassembly.
- Maximum weight capacity: 18 kg. Recommended age: 3 months to 3 years.

3. SETUP AND ASSEMBLY

Follow these steps to assemble your Mastela Techno Plus chair:

1. Unpack all components and ensure all parts are present.
2. Assemble the base frame by connecting the metal tubes securely.
3. Attach the main seat unit to the assembled base, ensuring it clicks into place.

4. Install the canopy and mosquito net by attaching them to the designated points on the seat unit.
5. Insert 4 AA batteries (not included) into the battery compartment or connect the chair using the provided USB cable (power adapter not included).



Figure 1: Assembled Mastela Techno Plus Reclining Footrest Chair.



Figure 2: Side view illustrating the chair's structure and reclining capability.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

Press the power button on the electronic module located at the front of the chair or use the remote control to turn the unit on or off.



Figure 3: Electronic control panel for power, swing, and music functions.

4.2 Reclining Positions

The chair offers 4 reclining positions. Adjust the recline by using the adjustable straps or levers as indicated in the product diagram.



Figure 4: Chair in a more upright position, suitable for active play.

4.3 Automatic Swing Function

The chair features an automatic swing with 5 lateral angles and 3 timer settings (15, 30, and 45 minutes). Use the control panel or remote to select your desired swing speed and timer duration.



Figure 5: The chair gently swinging, providing soothing motion for the baby.

4.4 Music and Connectivity

Enjoy 15 pre-programmed melodies with adjustable volume. You can also connect your device via USB cable or Bluetooth to play personalized playlists. Refer to your device's Bluetooth settings to pair with the chair (device name typically 'swing' or similar).

4.5 Safety Harness

Always secure your child using the 5-point adjustable safety harness. Ensure the straps are snug but not too tight.



Figure 6: A baby safely secured in the chair with the 5-point harness.

4.6 Canopy and Mosquito Net

The chair includes a canopy with an integrated mosquito net to protect your child. Adjust the canopy as needed for shade or privacy.



Figure 7: The chair with its canopy and integrated mosquito net providing protection.

4.7 Removable Toys

Two fun toys are attached to the mobile on the canopy. These toys are removable for cleaning or to allow for other attachments.

Your browser does not support the video tag.

Video 1: Demonstration of the Mastela Techno Plus Reclining Footrest Chair's features, including swing, music, and safety harness. This video shows the product in action, highlighting its various functionalities and ease of use for parents and comfort for babies.

5. MAINTENANCE

- The fabric lining is machine washable. Refer to the care label for specific washing instructions.
- Wipe down the plastic and metal parts with a damp cloth and mild soap. Do not use abrasive cleaners.
- Regularly check all screws, bolts, and fasteners to ensure they are securely tightened.
- Replace batteries when the electronic functions become weak or unresponsive.

6. TROUBLESHOOTING

- **Chair not swinging:** Check if batteries are correctly installed or if the USB cable is properly connected. Ensure the swing function is activated on the control panel or remote.
- **No sound from music:** Verify volume settings on the chair and your connected device. Ensure Bluetooth or USB connection is active.
- **Remote control not working:** Check remote battery. Ensure there are no obstructions between the remote and the chair's sensor.
- **Unstable movement:** Ensure the chair is on a flat, level surface and all assembly connections are secure.

7. SPECIFICATIONS

Feature	Detail
Brand	Mastela
Model	Techno Plus
ASIN	B0C66YNKWV
EAN/GTIN	6946943882096
Recommended Age	3 months - 3 years
Product Dimensions	53 x 85 x 80 cm
Product Weight	5.2 kilograms
Power Source	4 AA batteries (not included) or USB cable (adapter not included)
Reclining Positions	4
Swing Angles	5 lateral angles
Swing Timers	15, 30, 45 minutes
Music	15 melodies, Bluetooth, USB connectivity
Safety Harness	5-point adjustable
Additional Features	Canopy with integrated mosquito net, 2 removable toys, plush headrest, remote control
Composition	PP-POLYPROPYLENE, TPR-THERMOPLASTIC RUBBER, POM-POLYACETAL, ABS-PLASTIC, PVC-POLYVINYL CHLORIDE. METAL STRUCTURE. POLYESTER FABRIC.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Mastela website. Keep your proof of purchase for warranty claims.