

- [Manuals.plus](#) /
- › [Accutime](#) /
 - › Accutime Paw Patrol Kids Digital Watch PAW40084AZ Instruction Manual

Accutime PAW40084AZ

Accutime Paw Patrol Kids Digital Watch Instruction Manual

Model: PAW40084AZ

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Accutime Paw Patrol Kids Digital Watch, model PAW40084AZ. This watch features an LCD digital display, an LED flashing light, and four interchangeable plastic straps. Please read this manual thoroughly to ensure proper use and care of your watch.

PRODUCT OVERVIEW



Image: The Accutime Paw Patrol Kids Digital Watch shown with its main strap attached, alongside three additional interchangeable straps, displaying various Paw Patrol characters and designs.





Image: A close-up view of the watch face, highlighting the digital LCD display and the Paw Patrol character graphics on the watch face background.

Key Features:

- LCD Digital Display
- LED Flashing Light Function
- 4 Interchangeable Plastic Straps
- Easy-to-use Buttons

SETUP

1. Battery Activation

Your watch comes with a pre-installed battery. If the display is not active, check for a small plastic tab in the crown or button area. Remove this tab to activate the battery. If no tab is present and the display is blank, the battery may need replacement.

2. Setting the Time



Image: A side view of the watch, illustrating the position of the control buttons on the casing.

1. Locate the buttons on the side of the watch casing. Typically, there are two buttons: one for 'Mode' or 'Set' and another for 'Adjust'.
2. Press the **Mode/Set** button repeatedly until the time display begins to flash.
3. Use the **Adjust** button to change the flashing digit (hours, then minutes).
4. Press the **Mode/Set** button again to move to the next setting (e.g., minutes, then AM/PM).
5. Once all settings are correct, press the **Mode/Set** button one last time to exit the setting mode.

3. Changing Straps



Image: The watch body is displayed alongside its four distinct interchangeable straps, showcasing the variety of designs.

1. To remove a strap, gently slide the strap away from the watch casing at the connection points. The straps are designed to slide off easily.
2. Select your desired new strap.
3. Align the new strap with the grooves on the watch casing and slide it into place until it clicks securely. Ensure both sides of the strap are firmly attached before wearing.

OPERATING THE WATCH

1. Reading the Time

The time is displayed on the LCD screen in a digital format (e.g., 10:30). The display typically shows hours and minutes, and may

include AM/PM indicators.

2. Activating the LED Flashing Light

Press the designated light button, usually located on the side of the watch casing, to activate the LED flashing light. The light will illuminate for a few seconds and then turn off automatically. Repeated presses may cycle through different light patterns or colors if available, or simply reactivate the light.

MAINTENANCE

Cleaning

To clean your watch, wipe it gently with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no water enters the watch casing. Avoid using harsh chemicals or abrasive materials.

Water Resistance

Important: This watch is **NOT water resistant**. Avoid exposing the watch to water, including rain, splashes, showering, or swimming, as this will cause damage.

Battery Replacement

When the display becomes dim or stops working, the battery may need to be replaced. Battery replacement should ideally be performed by a qualified watch technician to prevent damage to the watch's internal components and to ensure proper sealing. Refer to the warranty section for service information.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be depleted. Replace the battery as described in the Maintenance section. Ensure any plastic battery tabs have been removed.
- **Time is incorrect:** Reset the time following the instructions in the Setup section. If the time consistently loses accuracy, the battery may be low or the watch may require service.
- **LED light is not flashing:** Ensure the battery is not depleted. If the battery is new and the light still does not function, the light mechanism may be faulty and require service.
- **Strap does not attach securely:** Ensure the strap is correctly aligned with the grooves on the watch casing and pushed firmly until it clicks into place. Inspect the strap and watch casing for any obstructions or damage.

SPECIFICATIONS

Model Number	PAW40084AZ
Display Type	LCD Digital
Light Feature	LED Flashing Light
Strap Material	Plastic, Interchangeable
Power Source	Watch Battery (included)
Water Resistance	Not Water Resistant
Minimum Age	3+ years
Manufacturer	Accutime Watch Corp.

WARRANTY AND SUPPORT

Warranty Information

This Accutime Paw Patrol Kids Digital Watch comes with a **One Year Warranty** from Accutime Watch. This warranty covers manufacturing defects from the date of purchase. It does not cover damage caused by misuse, accidents, water exposure, or unauthorized repairs.

Customer Support

For warranty claims or technical assistance, please contact Accutime Watch Corp. customer service. Refer to the product packaging or the official Accutime website for the most current contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0C67FK7ZQ>

More documents and user manuals: <https://manuals.plus/>