

[Manuals.plus](#) /

› [GreenPan](#) /

› GreenPan Elite 8-in-1 Programmable 6QT Electric Slow Cooker User Manual

GreenPan CC007464-001

GreenPan Elite 8-in-1 Programmable 6QT Electric Slow Cooker User Manual

Model: CC007464-001 | Brand: GreenPan

INTRODUCTION

This manual provides instructions for the safe and efficient operation of your GreenPan Elite 8-in-1 Programmable 6QT Electric Slow Cooker. This appliance is designed to facilitate various cooking methods, including slow cooking, searing, sautéing, browning, and steaming, utilizing a healthy ceramic nonstick surface. Please read all instructions carefully before initial use and retain this manual for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

Familiarize yourself with the various parts of your GreenPan Elite Slow Cooker:

- **Main Unit:** The base housing the heating element and control panel.
- **Removable 6QT Hard Anodized Pot:** The cooking vessel with Thermolon™ Volt ceramic nonstick coating.
- **Tempered Glass Lid:** Allows monitoring of cooking progress.
- **Stainless Steel Steamer Basket:** For steaming foods.
- **Control Panel with LCD Display:** For selecting cooking functions and monitoring time/temperature.



The GreenPan Elite 8-in-1 Programmable 6QT Electric Slow Cooker in Oxford Blue, showcasing its main unit, removable pot, and glass lid.



The removable 6-quart hard anodized pot, shown with food, highlighting its capacity and design for family-sized meals.



THE ORIGINAL CERAMIC NONSTICK

WE INVENTED IT. WE MAKE IT BETTER.



AWARD-WINNING NONSTICK
CELEBRATED FOR A LEGACY OF INNOVATION



COOK TOXIN-FREE
FREE OF PFAS, PFOA, LEAD & CADMIUM



GROUNDBREAKING TECHNOLOGY
OVER 150 PATENTS TO MAKE COOKING BETTER

A detailed view of the easy-to-read LCD display and one-touch preset buttons on the control panel.

SETUP

Before First Use

1. Unpack all components and remove any packaging materials.
2. Wash the removable cooking pot, tempered glass lid, and stainless steel steamer basket in warm, soapy water. Rinse thoroughly and dry completely. These parts are also dishwasher safe.
3. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
4. Place the slow cooker on a stable, level, heat-resistant surface, away from walls or other appliances to ensure proper ventilation.
5. Insert the removable cooking pot into the main unit.

OPERATING INSTRUCTIONS

General Operation

1. Ensure the removable pot is correctly seated in the main unit.
2. Add your ingredients to the cooking pot.
3. Place the tempered glass lid on the pot.
4. Plug the power cord into a 120V AC electrical outlet. The LCD display will illuminate.
5. Select your desired cooking function using the one-touch preset buttons.
6. Adjust time and temperature as needed using the '+' and '-' buttons.
7. Press the 'Start/Stop' button to begin cooking.
8. To stop cooking at any time, press the 'Start/Stop' button.

Cooking Functions (8-in-1 Presets)

The GreenPan Elite Slow Cooker offers multiple programmable settings for versatile cooking:

- **Slow Cook:** Ideal for tenderizing meats and melding flavors over extended periods. Choose between High or Low settings.
- **Sauté/Brown:** Allows you to sear meats and vegetables directly in the cooking pot before slow cooking, enhancing flavor and texture.
- **Steam:** Use with the included stainless steel steamer basket for healthy steaming of vegetables, dumplings, or seafood.
- **Simmer/Buffer:** Maintains food at a warm, gentle simmer, suitable for serving or keeping dishes warm.
- **Proof:** Provides a controlled warm environment for rising dough.
- **Bake:** For baking certain dishes that benefit from a moist, even heat.
- **Reheat:** Gently warms previously cooked food without overcooking.
- **High:** A higher temperature setting for faster cooking or bringing liquids to a boil.
- **Low:** A lower temperature setting for slower cooking over a longer duration.
- **Warm:** Automatically switches to this setting after most cooking cycles to keep food at a serving temperature.



Visual representation of the eight primary cooking modes, each with an example of a prepared dish.

Using the Sauté/Brown Function

The in-pot browning feature allows you to sear ingredients directly in the slow cooker, eliminating the need for an extra pan.

1. Select the 'Sauté/Brown' function.
2. Allow the pot to preheat for a few minutes.
3. Add a small amount of cooking oil if desired.
4. Place ingredients into the hot pot and sear until browned to your preference.
5. Once browning is complete, you can switch to another cooking function (e.g., Slow Cook) without transferring ingredients.

REMOVABLE 6QT HARD ANODIZED POT



PERFECT FOR FAMILY-SIZED MEALS

HEATS QUICKLY & EVENLY FOR POWERFUL PERFORMANCE

Illustration of the in-pot browning feature, showing meat being seared directly in the removable cooking pot.

CARE AND MAINTENANCE

Proper care ensures the longevity and performance of your slow cooker.

Cleaning

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. **Removable Pot, Lid, and Steamer Basket:** These components are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Avoid harsh scouring pads or abrasive cleaners, as they can damage the nonstick coating.
3. **Main Unit:** Wipe the exterior with a damp cloth. Do not immerse the main unit in water or any other liquid. Ensure the control panel is dry before plugging in.
4. For stubborn food residue in the cooking pot, fill it with warm, soapy water and let it soak for a period before cleaning.

EASY TO CLEAN & DISHWASHER SAFE



MAKES CLEANUP SIMPLE

THE REMOVABLE POT IS DISHWASHER SAFE AND WIPES CLEAN

The removable cooking pot being rinsed under a faucet, demonstrating its ease of cleaning and dishwasher-safe design.

Storage

Store the slow cooker in a dry place. Ensure all parts are clean and dry before storage. The lid can be inverted and placed inside the pot for compact storage.

TROUBLESHOOTING

If you encounter issues with your slow cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance not switched on.	Ensure the power cord is securely plugged into a working outlet. Press the 'Start/Stop' button.
Food is not cooking properly.	Incorrect function selected; lid not properly sealed; insufficient cooking time/temperature.	Verify the correct cooking function and settings. Ensure the lid is securely in place. Adjust cooking time or temperature as needed.
Nonstick coating appears damaged.	Use of abrasive utensils or cleaners.	Always use non-abrasive utensils (silicone, wood, plastic) and soft sponges for cleaning. The Thermolon™ Volt coating is durable but can be scratched by sharp metal objects.

Problem	Possible Cause	Solution
Display shows an error code.	Internal malfunction or sensor issue.	Unplug the appliance, wait 5 minutes, then plug it back in. If the error persists, contact customer support.

If the problem persists after attempting these solutions, please contact GreenPan customer support for assistance.

SPECIFICATIONS

Feature	Detail
Brand	GreenPan
Model Number	CC007464-001
Color	Oxford Blue
Material	Healthy Ceramic Nonstick (Thermolon™ Volt), PFAS-Free
Product Dimensions	11.81"D x 22.13"W x 16.1"H
Capacity	6 Quarts
Wattage	1350 Watts
Voltage	120 Volts
Dishwasher Safe Parts	Pot, Lid, Steamer Basket
Control Method	Touch
Control Type	Programmable
Item Weight	21.1 pounds
UPC	885837037333, 885837037319

WARRANTY AND SUPPORT

GreenPan products are manufactured to high-quality standards and are covered by a limited warranty. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your product or visit the official GreenPan website. For technical support, replacement parts, or any other inquiries, please contact GreenPan customer service through their official channels.

You can find more information and contact details on the [GreenPan Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C67HH52J>

More documents and user manuals: <https://manuals.plus/>