

[Manuals.plus](#) /

› [MOMYEASY](#) /

› MOMYEASY Fast 2-Minute Baby Bottle Warmer Instruction Manual

MOMYEASY 9301

MOMYEASY Fast 2-Minute Baby Bottle Warmer Instruction Manual

Model: 9301

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the MOMYEASY Baby Bottle Warmer. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the voltage of your power outlet matches the voltage specified on the appliance. Do not immerse the appliance, cord, or plug in water or other liquids. Unplug from the outlet when not in use and before cleaning.
- **Hot Surfaces:** The heating plate and surrounding areas will become hot during operation. Avoid contact with hot surfaces. Always use the anti-scald basket to remove bottles or food jars.
- **Water Usage:** Use only distilled or purified water to prevent mineral buildup. Do not overfill the water reservoir. Ensure water level is appropriate for the selected function.
- **Supervision:** This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used near children.
- **Auto Shut-Off:** The warmer is equipped with an auto shut-off function for safety. It will turn off automatically once the set time is complete or if irregularities are detected.
- **Damage:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.

2. PRODUCT OVERVIEW

The MOMYEASY Baby Bottle Warmer is designed for rapid and gentle heating of breastmilk, formula, and baby food. It features multiple functions to ensure your baby's meals are prepared safely and efficiently.



Image: The MOMY EASY Fast 2-Minute Baby Bottle Warmer, a compact device with a digital display and control buttons.

Key Features:

- **Rapid Heating:** Warms bottles in approximately 2-5 minutes using steam heating.

- **Universal Compatibility:** Designed to fit various bottle types and sizes, including standard plastic and glass bottles.
- **Gentle Steam Heating:** Preserves nutrients by evenly warming milk and food without creating hot spots.
- **Precise Temperature Control & Timer:** Allows setting exact temperatures and warming durations for consistent results.
- **Multi-functional:** Includes modes for fast warming, gentle defrosting (breastmilk thawing), food heating, steaming, and 24-hour keep warm.
- **Auto Shut-Off:** Enhances safety by automatically turning off the unit after the cycle or in case of irregularities.
- **BPA Free Material:** Constructed from safe, BPA-free materials.

3. SETUP AND FIRST USE

Unpacking:

1. Carefully remove all components from the packaging.
2. Check for any damage during transit. If damaged, do not use and contact customer support.
3. Retain packaging for future storage or transport.

Initial Cleaning:

1. Wipe the main unit with a damp cloth. Do not immerse the unit in water.
2. Wash the anti-scald basket and bottle cover with warm soapy water, then rinse thoroughly and air dry.

Placement:

- Place the warmer on a stable, flat, heat-resistant surface, away from children and pets.
- Ensure adequate ventilation around the unit.

4. OPERATING INSTRUCTIONS

The MOMYEASY Bottle Warmer offers several modes for different warming needs. Always ensure the unit is plugged into a suitable power outlet before operation.

Warms Bottles in 2-5 Minutes

Calm Your Baby Instantly!



Image: A parent feeding a baby with a bottle warmed by the MOMYEASY device, highlighting its quick warming capability.

Control Panel:

The control panel features a digital display and buttons for mode selection, temperature adjustment, and timer settings.

- **MODE Button:** Cycles through different functions (Fast, Milk, Food, Steam).
- **+/- Buttons:** Adjusts temperature or time settings.
- **Power Button:** Turns the unit on/off.

Operating Modes:

1. Fast Warming (Milk):

- Place the bottle with milk into the anti-scald basket, then place the basket into the warmer.
- Add approximately 40ml (1.4oz) of water into the water reservoir around the bottle.
- Press the MODE button until 'Fast' or 'Milk' is selected on the display.
- Adjust the target temperature using the +/- buttons (e.g., 37°C / 98.6°F for body temperature).
- The warmer will start heating. It typically takes 2-5 minutes depending on the initial temperature and volume.
- Once complete, the unit will beep and auto shut-off. Carefully remove the bottle using the basket handle.
- Always test the milk temperature on your wrist before feeding.



Reference chart only for Fast Warming Function					
Material	Initial Temp	Add Water	Milk Volume (Mins)		
			50-120ml (2-4Oz)	120-180ml (4-6Oz)	180-240ml (6-8Oz)
GLASS	5°C/41°F	460ml/ (1.4Oz)	3.2	3.4	3.6
	10°C/50°F		2.2	2.4	2.6
	20°C/68°F		2	2.2	2.4
PLASTIC	5°C/41°F		3.6	4	4.4
	10°C/50°F		3	3.6	4
	20°C/68°F		2.4	2.6	2.8
MILK BAG	5°C/41°F		2.2	2.4	2.6
	10°C/50°F		2	2.2	2.4
	20°C/68°F		1.2	1.4	1.6

Image: A reference chart detailing warming times for glass, plastic, and milk bags based on initial temperature and milk volume for the Fast Warming function.

2. Gentle Defrosting (Breastmilk Thawing):

- Place the frozen breastmilk bag or bottle into the anti-scald basket.
- Add water to the reservoir, ensuring it covers the milk level.
- Select the 'Milk' mode and adjust the temperature to a lower setting suitable for thawing (e.g., 30-35°C).
- The gentle water bath method helps preserve nutrients.
- Monitor the thawing process. Once thawed, proceed with warming if needed.

One-Touch Nutrient-Safe Thawing

Preserve Essential Proteins, Vitamins & Antibodies

Ease of use



Quality



Cleanliness



Image: A hand placing a breastmilk storage bag into the warmer for nutrient-safe thawing.

3. Food Heating:

- Place the baby food jar or container into the anti-scald basket.
- Add water to the reservoir, ensuring it reaches the level of the food.
- Select the 'Food' mode and set the desired temperature.

- Stir the food occasionally during heating to ensure even temperature.
- Always test the food temperature before feeding your baby.

All-in-One: Heat Bottles, Purees & Snacks

Gentle Steam Heating – Preserve Nutrients, No Hot Spots



Image: The MOMYEASY warmer heating a jar of baby food, demonstrating its versatility for purees and snacks.

4. Steaming:

- This mode can be used for sterilizing small items like pacifiers or bottle nipples.

- Place items to be steamed into the anti-scald basket.
- Add approximately 160ml (5.4oz) of water to the reservoir.
- Select the 'Steam' mode. The unit will generate high-temperature steam.
- Use caution when opening the lid after steaming as hot steam will escape.

Powered by High-Temperature Steam Technology



Image: A close-up view of the warmer generating steam, illustrating its high-temperature steam technology for sterilization.

5. 24-Hour Keep Warm:

- After warming, the unit can maintain a set temperature for up to 24 hours.
- Select the 'Milk' mode and set the desired temperature. The warmer will hold this temperature.
- This function is ideal for keeping water warm for formula preparation or maintaining breastmilk at a ready-to-feed temperature.

24-Hour Gentle Warmth & Effortless

Promotes Baby's Peaceful Sleep



Baby's Peaceful Sleep



Restful Mums



Smarter Choice



Image: The MOMYEASY warmer maintaining a bottle's warmth for 24 hours, promoting peaceful sleep for both baby and parents.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your bottle warmer and ensure hygienic operation.

Daily Cleaning:

1. Always unplug the unit and allow it to cool completely before cleaning.
2. Empty any remaining water from the reservoir.
3. Wipe the exterior of the unit with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
4. Wash the anti-scald basket and bottle cover with warm, soapy water and rinse thoroughly.

Descaling (Monthly or as needed):

Mineral deposits (limescale) can build up on the heating plate, especially with hard water. Descale regularly to maintain efficiency.

1. Mix 50ml (1.7oz) of white vinegar with 100ml (3.4oz) of cold water.
2. Pour the solution into the water reservoir.
3. Allow the solution to soak for 30 minutes to 1 hour, or until the limescale dissolves. For stubborn deposits, you can briefly turn on the steam function for 5 minutes.
4. Pour out the solution and rinse the reservoir thoroughly with clean water several times.
5. Wipe the heating plate with a damp cloth to remove any remaining residue.

6. TROUBLESHOOTING

If you encounter issues with your bottle warmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Warmer does not turn on.	Not plugged in; power outlet issue; unit malfunction.	Check power connection. Try a different outlet. If still not working, contact customer support.
Milk/Food not warming.	Insufficient water; incorrect mode/temperature setting; limescale buildup.	Ensure adequate water level. Verify mode and temperature settings. Descale the unit if necessary.
Error Code 'E3' displayed.	Overheating; low water level; sensor issue.	Unplug the unit and let it cool down. Check water level and refill if low. If the error persists, contact customer support.
Warming takes too long.	Limescale buildup; initial temperature of milk/food too low; large volume.	Perform descaling. Ensure sufficient water. Refer to the warming chart for estimated times.

If the problem persists after trying these solutions, please contact MOMYEASY customer support.

7. SPECIFICATIONS

- **Model Number:** 9301
- **Package Dimensions:** 10.04 x 5.04 x 4.92 inches
- **Item Weight:** 1.68 pounds
- **Material:** BPA Free
- **Target Gender:** Unisex
- **Additional Features:** 24H Keep Warm, Auto Shut-off, Baby Food Warming, Bottle High-Temperature Dry, Breastmilk Thawing
- **Batteries Required:** No

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact MOMYEASY customer service. Details can typically be found on the product packaging or the official MOMYEASY website.

When contacting support, please have your model number (9301) and purchase date available.

© 2026 MOMYEASY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C691MHD6>

More documents and user manuals: <https://manuals.plus/>