

RVC46588GR, RVC51732BK

Generic Replacement Remote Control User Manual

For Kalorik Robot Vacuum Cleaners RVC46588GR, RVC51732BK

1. INTRODUCTION

This document provides operational guidelines and important information for the Generic replacement infrared remote control designed for use with specific Kalorik Robot Vacuum Cleaner models. This remote control is intended to function as a direct replacement for your original unit, offering essential control over your robot vacuum.

2. COMPATIBILITY

This replacement remote control is compatible with the following Kalorik Robot Vacuum Cleaner models:

- Kalorik RVC46588GR
- Kalorik RVC51732BK

Please ensure your robot vacuum cleaner model is listed above for proper functionality. This remote operates via infrared (IR) technology and does not require any programming or pairing.

3. SETUP: BATTERY INSTALLATION

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Gently slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating battery insertion.



Image: Back of the remote control with the battery compartment closed after battery installation.

4. OPERATING INSTRUCTIONS

Point the remote control directly at the robot vacuum cleaner's infrared receiver. Ensure there are no obstructions between the remote and the vacuum. The remote control features several buttons for different functions:

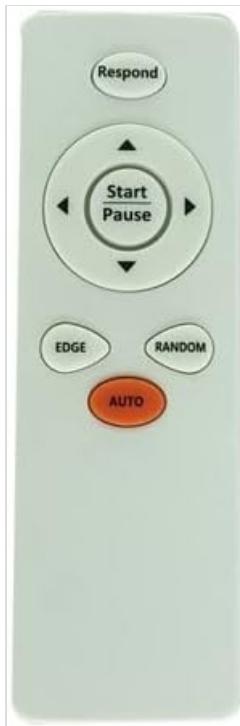


Image: Front view of the remote control with labeled buttons.

- **Respond:** Activates a response from the vacuum, typically to locate it or confirm a command.
- **Start/Pause:** Press to initiate a cleaning cycle or pause an ongoing one.
- **Directional Arrows (Up, Down, Left, Right):** Used to manually steer the robot vacuum cleaner.
- **Edge:** Commands the vacuum to clean along the edges of rooms.
- **Random:** Initiates a random cleaning pattern.
- **AUTO (Orange Button):** Starts the vacuum in its default automatic cleaning mode.

5. TROUBLESHOOTING

If the remote control is not functioning as expected, consider the following:

- **Check Batteries:** Ensure the AAA batteries are correctly installed with the proper polarity and are not depleted. Replace them if necessary.
- **Line of Sight:** Verify that there is a clear line of sight between the remote control and the robot vacuum cleaner. Infrared signals can be blocked by objects.
- **Vacuum Power:** Confirm that the robot vacuum cleaner is powered on and has sufficient battery charge.
- **Compatibility:** Double-check that your robot vacuum cleaner model is listed as compatible with this remote control.

6. SPECIFICATIONS

- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Compatible Devices:** Kalorik RVC46588GR, RVC51732BK Robot Vacuum Cleaners

7. WARRANTY AND SUPPORT

For any issues not resolved by the troubleshooting steps or for further assistance, please contact the seller or manufacturer through your purchase platform. Specific warranty details may vary and are typically provided at the point of purchase.

This manual is for informational purposes only. All product names, logos, and brands are property of their respective owners.