



[Manuals.plus](#) /

› [TURPOW](#) /

› TURPOW Wireless Controller User Manual

TURPOW B0C69GHTQL

TURPOW Wireless Controller User Manual

Model: B0C69GHTQL

1. INTRODUCTION

Thank you for choosing the TURPOW Wireless Controller. This manual provides detailed instructions on how to set up, operate, and maintain your controller. This controller is designed for a seamless gaming experience across multiple platforms.



Image: The TURPOW Wireless Controller in red, showcasing its design and button layout.

2. PRODUCT FEATURES

- **Wide Compatibility:** Supports PS4, PS4 Pro, PS4 Slim, and PC. Compatible with PS5 for PS4 games.
- **Stable Wireless Connection:** Utilizes Bluetooth 4.2 for a stable connection up to 10 meters (33 feet) without delays or interruptions.
- **Multi-colored RGB Buttons:** Features changeable RGB lighting for buttons with 8 different color modes.
- **Long Battery Life:** Built-in 1000mAh rechargeable battery provides 12-15 hours of playtime on a 2-3 hour charge.
- **Immersive Gaming Experience:** Equipped with dual-motor vibration and a sensitive 6-axis motion sensor for realistic feedback.
- **Integrated Touchpad:** Responsive touchpad for enhanced control in compatible games.
- **3.5mm Audio Jack:** Allows connection of a headset for immersive audio (headset function supported with wired connection).
- **Ergonomic Design:** Crafted from sweat-resistant and anti-slip materials, conforming to the palm's structure for comfortable extended use.
- **Turbo Function:** Provides rapid-fire capability for specific buttons.

- **Share Button:** Easily share gameplay moments, screenshots, or live streams.



Image: Illustration highlighting the dual-vibration and sensitive 6-axis motion sensing capabilities of the controller.

3. PACKAGE CONTENTS

Upon opening your TURPOW Wireless Controller package, you should find the following items:

- 1 x TURPOW Wireless Controller
- 1 x User Manual
- 1 x Type-C Charging Cable

4. PRODUCT LAYOUT

Familiarize yourself with the various buttons and components of your TURPOW Wireless Controller:



Image: Detailed diagram labeling the various parts of the TURPOW Wireless Controller, including joysticks, buttons, and ports.

- **Left Joystick:** For directional control.
- **Right Joystick:** For camera control or aiming.
- **D-Pad:** Directional Pad for precise movements.
- **Action Buttons (Triangle, Circle, Cross, Square):** Primary interaction buttons.
- **SHARE Button (T/SHARE):** For sharing content and activating Turbo function.
- **OPTIONS Button:** Access in-game menus or options.
- **Touch Pad:** Multi-touch pad for various in-game interactions.
- **Speaker:** Integrated speaker for in-game audio cues.
- **EXT Charging Port:** For charging accessories.
- **3.5mm Stereo Port:** For connecting headphones or headsets.
- **Home Button:** Returns to the system menu.
- **Light Bar:** Indicates player number and status.
- **TYPE-C Charging Jack:** For charging the controller.
- **R1/R2 Buttons:** Right shoulder and trigger buttons.

- **L1/L2 Buttons:** Left shoulder and trigger buttons.

5. SETUP

5.1 Initial Connection

For the first time connection, you must activate the controller using the provided USB Type-C cable. Connect the controller to your PS4/PC via the USB cable. Once connected, the system will recognize the controller.

5.2 Wireless Pairing

After the initial wired connection, the controller should be paired wirelessly via Bluetooth. Ensure Bluetooth is enabled on your device (PS4/PC). The controller will automatically attempt to connect wirelessly once disconnected from the cable, or you may need to press the Home button to initiate pairing.



Image: The controller shown with icons indicating compatibility with P4/P4 Pro/Slim, Steam, iPad/Phone/Android/iOS, and PC.

6. OPERATING INSTRUCTIONS

6.1 Basic Controls

Use the joysticks for movement and camera control, the D-Pad for precise directional input, and the action buttons for in-game interactions. The Touch Pad can be used for specific game functions.

6.2 RGB Lighting Adjustment

To change the color of the multi-colored RGB buttons:

1. Press and hold the **L3 + R3** buttons simultaneously for 3 seconds. The controller will vibrate for 1 second, indicating that the light color can now be changed.
2. Briefly press the **L3** button to cycle through the available colors.
3. Press the **R3** button to confirm your desired color.

Available colors include: Multicolor, Blue, Red, Green, Pink, Orange, Cyan, Purple.



Image: Visual representation of the multi-colored button lighting feature, showing different color options.

6.3 Turbo Function

To activate the Turbo function for rapid-fire input:

- Hold down the **T/SHARE** key.
- While holding T/SHARE, press any function key (e.g., X, Square, R1, etc.) that you wish to apply the

Turbo function to. The selected function key will now have Turbo functionality.

6.4 Share/Screenshot Function

To quickly share your gameplay or take a screenshot:

- Short press the **T/SHARE** button. This will allow you to upload videos, screenshots, or live streams to social platforms without interrupting your game session.



Image: Depiction of the Turbo function and the Share/Screenshot button, showing social media icons for sharing.

6.5 Audio Jack Usage

Plug your compatible headset into the 3.5mm stereo port on the controller to immerse yourself fully in the game's audio. Note that the headset function is supported when the controller is connected via a wired connection.

7. CHARGING

The TURPOW Wireless Controller features a built-in 1000mAh rechargeable battery. To charge your controller:

- Connect the provided Type-C charging cable to the controller's TYPE-C Charging Jack and the other end to a USB power source (e.g., PS4 console, PC, or USB wall adapter).
- A full charge typically takes 2-3 hours.
- Once fully charged, the controller provides approximately 12-15 hours of gameplay.
- To prolong battery life, it is recommended to turn off the controller when not in use.

BUILT-IN 1000MAH RECHARGEABLE BATTERY



Working time	Charging time	Wireless Distance
12-15 Hours	2-3 Hours	10 M / 33 FT

Image: Graphic illustrating the 1000mAh built-in rechargeable battery, showing working time, charging time, and wireless distance.

8. MAINTENANCE

To ensure the longevity and optimal performance of your TURPOW Wireless Controller, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the controller regularly. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.

- **Handling:** Avoid dropping the controller or subjecting it to strong impacts, as this can damage internal components.
- **Charging:** Do not overcharge the battery. Disconnect the charger once the battery is full.

9. TROUBLESHOOTING

If you encounter issues with your TURPOW Wireless Controller, try the following troubleshooting steps:

- **Controller Not Connecting/Pairing:**
 - Ensure the controller is charged.
 - Perform the initial wired connection again to re-activate the device.
 - Check if Bluetooth is enabled on your console/PC.
 - Try resetting the controller (locate a small reset button on the back, usually near the L2 button, and press it with a thin object like a paperclip).
- **Buttons/Joysticks Unresponsive:**
 - Ensure the controller is properly connected.
 - Restart your console/PC and the controller.
 - Check for any physical obstructions or debris around the buttons/joysticks.
- **Charging Issues:**
 - Verify that the Type-C charging cable is securely connected to both the controller and the power source.
 - Try a different USB port or power adapter.
 - Ensure the charging cable is not damaged.
- **Audio Jack Not Working:**
 - Ensure the controller is connected via a wired connection for headset function support.
 - Check if your headset is properly plugged in and functioning correctly.
 - Verify audio settings on your console/PC.

10. SPECIFICATIONS

Feature	Specification
Brand	TURPOW
Model	B0C69GHTQL
Color	Red
Special Features	Ergonomic, Vibration, Motion Sensor, Wireless, Touchpad
Battery Composition	Lithium-polymer
Battery Capacity	1000mAh
Charging Time	2-3 hours

Working Time	12-15 hours
Wireless Range	Up to 10 meters (33 feet)

11. WARRANTY AND SUPPORT

For any warranty claims, technical support, or further inquiries regarding your TURPOW Wireless Controller, please contact the manufacturer directly. Refer to the product packaging or the official TURPOW website for contact information.