

## Hisense H23MOBSD1H

# Hisense H23MOBSD1H Microwave Oven User Manual

Model: H23MOBSD1H

## 1. INTRODUCTION

---

Thank you for purchasing the Hisense H23MOBSD1H Microwave Oven. This manual provides essential information for the safe and efficient operation of your appliance. Please read these instructions thoroughly before use and retain them for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Ensure the appliance is properly grounded.
- Do not immerse the cord or plug in water.
- Always ensure the turntable and roller ring are correctly positioned before operation.

## 3. PRODUCT OVERVIEW

---

The Hisense H23MOBSD1H is a 23-liter capacity microwave oven designed for countertop use. It features 800W power, touch controls, and various cooking functions.



**Figure 3.1:** Front view of the Hisense H23MOBSD1H Microwave Oven. This image displays the black exterior, the glass door, the digital display, and the touch control panel with a central rotary knob.

### 3.1 Components

- **Door:** Features a handle for opening and closing.
- **Viewing Window:** Allows observation of food during cooking.
- **Control Panel:** Digital display and touch buttons for setting functions.
- **Turntable Ring:** Supports the glass turntable.
- **Glass Turntable:** Ensures even cooking by rotating food.
- **Oven Cavity:** Interior cooking space, made of stainless steel.
- **Door Safety Lock System:** Prevents operation when the door is open.

### 3.2 Control Panel

The control panel features a digital display and various touch-sensitive buttons and a rotary knob for setting time, power, and selecting programs. Refer to the appliance itself for specific button labels and their functions.

## 4. SETUP AND INSTALLATION

---

### 4.1 Unpacking

Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.

### 4.2 Placement

- Place the oven on a flat, stable surface strong enough to hold its weight.
- Ensure adequate ventilation. Leave a minimum of 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on both sides.
- Do not block air vents.

- Keep the oven away from heat sources and strong magnetic fields.

## 4.3 Electrical Connection

Plug the power cord into a standard grounded electrical outlet. Ensure the voltage and frequency match the specifications on the appliance rating label.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Setting the Clock

Upon first power-up or after a power interruption, the display will show "0:00". Follow the instructions in your specific model's detailed manual to set the 12-hour or 24-hour clock.

### 5.2 Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Press the "Microwave" or "Power Level" button.
4. Use the rotary knob or number pads to select the desired power level (e.g., P100 for 100% power, P80 for 80% power).
5. Use the rotary knob or number pads to set the cooking time.
6. Press the "Start" button to begin cooking.

### 5.3 Defrost Function

The oven offers an automatic defrost function for various food types.

1. Place the frozen food on the turntable.
2. Press the "Defrost" button.
3. Select the defrost mode (e.g., by weight or time) using the rotary knob or specific buttons.
4. Enter the weight or time as required.
5. Press "Start". The oven may pause during defrosting to allow you to turn or separate the food.

### 5.4 Automatic Programs

This microwave oven includes 9 automatic programs for convenient cooking of popular foods. Refer to your appliance's specific program list for details on each setting.

1. Place food in the oven.
2. Press the "Auto Menu" or "Program" button.
3. Use the rotary knob to select the desired program number.
4. Press "Start".

### 5.5 Timer Function

The timer can be used independently of cooking functions to set a countdown. Press the "Timer" button, set the desired time, and press "Start".

## 6. CLEANING AND MAINTENANCE

---

Regular cleaning helps maintain the performance and longevity of your microwave oven.

- **Oven Interior:** Clean the cavity after each use with a damp cloth and mild detergent. For stubborn stains, boil a cup of water with lemon juice inside the oven for a few minutes to loosen residue.
- **Exterior:** Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners.
- **Door and Seals:** Clean the door, door seals, and adjacent parts carefully with a damp cloth to remove any spills or splatters.
- **Turntable and Roller Ring:** These can be removed and washed in warm soapy water or in a dishwasher. Ensure they are dry before placing them back in the oven.
- **Power Cord:** Regularly inspect the power cord for any damage.

## 7. TROUBLESHOOTING

---

| Problem                | Possible Cause   | Solution   |
|------------------------|--|--|
| Oven will not start    | Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.        | Ensure plug is securely in outlet; Close door firmly; Check household fuse or reset circuit breaker. |
| Food not heating       | Incorrect cooking time/power level set; Door not closed properly; Food not suitable for microwave. | Adjust time/power; Close door firmly; Use microwave-safe dishes.                                     |
| Sparking inside oven   | Metal or foil in oven; Dish not microwave-safe; Food splatters.                                    | Remove all metal objects; Use only microwave-safe dishes; Clean oven interior.                       |
| Turntable not rotating | Turntable not correctly placed; Roller ring dirty or damaged; Motor malfunction.                   | Reposition turntable and roller ring; Clean roller ring; Contact service if issue persists.          |

If the problem persists after attempting these solutions, please contact customer service.

## 8. SPECIFICATIONS

---

|                               |                     |
|-------------------------------|---------------------|
| <b>Model Number</b>           | H23MOBSD1H          |
| <b>Brand</b>                  | Hisense             |
| <b>Capacity</b>               | 23 Litres           |
| <b>Microwave Power Output</b> | 800 Watts           |
| <b>Dimensions (L x W x H)</b> | 33.7 x 48 x 29.5 cm |
| <b>Weight</b>                 | 13 kg               |
| <b>Installation Type</b>      | Countertop          |
| <b>Interior Material</b>      | Stainless Steel     |
| <b>Color</b>                  | Black               |
| <b>Special Feature</b>        | Timer               |
| <b>Cooking Mode</b>           | Radiant             |
| <b>Defrost Type</b>           | Automatic Defrost   |

## 9. WARRANTY AND SUPPORT

---

For warranty information, please refer to the warranty card included with your product or visit the official Hisense website. For technical support or service inquiries, please contact Hisense customer service through their official channels.

Keep your purchase receipt as proof of purchase for warranty claims.