

Hisense H23MOBSD1HG

Hisense H23MOBSD1HG Microwave Oven with Grill User Manual

Model: H23MOBSD1HG

1. INTRODUCTION

Thank you for purchasing the Hisense H23MOBSD1HG Microwave Oven with Grill. This manual provides important information regarding the installation, operation, and maintenance of your appliance. Please read it thoroughly before use and keep it for future reference.

Important Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not use corrosive chemicals or vapors in this appliance.

2. PRODUCT OVERVIEW

Components and Controls



Front view of the Hisense H23MOBSD1HG Microwave Oven, showing the door, control panel with digital display, and rotary knob.

- **Oven Door:** Features a handle for opening and closing.
- **Control Panel:** Digital display, function buttons, and rotary knob for setting time and power.
- **Turntable:** Glass tray that rotates to ensure even cooking.
- **Grill Rack:** Used for grilling functions (included).
- **Oven Cavity:** Interior space where food is placed.

Control Panel Functions

- **Digital Display:** Shows time, power level, and program indicators.
- **Power Level Button:** Selects microwave power levels (e.g., 100%, 80%, 50%).
- **Grill Button:** Activates the grill function.
- **Defrost Button:** Selects defrost by weight or time.
- **Pre-set Program Buttons:** Accesses 9 automatic cooking programs.
- **Rotary Knob:** Adjusts cooking time, weight, or selects programs.
- **Start Button:** Begins the cooking process.
- **Stop/Cancel Button:** Stops cooking or clears settings.

3. SETUP

Unpacking

- Remove all packaging materials from the oven cavity and accessories.
- Inspect the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.

Placement

- Place the oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it.
- Ensure adequate ventilation. Leave a minimum of 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side.

- Keep the oven away from heat sources, steam, or splashing liquids.

Electrical Connection

Plug the power cord into a standard grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating label of the oven.

4. OPERATING INSTRUCTIONS

Basic Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the oven door securely.
3. Press the 'Power Level' button repeatedly to select the desired power level (e.g., P100 for 800W).
4. Use the rotary knob to set the cooking time (up to 60 minutes).
5. Press the 'Start' button to begin cooking.

Grill Function

1. Place food on the grill rack (if applicable) or a heat-resistant dish.
2. Press the 'Grill' button.
3. Use the rotary knob to set the grilling time.
4. Press the 'Start' button.

Defrost Mode

The oven offers defrosting by weight or by time.

1. Place the frozen food on the turntable.
2. Press the 'Defrost' button.
3. Use the rotary knob to select defrost by weight or time, and adjust the value accordingly.
4. Press the 'Start' button.

Pre-set Programs

This microwave features 9 pre-set automatic cooking programs for common food items. Refer to the internal label or a quick guide for specific program details and recommended food types.

Setting the Timer

The oven has a 60-minute timer. To set a cooking time, use the rotary knob after selecting a power level or function. The timer will count down on the digital display.

5. MAINTENANCE AND CLEANING

General Cleaning

- **Oven Interior:** Wipe the cavity after each use with a damp cloth. For stubborn stains, use a mild detergent. Avoid abrasive cleaners.
- **Oven Exterior:** Clean the exterior with a soft, damp cloth. Do not allow water to enter the ventilation openings.
- **Turntable and Roller Ring:** Wash the glass turntable and roller ring in warm soapy water or in the dishwasher.

Ensure they are dry before placing them back in the oven.

Odor Removal

To remove odors from the oven, combine a cup of water with the juice and peel of one lemon in a microwave-safe bowl. Microwave on high power for 5-7 minutes. Allow to cool, then wipe the interior with a soft cloth.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is secure; Close door firmly; Check household fuse/circuit breaker.
No heat from oven	Door not closed properly; Incorrect cooking time/power set.	Close door firmly; Re-enter correct cooking time and power level.
Light not working	Bulb is faulty.	Contact qualified service personnel for replacement.
Turntable makes noise	Turntable or roller ring not positioned correctly; Debris under turntable.	Reposition turntable and roller ring; Clean under the turntable.

7. SPECIFICATIONS

Feature	Specification
Model Number	H23MOBSD1HG
Capacity	23 Liters
Microwave Power Output	800 Watt
Grill Power Output	1000 Watt
Product Dimensions (D x W x H)	33.7 x 48 x 29.5 cm
Item Weight	11.7 Kilograms
Material	Stainless Steel
Color	Black
Timer	60 Minutes
Number of Programs	9
Special Features	Turntable, Timer, Grill function, Programmable, Defrost
Included Components	Grill Rack

8. WARRANTY AND SUPPORT

Your Hisense H23MOBSD1HG Microwave Oven is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, troubleshooting beyond this manual, or to inquire about warranty service, please contact Hisense customer support. Contact information can typically be found on the Hisense official website or on your product's packaging.

When contacting support, please have your model number (H23MOBSD1HG) and serial number ready to expedite the service process.