

[Manuals.plus](#) /

› [Teverun](#) /

› Teverun Fighter Eleven Electric Scooter User Manual

Teverun Fighter Eleven

Teverun Fighter Eleven Electric Scooter

USER MANUAL

Introduction

Thank you for choosing the Teverun Fighter Eleven Electric Scooter. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new electric scooter. Please read this manual thoroughly before your first ride to ensure optimal performance and safety.



The Teverun Fighter Eleven Electric Scooter, showcasing its robust design and foldable stem.

Safety Information

Your safety is paramount. Always adhere to local laws and regulations regarding electric scooter usage. Failure to follow these guidelines may result in serious injury or property damage.

- **Wear a Helmet:** Always wear a certified helmet and other protective gear (knee pads, elbow pads) when riding.
- **Pre-Ride Check:** Before each ride, check tire pressure, brake function, and ensure all quick releases and fasteners are secure.
- **Riding Conditions:** Avoid riding in wet conditions, heavy rain, or on slippery surfaces. Do not ride at night without proper lighting.
- **Weight Limit:** Do not exceed the maximum load capacity of 150 kg.
- **Age Restriction:** This scooter is intended for adults.
- **Public Roads:** Be aware of and comply with all local traffic laws and regulations, especially regarding speed limits (e.g., 20 km/h restricted speed).



Image illustrating compliance with micro-mobility regulations, emphasizing the importance of adhering to legal standards for electric scooters.

Components Overview

Familiarize yourself with the main components of your Teverun Fighter Eleven scooter:

- **Handlebars:** Equipped with grips, brake levers, throttle, and control buttons.
- **Display:** Large color display showing speed, battery level, and other vital information.
- **NFC Start Function:** For secure and convenient scooter activation.
- **Folding Mechanism:** Allows for compact storage and transport.
- **Deck:** The platform where you stand, housing the battery.
- **Wheels & Tires:** 11-inch tubeless tires for improved ride comfort and puncture resistance.
- **Suspension:** Full suspension system for a smooth ride over varied terrain.
- **Brakes:** Front and rear disc brakes for reliable stopping power.
- **Motor:** Powerful 500W motor (single or dual motor function available).
- **Lights:** Integrated front and rear lights for visibility.



Close-up of the scooter's large color display, showing speed and battery status.



Detail of the NFC start function, allowing for keyless activation of the scooter.



View of the robust front suspension system, designed for shock absorption.



Detail of the rear wheel and suspension, highlighting the full suspension system.




The scooter's deck, featuring the Teverun Fighter branding and a non-slip surface.

Setup

Your Teverun Fighter Eleven scooter comes mostly assembled. Follow these steps for initial setup:

1. **Unpacking:** Carefully remove the scooter and all accessories from the packaging. Ensure the power charger and user manual are present.
2. **Unfolding the Scooter:**
 - Place the scooter on a flat surface.
 - Locate the folding mechanism latch near the base of the stem.
 - Release the latch and carefully lift the handlebar stem until it locks into the upright position. Ensure it clicks securely.
 - Tighten any safety clamps or levers associated with the folding mechanism.
3. **Handlebar Adjustment:** Adjust the handlebars to a comfortable height and tighten the quick-release clamp.
4. **Initial Charge:** Before first use, fully charge the scooter's battery. Connect the charger to the charging port and then to a power outlet. The indicator light on the charger will change when fully charged.
5. **Tire Pressure:** Check and adjust tire pressure to the recommended PSI/Bar as indicated on the tire sidewall or in the specifications section.

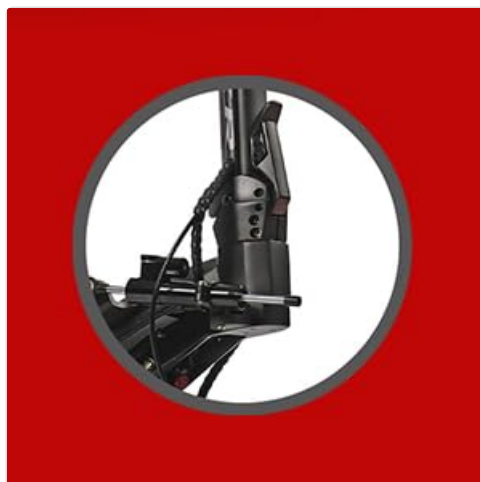

Close-up of the scooter's folding mechanism, crucial for compact storage and transport.

Operating

Learn how to operate your Teverun Fighter Eleven scooter safely and efficiently.

- **Starting the Scooter:**
 - Turn on the scooter using the power button.
 - Use the NFC key to activate the scooter by tapping it on the NFC reader.
- **Display Functions:** The color display provides real-time information. Navigate through modes and settings using the control buttons on the handlebars.
- **Riding:**
 - Place one foot firmly on the deck and push off with the other foot to gain initial momentum.
 - Gently press the throttle to engage the motor.
 - Maintain balance and steer by leaning and turning the handlebars.
- **Braking:** Use the brake levers on the handlebars to slow down or stop. Apply both brakes smoothly for controlled stopping.
- **Folding for Storage:** To fold the scooter, reverse the unfolding steps. Ensure the stem is securely latched in the folded position.



A close-up of the scooter's display during operation, showing speed and other metrics.

Maintenance

Regular maintenance ensures the longevity and safe operation of your scooter.

- **Cleaning:** Wipe the scooter with a damp cloth. Do not use high-pressure water or immerse the scooter in water.
- **Battery Care:**
 - Charge the battery regularly, even if not in use, to maintain its health.
 - Avoid completely draining the battery.
 - Store the scooter in a cool, dry place away from direct sunlight.
- **Tire Maintenance:** Regularly check tire pressure and inspect for wear or damage. Replace worn tires promptly.
- **Brake Adjustment:** If brakes feel loose or unresponsive, have them adjusted by a qualified technician.
- **Fasteners:** Periodically check all screws and bolts to ensure they are tight.

Troubleshooting

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
Scooter does not turn on.	Low battery; Power button not pressed correctly; NFC key not detected.	Charge the battery; Press power button firmly; Tap NFC key on reader.
Reduced range.	Low tire pressure; Cold weather; Frequent uphill riding; Aggressive acceleration.	Inflate tires to recommended pressure; Ride in moderate conditions; Adjust riding style.
Brakes feel weak.	Brake pads worn; Brake cable loose.	Inspect and replace brake pads; Have brakes adjusted by a technician.
Unusual noises during ride.	Loose components; Debris in wheels/brakes.	Check all fasteners; Inspect wheels and brakes for obstructions.

Specifications

Detailed technical specifications for the Teverun Fighter Eleven Electric Scooter:

Feature	Specification
Model Name	Fighter Eleven
Motor Power	500 W (Dual or Single Motor Function)
Restricted Speed	20 km/h (due to restriction)
Max Range	Up to 80 km (single motor)
Tire Size	11 Inch Tubeless Tires
Brake Type	Front and Rear Disc Brakes
Suspension	Full Suspension
Frame Material	Aluminum
Max Load Capacity	150 Kilograms
Product Dimensions	135 x 65 x 128 cm (unfolded); 35 Kilograms
Included Components	Power Charger, User Manual
Special Features	Non-Slip Deck, Lights, Wide Platform, Foldable

Elektroroller

FIGHTER ELEVEN

T

TEVERUN

by New Walkings

Akkuleistung

25 Ah - 1500 Wh

Akkulaufzeit

80 km

Höchstgeschwindigkeit

85 km/h

(auf Privatgrund)

Motorleistung

2 x 500 W

Begrenzte Geschwindigkeit

20 km/h

(Werkseinstellung)

An overview of key specifications for the Teverun Fighter Eleven, including battery capacity, motor power, range, and speed.

Warranty and Support

For warranty information, please refer to the specific terms and conditions provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

If you encounter issues not covered in this manual or require professional assistance, please contact Teverun customer support or your authorized service center. Always use genuine replacement parts to ensure safety and performance.

This product includes a power charger and this user manual. Please retain this manual for future reference.

© 2024 Teverun. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

