

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ayybboo](#) /

› [Ayybboo Kids Digital Watch Instruction Manual](#)

Ayybboo Ayy2206

Ayybboo Kids Digital Watch Instruction Manual

Model: Ayy2206

PRODUCT OVERVIEW

The Ayybboo Kids Digital Watch, model Ayy2206, is designed for children aged 4 to 12 years. Featuring a charming cat design and available in multiple colors, this watch helps children learn to tell time and develop a sense of punctuality. It is built with durable materials and offers several useful functions.



Image: Ayybboo Kids Digital Watch, showcasing its design and multiple color options.

Key Features:

- **Durable Construction:** High-quality resin strap and case, stainless steel back for shock resistance.
- **3 ATM Water Resistance:** Suitable for daily use like hand washing, face washing, and light rain. *Not suitable for hot water, sauna, or diving.*
- **Seven-Color Backlight:** Illuminates the display for clear visibility in the dark, engaging children with various light colors.
- **Multi-functional:** Includes stopwatch, alarm, 12/24-hour system, and hourly chime.
- **Comfortable Fit:** Soft, skin-friendly strap with an adjustable stainless steel buckle.

SETUP AND INITIAL USE

Button Functions:

- **LIGHT:** Activates the backlight.
- **MODE:** Cycles through different modes (Time, Stopwatch, Alarm).
- **RESET:** Used for resetting stopwatch or adjusting settings.
- **START:** Used for starting stopwatch or confirming settings.



Image: Overview of watch functions and button labels.

Setting Time and Date:

1. From the normal time display, press the **MODE** button three times to enter time setting mode. The seconds will start flashing.
2. Press **RESET** to reset seconds to 00.
3. Press **START** to move to the next setting (hours).

4. Press **RESET** to adjust the flashing digit (hours, minutes, month, date, day of week).
5. Continue pressing **START** to cycle through hours, minutes, month, date, and day of the week.
6. Press **MODE** to exit setting mode and return to normal time display.

12/24-Hour Format:

In time setting mode (seconds flashing), press **RESET** while the hour is flashing to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

OPERATING INSTRUCTIONS

Using the Backlight:

Press the **LIGHT** button to illuminate the display with one of the seven available colors. The light will stay on for a few seconds.

Using the Stopwatch:

1. From the normal time display, press **MODE** once to enter stopwatch mode. The display will show 00:00:00.
2. Press **START** to begin timing.
3. Press **START** again to pause timing.
4. Press **RESET** to reset the stopwatch to 00:00:00.
5. Press **MODE** to exit stopwatch mode.

Setting the Alarm:

1. From the normal time display, press **MODE** twice to enter alarm setting mode. The hour digits will flash.
2. Press **RESET** to adjust the hour.
3. Press **START** to move to the minute setting.
4. Press **RESET** to adjust the minutes.
5. Press **MODE** to exit alarm setting mode.

Activating/Deactivating Alarm and Hourly Chime:

In alarm setting mode, press **RESET** to toggle the alarm ON/OFF. An alarm icon will appear/disappear. Press **START** to toggle the hourly chime ON/OFF. A chime icon will appear/disappear.

MAINTENANCE AND CARE

Proper care will ensure the longevity of your Ayybboo Kids Digital Watch.

Water Resistance (3 ATM):

- The watch is designed to withstand splashes, hand washing, face washing, and light rain.
- **Important:** Do not press any buttons while the watch is submerged in water.
- **Avoid:** Hot water, saunas, diving, or prolonged submersion. Exposure to hot water or steam can damage the waterproof seals.



Image: Demonstrating the watch's 30M water resistance for daily activities.

Cleaning:

Wipe the watch clean with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.

Battery:

The watch uses a Lithium-ion battery (included). Battery replacement should ideally be performed by a qualified technician to maintain water resistance.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Display is blank or dim.	Battery may be low or depleted. Contact support for battery replacement.
Time is incorrect.	Time needs to be reset. Follow the "Setting Time and Date" instructions.
Alarm does not sound.	Ensure the alarm function is activated (alarm icon visible on display). Check alarm time setting.
Water inside the watch.	The watch's water resistance limits may have been exceeded (e.g., pressing buttons underwater, exposure to hot water). Discontinue use and contact support.

SPECIFICATIONS

Feature	Detail
Model Number	Ayy2206
Brand	Ayybboo
Age Range	5-13 years (as per product description)
Material	Resin case and strap, Stainless steel back
Water Resistance	3 ATM (30 meters)
Dial Diameter	3.5 cm (1.37 inches)
Dial Thickness	1.3 cm (0.5 inches)
Strap Length	22.5 cm (8.85 inches)
Strap Width	1.5 cm (0.59 inches)
Max Wrist Circumference	19.5 cm
Min Wrist Circumference	14.3 cm
Weight	26 g (0.92 oz)
Battery Type	1 Lithium-ion (included)



Image: Detailed dimensions of the Ayybboo Kids Digital Watch.

WARRANTY AND SUPPORT

Ayybboo is committed to customer satisfaction. The product comes with a quality assurance.

- **Return Policy:** 90 days unconditional refund.
- **Customer Service:** If you have any questions about the product, please contact us. We aim to respond within 24 hours to provide a solution.

For support, please refer to the contact information provided with your purchase or visit the official Ayybboo website.

<p>Thank you for purchasing from us. If you have any issue with your order, feel free to contact us via email: homecare@gmail.com</p> <p>Instruction Manual</p>  <p>Settings: Please take account of the information above if your watch is fitted with a screwed crown. Turn the crown clockwise until it reaches the 12 position and turn it in either direction until the desired time is displayed. When you done the time setting, push the crown back to its original position. (seconds hand is unable to adjust).</p>	<p>Ayybboo Kids Watch Instruction Manual</p> <p>Instruction manual for the Ayybboo Kids Watch, covering time setting, maintenance, water resistance, and warranty information. Learn how to care for and operate your child's watch.</p>
 <p>Manuale di Istruzioni Orologio Ayybboo per Bambini</p> <p>Guida completa per l'uso e la manutenzione dell'orologio digitale Ayybboo per bambini, con istruzioni dettagliate su impostazioni, funzioni e cura.</p>	
<p>Thank you for purchasing from us. If you have any issue with your order, feel free to contact us via email: homecare@gmail.com</p> <p>Instruction Manual</p>  <p>Settings: Please take account of the information above if your watch is fitted with a screwed crown. Turn the crown clockwise until it reaches the 12 position and turn it in either direction until the desired time is displayed. When you done the time setting, push the crown back to its original position. (seconds hand is unable to adjust).</p>	<p>Ayybboo Kids Watch Instruction Manual</p> <p>Instruction manual for the Ayybboo Kids Watch, covering time setting, maintenance, water resistance, and warranty information. Learn how to care for and operate your child's watch.</p>
 <p>Manuale di Istruzioni Orologio Ayybboo per Bambini</p> <p>Guida completa per l'uso e la manutenzione dell'orologio digitale Ayybboo per bambini, con istruzioni dettagliate su impostazioni, funzioni e cura.</p>	